

GENERAL DYNAMICS

COMMUNICATIONS TEST EQUIPMENT

R2600 Series Communications System Analyzer

OPERATOR'S MANUAL

GENERAL DYNAMICS DECISION SYSTEMS

Communications Test Equipment
8201 E. McDowell Rd.
Scottsdale, Arizona
85257

COPYRIGHT © 1996 - 2004 GENERAL DYNAMICS
ALL RIGHTS RESERVED
Printed in U.S.A.

68-P30700C001 Rev. J

This Page Intentionally Left Blank

Table of Contents

<u>Topic</u>	<u>Page</u>
LIMITED WARRANTY	xiii
SOFTWARE LICENSE AGREEMENT	xiv
SERVICE LOCATIONS	xv

Section 1 INTRODUCTION

<u>Topic</u>	<u>Page</u>
1-1 SCOPE OF MANUAL	1
1-1 VERWENDUNGSZWECK.....	2
1-2 SAFETY SUMMARY.....	1
1-2.1 Grounding the Analyzer.....	1
1-2.2 Unit is Live When Plugged In	1
1-2.3 Keep Away From Live Circuits.....	1
1-2.4 Explosive Atmosphere	3
1-2 SICHERHEITSHINWEISE.....	2
1-2.1 Funkmeßplatz erden	2
1-2.2 Das Gerät steht auch in ausgeschaltetem Zustand unter Spannung.....	2
1-2.3 Vorsicht vor spannungsführenden Teilen!	2
1-2.4 Betrieb in einer explosionsgefährdeten Umgebung	4
1-3 WARNINGS AND CAUTIONS.....	3
1-3.1 Analyzer Operating Voltage.....	3
1-3.2 DC Power Source.....	3
1-3.3 Maximum DVM Input Voltages	3
1-3.4 Replacement Fuses.....	5
1-3.5 Other Cautions	7
1-3.6 Replacement and Disposal of Batteries.....	7
1-3.7 User Maintenance	7

Table of Contents (CONT)

Section 1 INTRODUCTION (CONT)

<u>Topic</u>	<u>Page</u>
1-3 GEFAHRENHINWEISE	4
1-3.1 Betriebsspannung	4
1-3.2 Betrieb mit Gleichspannung	4
1-3.3 Maximale Eingangsspannung des Digitalvoltmeters	4
1-3.4 Ersatz von Sicherungen	6
1-3.5 Sonstige Vorsichtsmaßnahmen	8
1-3.6 Ersatz und Entsorgung von Akkus	8
1-3.7 Reinigung	8
1-4 SERVICE	7
1-4 KUNDENDIENST	8
1-5 REPLACEMENT PARTS ORDERS	7
1-5 ERSATZTEIL BESTELLUNGEN	8
1-6 INSTALLATION	7
1-6.1 Packing	7
1-6.2 Initial Set-up	7
1-6.3 Battery Pack Operation	9
1-6.4 Battery Pack Installation	11
1-6 INSTALLATION	8
1-6.1 Verpackung	8
1-6.2 Erste Inbetriebnahme	8
1-6.3 Betrieb mit Akkusatz	10
1-6.4 Installation des Akkusatzes	12

Table of Contents (CONT)

Section 2 DESCRIPTION

<u>Topic</u>	<u>Page</u>
2-1 DESCRIPTION	13
2-2 OPERATOR CONTROLS.....	13
2-2.1 Keys & Indicators.....	13
2-2.2 Knobs.....	17
2-2.3 DISPLAY	17
2-2.4 Connectors	17
2-2.4.1 Front Panel Connectors	17
2-2.4.2 Side Panel Connectors.....	18
2-2.4.3 Back Panel Connectors	18
2-3 BOTTOM CONTROLS.....	18

Table of Contents (CONT)

Section 3 OPERATING INSTRUCTIONS

<u>Topic</u>	<u>Page</u>
3-1 GENERAL.....	19
3-2 BASIC OPERATION.....	19
3-2.1 Remote Operation.....	19
3-2.2 Expanded Display	21
3-2.2.1 Spectrum Analyzer, Scope Waveforms or Bargraph Display.....	21
3-2.2.2 Display Tables	21
3-2.2.3 Dedicated Keys.....	21
3-3 HELP	21
3-4 WARNINGS.....	23
3-5 PRIMARY OPERATING MODES.....	24
3-5.1 MONITOR Mode.....	24
3-5.1.1 Phase Modulation.....	25
3-5.2 GENERATE Mode.....	26
3-5.3 DUPLEX Mode	28
3-5.4 SWEEP GENERATE Mode.....	30
3-5.5 TRACKING GENERATOR Mode (if equipped).....	32
3-6 AUDIO/MODULATION SYNTHESIZER.....	34
3-6.1 Fixed 1 kHz	34
3-6.2 Synth.....	34
3-6.3 DTMF	38
3-6.4 External.....	38
3-7 METER AND DISPLAY	38
3-7.1 Meter	38
3-7.1.1 RF Display.....	38
3-7.1.2 RF Scan.....	40
3-7.1.3 AC/DC Voltmeter.....	41
3-7.1.4 INT DIST/EXT DIST Meter	43

Table of Contents (CONT)

Section 3 OPERATING INSTRUCTIONS (CONT)

<u>Topic</u>	<u>Page</u>
3-7.1.5 SINAD Meter	43
3-7.1.6 Counter and Decoding Functions	43
3-7.1.7 CABLE FAULT (if equipped)	45
3-7.1.8 GENERAL SEQ DECODE.....	46
3-7.1.9 Preset Scan (if equipped).....	47
3-7.2 Display.....	49
3-7.2.1 Spectrum Analyzer.....	49
3-7.2.2 Modulation Scope	52
3-7.2.3 EXT'L SCOPE.....	55
3-7.2.4 SWEEP GENERATE.....	55
3-7.2.5 Bar Graphs.....	55
3-7.2.6 Tracking Generator (if equipped)	57
3-8 OTHER FUNCTIONS.....	57
3-8.1 Audio Monitor	57
3-8.2 Calibration	57
3-8.3 Print Function	57
3-8.4 Special Functions Menu	58
3-8.4.1 Special Function Selection	60
3-8.5 Memory Screens	60
3-8.6 Test Setups (if equipped).....	62

Table of Contents (CONT)

Section 4 APPLICATIONS

<u>Topic</u>	<u>Page</u>
4-1 BASIC FM TRANSMITTER TESTING	64
4-1.1 Basic FM Transmitter Testing Setup	65
4-1.2 Transmit Power, Frequency, and Frequency Deviation Measurements	65
4-1.3 Modulation Measurements.....	66
4-1.4 Off-The-Air Measurements	68
4-2 BASIC FM RECEIVER TESTING	69
4-2.1 Basic FM Receiver Testing Setup.....	70
4-2.2 Receiver Distortion Measurement	71
4-2.3 SINAD Measurement	71
4-2.4 Modulation Acceptance Bandwidth	72
4-2.5 Receiver Sensitivity Testing (20 dB Quieting).....	73
4-2.6 Squelch Sensitivity Test	74
4-3 CABLE TESTING (if equipped).....	76
4-3.1 Overview.....	76
4-3.2 Measuring Fault Distance.....	76
4-4 TONE REMOTE TESTING.....	79
4-4.1 Tone Remote Testing Setup	80
4-4.2 Checking for Proper Tone Remote Operation.....	80
4-5 Analyzer Setup for Printing.....	81

APPENDICES

<u>Topic</u>	<u>Page</u>
Appendix A	
LIST OF ABBREVIATIONS.....	A-1
Appendix B	
TONE AND CODE SPECIFICATIONS.....	B-1
Appendix C	
SAFE HANDLING OF CMOS INTEGRATED CIRCUIT DEVICES.....	C-1
Appendix D	
EXTERNAL PORT PIN ASSIGNMENTS	D-1

List of Figures

	<u>Page</u>
Figure 1-1. 115 VAC/230 VAC Selection Switch	9
Abb. 1-1. Spannungswähler für 115 / 220 VAC	10
Figure 1-2. Battery Pack Installation.....	11
Abb. 1-2. Installation des Akkusatzes	12
Figure 2-1. Front Panel Controls, Indicators, and Connectors	14
Figure 2-2. Side, Rear, and Bottom Panels	15
Figure 3-1. Screen Zone Arrangement.....	20
Figure 3-2. System Help	22
Figure 3-3. RF Overtemperature Warning Message.....	23
Figure 3-4. Monitor Mode.....	24
Figure 3-5. Phase Modulation	26
Figure 3-6. Generate Mode.....	26
Figure 3-7. Duplex Mode.....	28
Figure 3-8. Sweep Generator Mode.....	30
Figure 3-9. Tracking Generator Mode	32
Figure 3-10. PL Format Selection	35
Figure 3-11. General Sequence Mode Select.....	37
Figure 3-12. RF Display Zone	39
Figure 3-13. RF Control Zone; Scan Mode.....	40
Figure 3-14. Digital Voltmeter Screens	42
Figure 3-15. Frequency Counter	44
Figure 3-16. Cable Fault Screen	45
Figure 3-17. Preset Scan	47
Figure 3-18. Spectrum Analyzer.....	49
Figure 3-19. Spectrum Analyzer Markers (Option).....	51
Figure 3-20. Modulation Scope	52
Figure 3-21. Modulation Scope Markers (Option)	54
Figure 3-22. Bar Graphs	56
Figure 3-23. Special Functions Menu	58
Figure 3-24. Memory Screens	61

List of Figures (CONT)

	<u>Page</u>
Figure 3-25. Memory Screen with Full Test Setups Option	63
Figure 4-1. Basic FM Transmitter Testing Setup	64
Figure 4-2. Basic FM Receiver Testing Setup	69
Figure 4-3. Basic Cable Testing Setup	76
Figure 4-4. Tone Remote Testing Setup	79
Figure D-1. Rear Panel DC Input Port	D-2

List of Tables

	<u>Page</u>
Table 1. Operator Replaceable Fuses.....	5
Table 2. Internal Fuses.....	5
Tabelle 1. Sicherungen, die vom Benutzer gewechselt werden können	6
Tabelle 2. Interne Sicherungen	6
Table B-1. Standard DTMF TONES	B-1
Table B-2. DTMF Frequency Coding*	B-1
Table B-3. Private-Line (PL) Codes	B-2
Table B-4. 5/6 Tone Paging Tones	B-4
Table B-5. DPL Standard Codes	B-4
Table B-6. Select V Frequencies	B-5

GENERAL DYNAMICS TEST EQUIPMENT PRODUCTS LIMITED WARRANTY

(EXCLUDES EXPORT SHIPMENTS)

General Dynamics Test Equipment Products (herein the "product") that are manufactured or distributed by General Dynamics Communications Test Equipment within General Dynamics Decision Systems (herein General Dynamics) are warranted by General Dynamics for a period of one (1) year from date of shipment against defects in material and workmanship. This express limited warranty is extended to the original purchaser (herein the "Licensee") only and applies only to such defects that: (1) produce repeatable failures resulting in product lock-ups or power downs rendering the product inoperable, or (2) cause the product to perform outside of General Dynamics-published specifications.

In the event of such a defect during the period of warranty, the Licensee may return the product, transportation prepaid, to Motorola Test Equipment Service Center, 2216 Galvin Drive, Elgin IL 60123. The Licensee must include written notice specifying the nature of the defect and proof of purchase and evidence of the date of shipment (dated packing list or invoice). General Dynamics, at its option, will either repair or replace the product. If General Dynamics elects to repair a defective product by replacing a module or subassembly, General Dynamics, at its option, may replace such defective module or subassembly with a new or reconditioned replacement. This **Limited Warranty** is not extended beyond one year from original date of shipment if General Dynamics repairs a product. Transportation charges for the return of the product will be paid by General Dynamics.

This **Limited Warranty** is void if General Dynamics determines:

- (1) The product has not been operated in accordance with the procedures in the operating instructions; or
- (2) The seals on non-user serviceable components or modules are broken; or
- (3) The product has been subject to misuse, abuse, damage, accident, negligence, attempted repair or alteration.

General Dynamics does not warrant that the product will meet Licensee's requirements or that the operation of the product will be uninterrupted or error free.

No other warranties, whether express, implied or statutory, including implied warranties or merchantability or fitness for particular purpose, are granted to Licensee, or to licensee's transferees, customers, or users of the product.

In no event shall General Dynamics be liable for any special, incidental, or consequential damages arising from this agreement or use of the product.

SOFTWARE LICENSE AGREEMENT

PLEASE READ THIS LICENSE AGREEMENT CAREFULLY BEFORE USING THE SOFTWARE. BY USING THE SOFTWARE, YOU AGREE TO THE TERMS OF THIS LICENSE. IF YOU DO NOT AGREE, PROMPTLY RETURN THE HARDWARE AND SOFTWARE FOR A REFUND.

1. LICENSE GRANT: Subject to acceptance of these terms, General Dynamics Decision Systems, Inc. grants to End User (LICENSEE) a non-exclusive license to use this software (SOFTWARE) and documentation with the accompanying hardware.

2. OWNERSHIP: This is not a sale of the software. General Dynamics Decision Systems, Inc. and or its licensors retain ownership of the software including all patent, copyrights, and other intellectual property rights.

LICENSEE may transfer the original SOFTWARE and DOCUMENTATION to another with the sale of the Test Set so long as the customer agrees in writing to be bound by the terms of this agreement and Licensee provides a copy to Licensor.

LICENSEE agrees not to copy, decompile, disassemble, reverse engineer, modify, rent, lease, or create derivative works of SOFTWARE. SOFTWARE may not be transmitted electronically or accessed over a network.

LICENSEE agrees that it will not in any form, export, re-export, resell, ship, or divert or cause to be exported, re-exported, resold, shipped, or diverted, directly or indirectly, the SOFTWARE and DOCUMENTATION to any country where the United States or LICENSEE'S government or any agency thereof at the time of export or re-export requires an export license or other government approval without first obtaining such license or approval.

3. SCOPE OF USE: Licensee may only use this SOFTWARE on the Test Equipment in which it is embedded. This license will terminate automatically if LICENSEE fails to comply with any term of the license.

4. LIMITED WARRANTY: General Dynamics Decision Systems warrants that under normal use, SOFTWARE and hardware shall perform the functions specified in its DOCUMENTATION. If SOFTWARE does not conform to its DOCUMENTATION such that its functional performance is significantly affected and LICENSOR is notified in writing within ninety (90) days from the date of purchase along with a copy of the receipt of purchase, General Dynamics Decision Systems shall have the option of refunding the purchase price or replacing the SOFTWARE as LICENSEE'S exclusive remedy.

5. LIABILITY: THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES WHETHER STATUTORY, EXPRESS, OR IMPLIED (INCLUDING ALL WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE). NEITHER OR ITS LICENSOR (S) SHALL BE LIABLE FOR INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES.

6. By using the SOFTWARE, LICENSEE acknowledges that this agreement has been read and understood and agrees to be bound by its terms and conditions. LICENSEE FURTHER AGREES THAT THIS AGREEMENT CONSTITUTES THE ENTIRE UNDERSTANDING OF LICENSEE AND GENERAL DYNAMICS DECISION SYSTEMS WITH RESPECT TO THE SUBJECT MATTER HEREOF AND COMPLETELY SUPERSEDES ANY PRIOR UNDERSTANDING, EITHER ORAL OR WRITTEN. ANY MODIFICATION OF THIS AGREEMENT SHALL BE MADE ONLY BY MUTUAL AGREEMENT AND EVIDENCED BY WRITTEN AMENDMENT SIGNED BY BOTH PARTIES. This agreement shall be governed and interpreted by the laws of the State of Arizona.

7. U.S. GOVERNMENT: LICENSOR represents that the Software is either Commercial Computer Software as defined under DFARS 252.227-7014 (June 1995), or non-commercial computer software developed at private expense. If this license is acquired under a U.S. Government civilian agency contract, the Government's rights to use, modify, reproduce, release, perform, display or disclose the SOFTWARE are subject to restrictions set forth in FAR 52.227-19. If this license is acquired under a U.S. Government Department of Defense contract, the Government's rights to use, modify, reproduce, release, perform, display or disclose the SOFTWARE are subject to this license agreement. The License Fees identified in Exhibit A and the restrictions set forth in either FAR 52.227-19 or this license agreement do not apply to portions of the Software, if any, in which the U.S. Government has acquired Unlimited Rights.

Copyright © 2001, General Dynamics Decision Systems, Inc.
All Rights Reserved.

This product contains silicon software designed by Ready Systems Corp. ©1989 Ready Systems Corp. All rights reserved.
Unpublished-rights reserved under the copyright laws of the United States.

RESTRICTED RIGHTS LEGEND

Motorola, Private-Line, and Digital Private-Line are trademarks of Motorola, Inc.

DVP,DVP-XL,DVI-XL,DES-XL AND ASTRO are trademarks of Motorola Inc.

VRTX, RSC, Ready Systems Corp. are trademarks of Ready Systems Corporation.

SERVICE LOCATIONS

USA

Motorola Test Equipment Service Center
2216 Galvin Drive
Elgin Il. 60123
Ph: 800-323-6967
847-783-2952
FAX: 847-783-2955

CANADA

Motorola Canada Limited
Toronto Support Center
3900 Victoria Park Avenue
North York, Ontario M2H3H7
Canada
Ph: 800-543-3222
Fax: 888-331-9872

JAPAN

Seibu-Unyu Building 6F
3-14-2 Tatsumi Koto-Ku
Tokyo, Japan 35-0053
Ph: 81-3-3521-8262
FAX: 81-3-3521-8371

LATIN AMERICA

Motorola de Mexico
Blvd. Manuel Avila Camacho #32
Col. Lomas de Chapultepec
C.P. 11000 Del Miguel Hidalgo
D.F. Mexico 06700
Ph: 525-387-0539
Fax: 525-387-0593

ISRAEL

Motorola Israel
3 Kremenetski Street
Tel Aviv, Israel
Ph: 972-356-581-45
Fax: 972-356-250-23

HONG KONG

Motorola Asia Pacific Limited
HK Regional Support Centre
Unit 10, 18/F, Kodak House II
39 Healthy Street East
North Point, Hong Kong
Ph: 852-2590-4800
Fax: 852-2590-7950

SINGAPORE

Motorola Electronics Pte Ltd.
10 Ang Mo Kio Street 65
#01-01 Tech Point Building
Singapore, 569059
Ph: 65-4867199
Fax: 65-4846123

AUSTRALIA

473-479 Swan Street
Richmond, Victoria 3121
Melbourne, Australia
Ph: 61-3-9425-3533
Fax: 61-3-9425-3530

EUROPE. MIDDLE EAST, AFRICA

Motorola GMBH
Heinrich-Hertz-Str. 1
D-65232 Taunusstein, Germany
Ph: 49-6128-702130

KOREA

Motorola Electronics Communications Inc.
1st Floor, Ildong Bldg., #968-5
Daechi dong, Kangnam-Ku
Seoul Korea 135-280
Ph: 82-2-3420-6402
FAX: 82-2-3420-6401

PUERTO RICO

Motorola De Puerto Rico
2 Chardon Ave
El Mundo Bldg.
Hato Rey, PR 00917
Ph: 787-273-2400 Ext 219
Fax: 787-782-3685

CHINA

Motorola China Electronics LTD
Motorola Innovation Center
39A, Zizhu Yuan Road
Haidian District
Beijing PRC 100081
PH: 86-10-6843-722 Ext 3369
FAX: 86-10-6438-19

This Page Intentionally Left Blank

Section 1

INTRODUCTION

1-1 SCOPE OF MANUAL

This manual contains information for using the R2600 Series Communications System Analyzers. These Analyzers incorporate many devices and functions, permitting a technician to completely monitor and service radio communications equipment in the shop and in the field.

1-2 SAFETY SUMMARY

The following general safety precautions must be observed during all phases of operation, service and repair of this equipment. Failure to comply with these precautions or warnings violates safety standards of design, manufacture, and intended use of the equipment. General Dynamics. assumes no liability for the customer's failure to comply with these requirements.

The safety precautions and warnings listed below represent warnings of certain dangers of which General Dynamics is aware. You as the user of the product, should follow these warnings and all other safety precautions necessary for the safe operation of the equipment in your operating environment.

1-2.1 Grounding the Analyzer

To minimize shock hazard, the Analyzer enclosure must be connected to an electrical ground. This ground connection is provided via a three wire AC power cable. The power cable must be plugged into an approved three-contact electrical outlet. If the unit is not properly grounded while operating from an AC power source, the voltage potential between it and ground may cause an electrical shock.

1-2.2 Unit is Live When Plugged In

Internal circuits are live when the power cable is plugged in, although the front panel switch is in the STANDBY position. The input power plug is the disconnect device.

1-2.3 Keep Away From Live Circuits

Operating personnel must not remove equipment covers. Only Factory Authorized Service Personnel or other qualified maintenance personnel may remove equipment covers for internal subassembly or component replacement or any internal adjustment. Disconnect Analyzer from all voltage sources before removing covers for adjustments, maintenance or repairs. Capacitors inside may still be charged even if the Analyzer is disconnected from the voltage source.

Kapitel 1

EINFÜHRUNG

1-1 VERWENDUNGSZWECK

Dieses Handbuch enthält Informationen über den Umgang mit den Funkmeßplätzen der Serie R2600. Diese Geräte enthalten eine Vielzahl von Bausteinen und Funktionen, mit deren Hilfe der Techniker Kommunikationsgeräte sowohl in der Werkstatt als auch vor Ort vollständig überprüfen und warten kann.

1-2 SICHERHEITSHINWEISE

Die nachfolgenden allgemeinen Sicherheitshinweise sind während aller Phasen der Bedienung, Wartung und Reparatur dieses Gerätes zu befolgen. Die Nichtbeachtung dieser Hinweise bzw. Warnungen stellt ein Verstoß gegen die Sicherheitsstandards der Entwicklung, Herstellung und des bestimmungsgemäßen Gebrauchs des Gerätes dar. General Dynamics lehnt jede Haftung für die Nichtbeachtung dieser Vorschriften seitens des Kunden ab.

Die nachstehenden Sicherheits- und Gefahrenhinweise warnen vor bestimmten von General Dynamics erkannten Gefahren. Sie als der Benutzer des Produktes sollten diese Warnhinweise und sonstige sicherheitstechnische Vorsichtsmaßnahmen beachten, um einen zuverlässigen Betrieb des Gerätes innerhalb einer sicheren Betriebsumgebung zu gewährleisten.

1-2.1 Funkmeßplatz erden

Zur Verringerung der Gefahr eines elektrischen Schlages muß das Gerät elektrisch geerdet werden. Die Sicherheitserdung erfolgt über das dreipolige Netzkabel. Der Netzstecker muß dazu in eine dreipolige Steckdose eines zugelassenen Typs gesteckt werden. Wird das Gerät beim Betrieb aus einer Wechselstromquelle nicht vorschriftsmäßig geerdet, so kann die

Differenzspannung zwischen Gerät und Erde einen elektrischen Schlag hervorrufen.

1-2.2 Das Gerät steht auch in ausgeschaltetem Zustand unter Spannung

Die Schaltungen im Geräteinneren stehen bei gestecktem Netzkabel immer unter Spannung, auch wenn der Schalter auf der Frontplatte sich in Stellung STANDBY befindet. Eine vollständige Trennung vom Netz bewirkt nur das Ziehen des Netzsteckers.

1-2.3 Vorsicht vor spannungsführenden Teilen!

Das Betriebspersonal darf die Gehäuse-Abdeckungen nicht öffnen. Nur vom Werk autorisierte Techniker und sonstiges qualifiziertes Personal dürfen die Geräte-Abdeckungen öffnen, um Teile zusammenzubauen bzw. zu ersetzen oder Einstellungen vorzunehmen. Vor dem Öffnen, muß das Gerät von allen Spannungsquellen getrennt werden, damit Einstell-, Wartungs- und Reparaturarbeiten in spannungslosem Zustand durchgeführt werden. Kondensatoren im Gerät können auch nach der Trennung des Gerätes von der Spannungsquelle noch geladen sein.

1-2.4 Explosive Atmosphere

Do not operate the equipment in the presence of flammable gases or fumes. Operation of any electrical equipment in such an environment constitutes a definite safety hazard.

1-3 WARNINGS AND CAUTIONS

You should observe several precautions when handling this equipment.

WARNING

The Analyzer is designed to be operated with a ground connection to the chassis via a three-wire power connection. If the unit is not properly grounded while operating from an AC power source, the voltage potential between it and ground may cause an electrical shock.

CAUTION

This equipment contains parts that are subject to damage by static electricity. While there is normally no need for operator access to any internal components, take proper precautions in handling should the need arise. Refer to Appendix C for safe handling procedures.

1-3.1 Analyzer Operating Voltage

Before plugging in an AC power cable, verify that the selector switch located on the underside of the unit is set to the correct operating voltage. If using a battery pack, the cover must be removed and the internal voltage selector switch set to the correct position.

1-3.2 DC Power Source

The DC power input is intended to be connected to the Battery Pack accessory, or from a vehicle battery. Connecting the Analyzer DC input to a Power Supply can, in the event of a power supply fault, cause hazardous voltages to be present on the low voltage circuits of the Analyzer.

1-3.3 Maximum DVM Input Voltages

To ensure the safety of the user, the voltages being measured at the DVM input must be kept below Hazardous Live limits. The maximum input levels are: 30 V r.m.s and 42.4 V peak or 60 V d.c.

1-2.4 Betrieb in einer explosionsgefährdeten Umgebung

Das Gerät darf in einer explosionsgefährdeten Umgebung nicht betrieben werden. Brennbare Gase oder Dämpfe in der Nähe des Gerätes stellen ein großes Sicherheitsrisiko dar.

1-3 GEFAHRENHINWEISE

Beim Umgang mit dem Gerät sind folgende Gefahrenhinweise zu beachten.

VORSICHT!

Beim Betrieb des Funkmeßplatzes muß das Chassis über ein dreipoliges Netzkabel geerdet sein. Wird das Gerät bei Speisung aus einer Wechselstromquelle nicht vorschriftsmäßig geerdet, so kann die Differenzspannung zwischen Gerät und Erde einen elektrischen Schlag hervorrufen.

ACHTUNG!

Dieses Gerät enthält Bauteile, die durch statische Elektrizität beschädigt werden können. Normalerweise ist ein Zugriff auf die Bauteile im Inneren des Gerätes zwar nicht erforderlich, jedoch sind im Bedarfsfall die nötigen Vorsichtsmaßnahmen zu beachten. Einzelheiten dazu gehen aus Anhang C hervor.

1-3.1 Betriebsspannung

Vor dem Anschluß des Funkmeßplatzes an das Netz ist sicherzustellen, daß am Spannungswähler auf der Unterseite des Gerätes die richtige Netzspannung eingestellt ist. Bei Verwendung eines Akkusatzes muß die Abdeckung abgenommen und der interne Spannungswähler in die richtige Stellung gebracht werden.

1-3.2 Betrieb mit Gleichspannung

Über den Eingang DC POWER läßt sich der Funkmeßplatz mit Spannung aus dem als Option erhältlichen Akkusatz oder auch aus einem Kfz-Bordnetz speisen. Der Anschluß einer externen Stromversorgung kann im Falle eines Fehlers in dieser Stromversorgung dazu führen, daß die Niederspannungsteile im Funkmeßplatz gefährlich hohe Spannungen annehmen.

1-3.3 Maximale Eingangsspannung des Digitalvoltmeters

Damit die Sicherheit des Benutzers gewährleistet ist, dürfen die Spannungen am Eingang des Digitalvoltmeters bestimmte Werte nicht überschreiten. Die maximal zulässige Werte sind: 30 V eff. und 42,4 V Spitzenspannung oder 60 V Gleichspannung.

1-3.4 Replacement Fuses

For continuous protection against risk of fire, replace only with a fuse of the same type and rating. Part numbers for replacement fuses are shown in Tables 1 and 2.

Other fuses are located inside the Analyzer and should be replaced by Factory Authorized Service Personnel or other qualified maintenance personnel.

Table 1. Operator Replaceable Fuses

LOCATION	OPERATION	FUSE RATING		FUSE TYPE	PART NUMBER
		VOLTS	AMPS		
Rear Panel	115/230 VAC L	250V	2.5A	F	65-P30222C003
* Rear Panel	115/230 VAC N	250V	2.5A	F	65-P30222C003
Front Panel	ANT	125V	1/16A	F	65-P30277C002
Front Panel	GEN	125V	1/16A	F	65-P30277C002

Table 2. Internal Fuses

LOCATION	OPERATION	FUSE RATING		FUSE TYPE	PART NUMBER
		VOLTS	AMPS		
* Inside Rear Panel	12 VDC	250V	10A	F	F03A250V10A
Power Supply	115/230 VAC N	250V	1/4A	F	65-P30308C001
Battery Pack	115/230 VAC L	250V	0.5A	F	65-P30222C002
* Battery Pack	115/230 VAC N	250V	0.5A	F	65-P30222C002
Battery Pack	12 VDC	250V	15A	F	65-P26348A004

***Note:** For Analyzers with one AC fuse (F02A250V3A) and one DC fuse (F03A250V10A) on the rear panel, the neutral fuse (N) does not exist.

1-3.4 Ersatz von Sicherungen

Damit ein kontinuierlicher Schutz gegen Feuergefahr gegeben ist, darf eine Sicherung nur gegen eine solche des gleichen Typs und mit dem gleichen Sicherungswert ersetzt werden.

Teilenummern für Ersatzsicherungen gehen aus den Tabellen 1 und 2 hervor. Weitere Sicherungen im Inneren des Gerätes dürfen jedoch nur von autorisiertem bzw. qualifiziertem Personal gewechselt werden.

Tabelle 1. Sicherungen, die vom Benutzer gewechselt werden können

STELLE	BETRIEB	SICHERUNGSWERTE		TYP	TEILENUMMER
		VOLT	AMP		
Rückwand	115/230 VAC L	250V	2,5A	F	65-P30222C003
* Rückwand	115/230 VAC N	250V	2,5A	F	65-P30222C003
Frontplatte	ANT	125V	1/16A	F	65-P30277C002
Frontplatte	GEN	125V	1/16A	F	65-P30277C002

Tabelle 2. Interne Sicherungen

STELLE	BETRIEB	SICHERUNGSWERTE		TYP	TEILENUMMER
		VOLT	AMP		
* i. d. Rückwand	12 VDC	250V	10A	F	F03A250V10A
Netzgerät	115/230 VAC N	250V	1/4A	F	65-P30308C001
Akkusatz	115/230 VAC L	250V	0,5A	F	65-P30222C002
*Akkusatz	115/230 VAC N	250V	0,5A	F	65-P30222C002
Akkusatz	12 VDC	250V	15A	F	65-P26348A004

*** Hinweis:** Bei Geräten mit einer AC-Sicherung (F02A250V3A) und einer DC-Sicherung (F03A250V10A) auf der Rückwand gibt es keine neutrale Sicherung (N).

1-3.5 Other Cautions

Other cautions relating to the operation of the Analyzer are stated in *Italics* throughout this manual.

1-3.6 Replacement and Disposal of Batteries

Should the batteries contained in the Battery pack ever need replacing, this work should be performed by Factory Authorized Service personnel only. Replacement batteries should be of the same type and rating. The batteries contain toxic materials and therefore must be handled with care and transported to a disposal or recycling center.

1-3.7 User Maintenance

Clean only with a damp cloth and a mild detergent. Do not use abrasives, solvents or alcohol. If the Analyzer is used in a relatively dust free environment, no other periodic maintenance should be required.

1-4 SERVICE

The Motorola Test Equipment Service Centers service all R2600 Series Communications System Analyzers. The Centers maintain a stock of original equipment replacements parts and a complete library of service information. A list of worldwide service locations is found at the front of the manual.

1-5 REPLACEMENT PARTS ORDERS

Send orders for replacement parts to the nearest Motorola Test Equipment Service Center. Be sure to include the complete identification number located on the equipment. Also direct inquiries to the Test Equipment Service Center, including requests for part number identification and test equipment calibration or repair.

1-6 INSTALLATION

1-6.1 Packing

Foam pieces protect the Analyzer, which is packed inside a carton. Save the packing container and materials for future use.

1-6.2 Initial Set-up

1. Place the Analyzer on a workbench in the shop or mobile repair unit.
2. Lower the bail underneath to raise the Analyzer for easier viewing.
3. Remove the front cover by pressing in the spring loaded mechanism which snaps into the right front handle of the unit.
4. Before attempting to connect to AC power, set the two-position LINE switch (bottom of unit) to either the 115 or 230 position, as applicable. The factory initially sets the LINE switch for 115 VAC.
5. Take the power cord that is stored in the cover. Attach the cord's female connector to the appropriate connector on the Analyzer's rear panel. Connect the other end of the cord to the power source. For AC, use a grounded 3-wire 100-130 VAC or 200-260 VAC power source.
6. Remove accessories from the cover as needed.

1-3.5 Sonstige Vorsichtsmaßnahmen

Weitere wichtige Hinweise zum Betrieb des Funkmeßplatzes sind in diesem Handbuch durch *Kursivschrift* kenntlich gemacht.

1-3.6 Ersatz und Entsorgung von Akkus

Im Akkusatz enthaltenen Zellen dürfen - falls dies je erforderlich sein sollte - nur von autorisiertem Personal ausgewechselt werden. Ersatzzellen müssen vom gleichen Typ sein und die gleichen Leistungsmerkmale aufweisen. Akkus enthalten giftige Materialien, weshalb sie sorgfältig behandelt und ordnungsgemäß entsorgt werden müssen.

1-3.7 Reinigung

Reinigen Sie das Gerät nur mit einem leicht angefeuchteten Lappen und einem milden Reinigungsmittel. In keinem Fall dürfen Scheuer- oder Lösungsmittel oder Alkohol verwendet werden. Bei Benutzung des Gerätes in einem relativ staubfreiem Raum sollte eine weitere Wartung nicht erforderlich sein.

1-4 KUNDENDIENST

Die Wartung aller R26XX Communications System Analyzer werden vom regionalen Motorola Test Equipment Service Center durchgeführt. Diese Service Center führen ein Lager mit Original-Ersatzteilen und kompletten Serviceinformationen. Eine Liste der regionalen Service Center finden Sie auf der ersten Seite der Bedienungsanleitung.

1-5 ERSATZTEIL BESTELLUNGEN

Bestellungen für Ersatzteile sind unter Angabe der vollständigen Identifikationsnummer des jeweiligen Gerätes an das nächstgelegene Motorola Test Equipment Service Center zu richten. Hier erhalten Sie auch Antwort auf Ihre Fragen bezüglich Teilenummern, Kalibrierung und Reparatur von Testgeräten.

1-6 INSTALLATION

1-6.1 Verpackung

Im Verpackungskarton wird der Funkmeßplatz von Schaumstoffteilen geschützt. Verwahren Sie sämtliche Teile der Verpackung für eine eventuelle spätere Verwendung.

1-6.2 Erste Inbetriebnahme

1. Stellen Sie das Gerät in der Werkstatt oder im Servicewagen auf die Werkbank.
2. Stellen Sie den auf der Unterseite befindlichen Bügel hoch, um das Gerät besser bedienen zu können.
3. Entfernen Sie die Frontplatte durch Eindrücken der Raste, die im rechten Vorderriff des Gerätes einrastet.
4. Vor dem Anschluß an das Netz den Schalter LINE auf der Unterseite je nach der vorhandenen Netzspannung auf entweder 115V oder 230V setzen. Ab Werk ist der Schalter für 115 VAC eingestellt.
5. Das Netzkabel ist im Deckel untergebracht. Stecken Sie die Buchse des Netzkabels in den Kaltgerätestecker auf der Rückseite des Gerätes und verbinden Sie die andere Seite des Netzkabels mit der Stromquelle. Für Netzbetrieb ist ein dreiadrigter Anschluß für 100-130 oder 200-260 Volt erforderlich.
6. Entnehmen Sie das benötigte Zubehör aus dem Deckel.

7. Insert the whip antenna into the ANT port, located to the right of the tuning knob on the front panel.
8. Press the power switch ON. The Analyzer is now ready for use. Before operating the Analyzer, review the operating procedures described in this manual.

CAUTION

When installing the Analyzer in a vehicle, fuse the DC supply line close to the vehicle's battery. The DC-10A fuse (located on the Analyzer's rear panel) protects the Analyzer against overload but does not protect the vehicle.

1-6.3 Battery Pack Operation

The optional battery pack (RPN-4000A) is designed to conveniently mount to the back of the Analyzer. Containing an internal battery charger, the battery pack is automatically recharged whenever connected direct to an ac receptacle. Battery charging is independent of the main equipment.

NOTE

The battery pack has an internal switch allowing the user to switch operation of the battery pack to 115 VAC or 230 VAC. Before attempting to plug the battery pack into the ac line for charging, ensure this switch is set to the correct position for your line voltage. This switch is accessible by removing six screws attaching the cover to battery pack chassis as shown in figure 1-1.

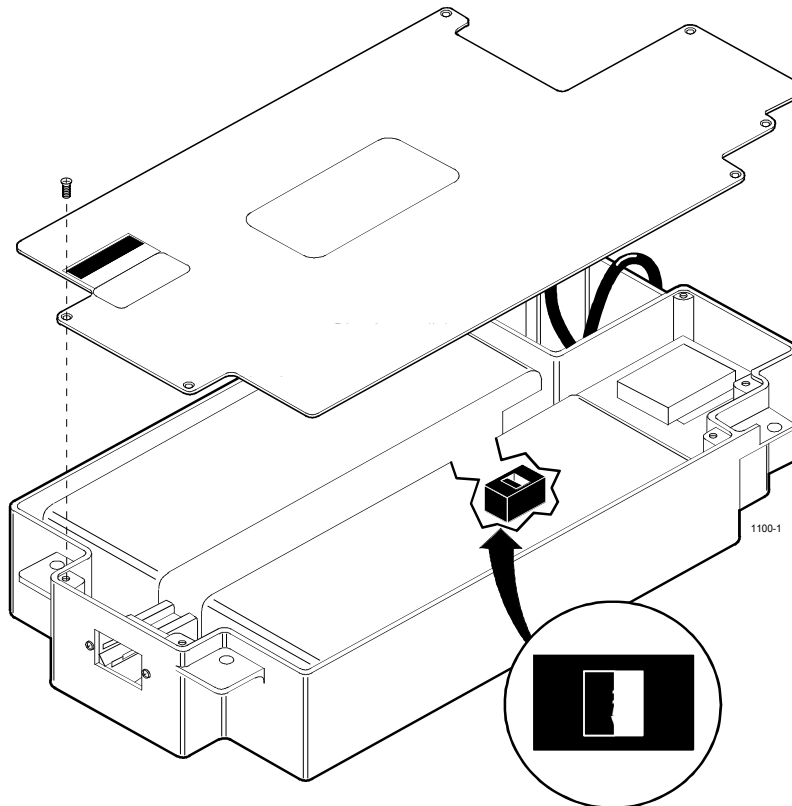


Figure 1-1. 115 VAC/230 VAC Selection Switch

7. Stecken Sie die Stabantenne in die ANT-Buchse rechts neben dem Abstimmknopf auf der Frontplatte.
8. Drücken Sie den Netzschalter auf ON. Der Funkmeßplatz ist jetzt betriebsbereit. Lesen Sie die mitgelieferte Bedienungsanleitung, bevor Sie das Gerät bedienen.

ACHTUNG!

Vor der Installation des Funkmeßplatzes in einem Fahrzeug ist das Speisekabel in unmittelbarer Nähe der Kfz-Batterie abzusichern. Die Sicherung von 10 A (im Inneren des Gerätes oder auf der Rückwand) schützt den Funkmeßplatz zwar gegen Überlastung, nicht jedoch das Fahrzeug.

1-6.3 Betrieb mit Akkusatz

Der als Option erhältliche Akkusatz (RPN-4000A) läßt sich bequem an der Rückseite des

Funkmeßplatzes anflanschen. Da der Akkusatz über ein integriertes Ladegerät verfügt, wird er automatisch aufgeladen, sofern er an einer Netzsteckdose angeschlossen ist. Der Ladevorgang verläuft unabhängig vom Hauptgerät.

HINWEIS

Der Akkusatz verfügt über einen eingebauten Spannungswähler für 115 V bzw. 230 V Wechselspannung. Bevor Sie den Akkusatz mit dem Netz verbinden, ist darauf zu achten, daß die Stellung des Spannungswählers der örtlichen Netzspannung entspricht. Zugänglich ist dieser Spannungswähler nach Lösen von 6 Schrauben, mit denen die Abdeckung mit dem Chassis des Akkusatzes verschraubt ist. Siehe dazu Abb. 1-1.

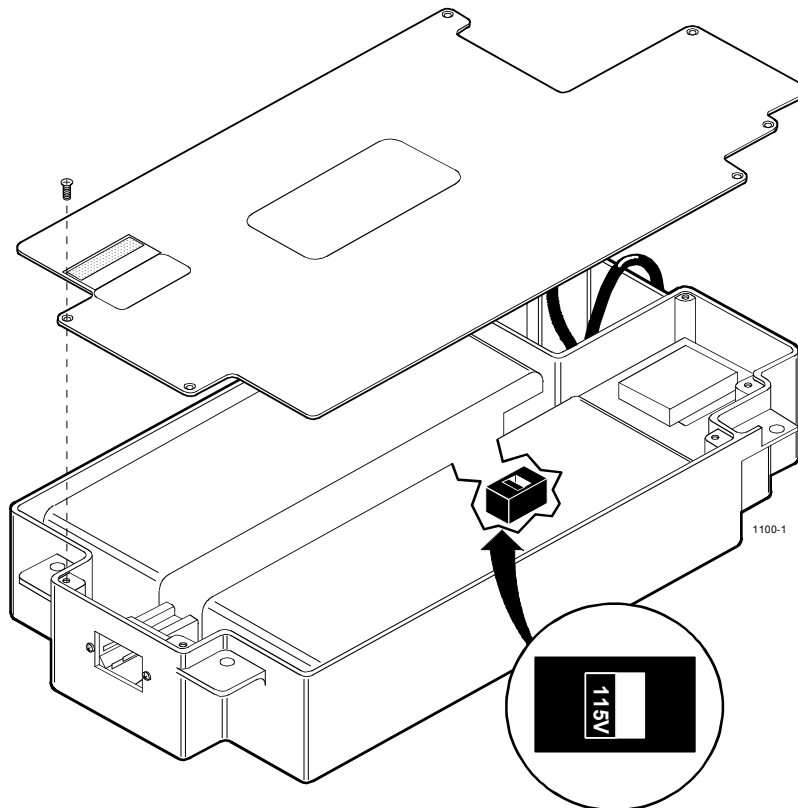


Abb. 1-1. Spannungswähler für 115 / 220 VAC

1-6.4 Battery Pack Installation

1. Set the Analyzer in an inverted vertical position on a table with the back of the unit facing upward.
2. Lay battery pack on the back surface of the Analyzer such that the cut out in the battery, will match the locations of the power plug on the Analyzer. Do not engage the attachment screw yet.
3. Plug four-pin connector from battery pack to four-pin connector on back of Analyzer labeled DC POWER.
4. Plug AC cord from battery pack to AC power plug on back of Analyzer.
5. Dress cabling into retaining area and slide battery into position to align with mounting screws
6. Align and tighten the four slotted mounting screws.

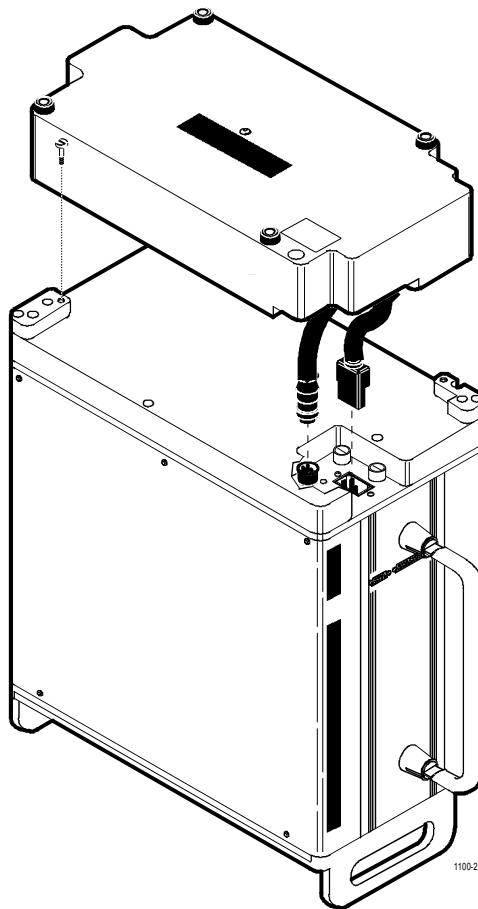


Figure 1-2. Battery Pack Installation

1-6.4 Installation des Akkusatzes

1. Stellen Sie den Funkmeßplatz kopfüber auf einem Tisch mit der Rückseite nach oben.
2. Legen Sie den Akkusatz auf die Rückseite des Gerätes so daß die Bohrung im Akkusatz auf den Netzstecker des Funkmeßplatzes ausgerichtet ist. Befestigungsschraube noch nicht anziehen.
3. Verbinden Sie den vierpoligen Anschlußstecker des Akkusatzes mit dem vierpoligen Anschluß DC POWER auf der Rückseite des Funkmeßplatzes.
4. Stecken Sie das Netzkabel des Akkusatzes in den Netzstecker auf der Rückseite des Funkmeßplatzes.
5. Legen Sie das Kabel in die entsprechende Aussparung und verschieben Sie den Akkusatz so, daß sich die Befestigungsschrauben anziehen lassen.
6. Befestigen Sie den Akkusatz mit den vier Schlitzschrauben.

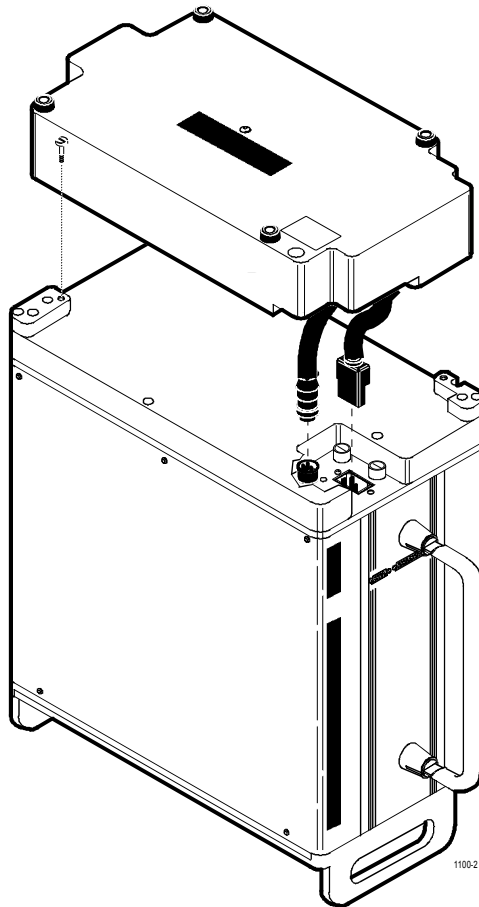


Abb. 1-2. Installation des Akkusatzes

Section 2

DESCRIPTION

2-1 DESCRIPTION

R2600 Series Communication System Analyzers are portable test instruments designed to monitor and service radio communications equipment over the frequency range of 400 Hz to 999.9999 MHz. figures 2-1 and 2-2 show the analyzer's controls, indicators, and connectors, and lists their functions. The analyzer generates signals, measures modulation and frequency, and performs a variety of tests normally associated with the following devices:

- RF Signal Generator
- Sensitive Measurement Receiver
- Spectrum Analyzer
- Duplex Offset Generator
- Oscilloscope
- Frequency Counter
- AC/DC Voltmeter
- RF Wattmeter
- Sweep Generator
- Signaling Encoder/Decoder
- Signal Strength Meter
- SINAD Meter
- Distortion Analyzer

2-2 OPERATOR CONTROLS

2-2.1 Keys & Indicators

Power Switch

Press ON to energize all circuitry. The unit automatically selects AC power if line power is available. Otherwise, the unit looks for a DC source. Switching is automatic upon cycling of the POWER switch.

ON LED

Illuminates when power switch is pressed ON.

DC LED

Illuminates when equipment uses DC power.

Cursor Zone Keys (RF, AUD, & DISP)

Determines the zone of the display that the cursor will be active in. When changing zones, the cursor moves to the same cursor location occupied the previous time it was in that zone.

Cursor Position Keys (Up, Down, Left, Right, TAB)

The five cursor movement keys are used to move the cursor to the left, right, up, down, or tab.

HELP Key

Displays help instructions for the present screen.

MEM Key

Accesses the Memory screen for nonvolatile memory presets.

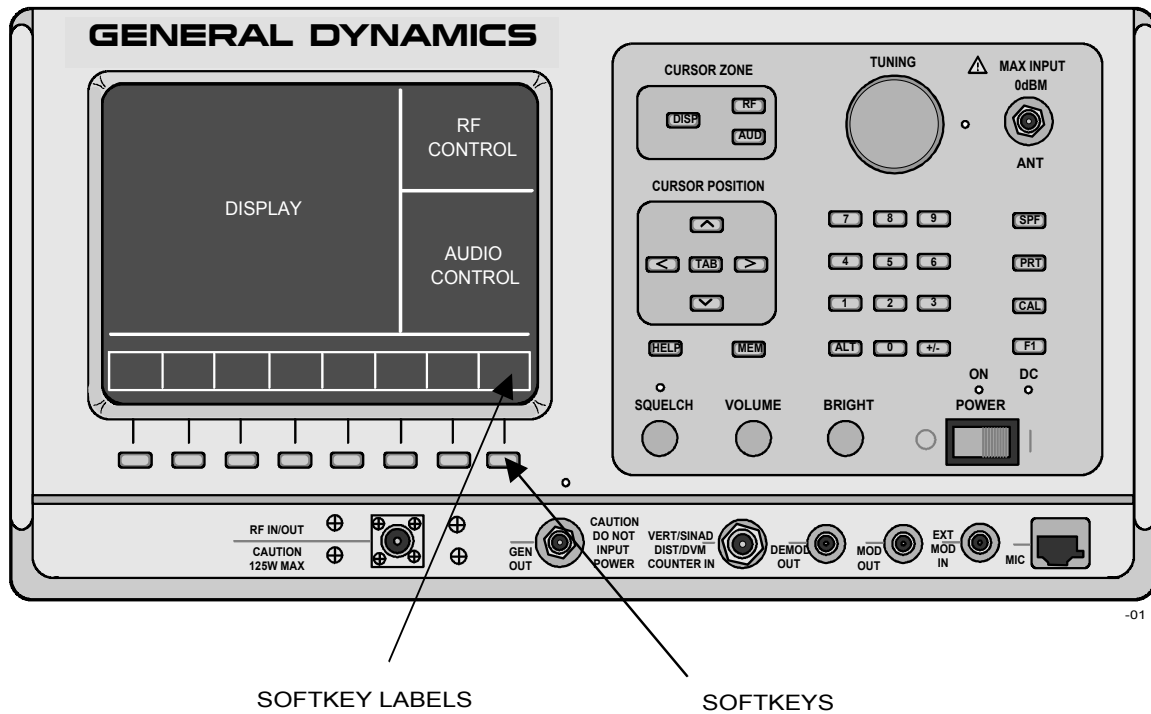


Figure 2-1. Front Panel Controls, Indicators, and Connectors

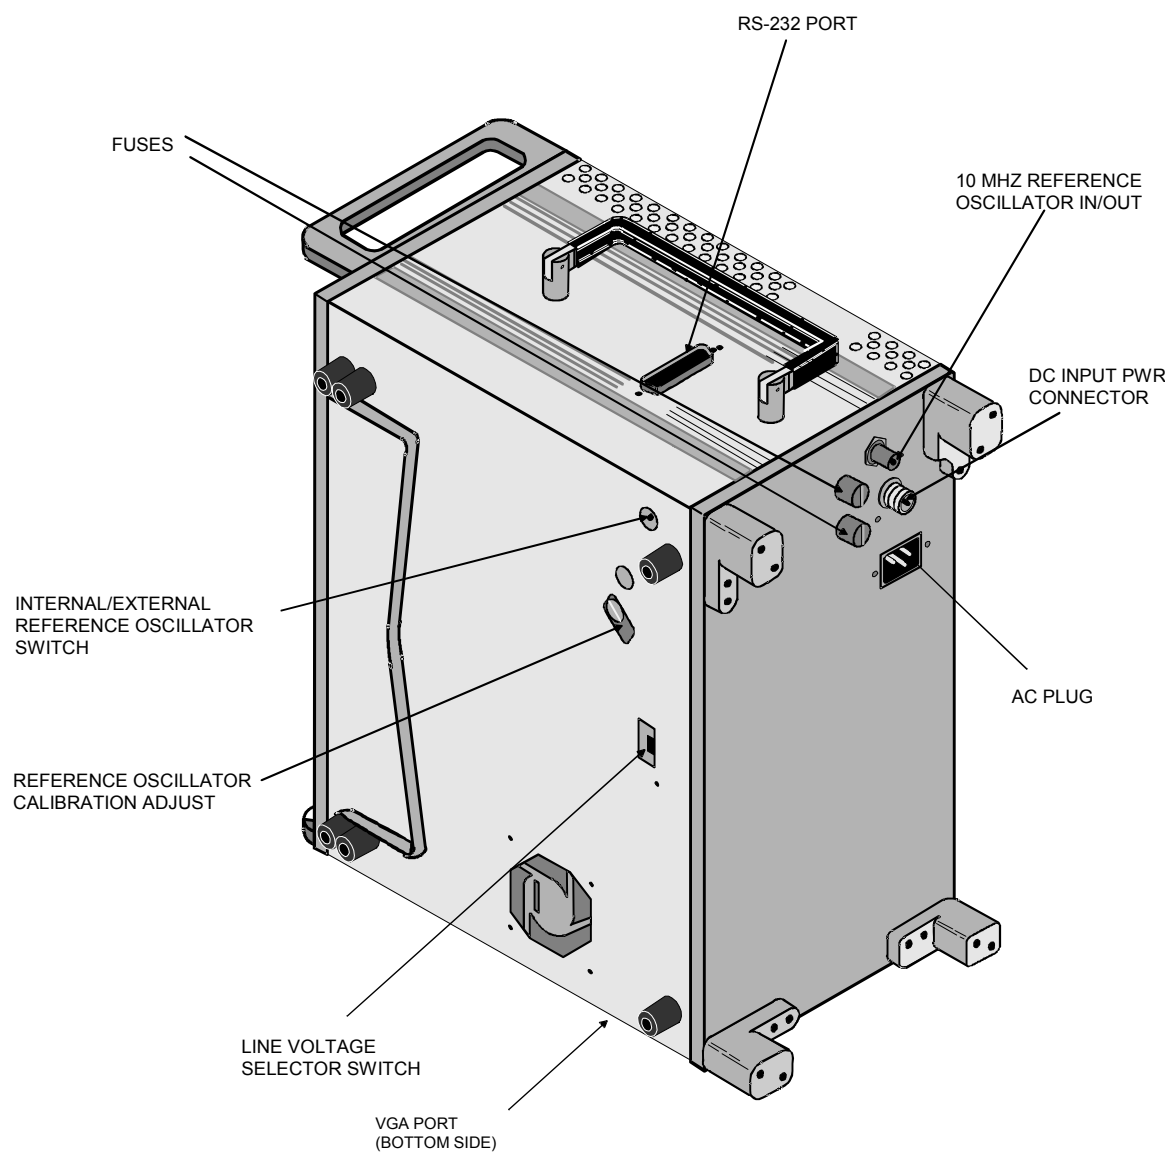


Figure 2-2. Side, Rear, and Bottom Panels

Keys (0-9)

For entering numeric information into the analyzer. When a key is pressed, the existing display numeral (where the cursor is sitting) is replaced with the numeral represented by the keypress. The analyzer then reacts to the new information just entered. When an invalid numeric entry is attempted, the analyzer ignores the keypress and the numeral on the screen remains unchanged.

+/- Key

Toggles the displayed sign from its present value to the negative of its present value.

ALT Key

Enables the alternate functions on the keypad. Upon pressing the ALT key, the message ALT appears on the message line. Pressing any other key following the ALT key will cause the ALT message to disappear.

SPF Key

Displays the special functions menu of the display.

PRT Key

Sends the data contents of the displayed screen to a printer.

CAL Key

Instructs the processor to perform a self calibration on the system.

F1 Key (Optional Function)

Permits access to additional functions. Currently used to return to local mode from remote mode.

Softkeys

Located below the display, the softkeys provide a menu function to indicate all possible values or entries for the current cursor position. If the cursor moves, the softkey functions change.

2-2.2 Knobs

Squelch

Squelch control. Clockwise rotation increases the receiver threshold signal level above which the squelch opens.

Volume

Controls volume of the speaker audio.

Bright

Intensity adjustment of the display. Clockwise rotation results in higher intensity.

Tuning

Incrementally changes the digit over which the cursor is currently sitting. Clockwise rotation of the tuning knob increases the number; counter-clockwise rotation decreases the number. This provides the equivalent of an analog control for numeric cursor entry locations.

2-2.3 DISPLAY

9 cm x 11 cm bit-mapped LCD. Provides data, operating controls, and instructional information. Displays in digital, analog, and bar graph forms.

NOTE

The LCD has a screen saver feature that reduces intensity after approximately 30 minutes of inactivity. Press any key to restore the display.

2-2.4 Connectors

2-2.4.1 Front Panel Connectors

RF IN/OUT

Provides RF input signal to the analyzer's internal monitor or output signal from the analyzer's internal generator. Also provides combined input/output in DUPLEX mode. Contains the RF wattmeter load. This is the only front panel connector to which RF power may be applied.

GEN OUT

Provides a high level generator RF output port isolated from the Monitor input.
DO NOT APPLY RF POWER.

ANT

Input port for sensitive monitor receiver. Useful for off-the-air measurements.
DO NOT APPLY RF POWER.

NOTE

The GEN OUT and ANT connectors are protected from overload by an RF fuse installed in the front panel connector. This fuse may be accessed by unscrewing the front portion of the BNC connector from the panel using a 7/16 inch deep socket wrench. Replacement fuse part number is GG-6530277C002.

CAUTION

The RF fuse leads must be trimmed to a length of .48 \pm .02 inches and the tips cut to a point to facilitate installation.

VERT/SINAD DIST/DVM COUNTER IN

Combined input port for oscilloscope vertical, SINAD meter, DVM/counter, Distortion meter, DVM, and frequency counter inputs.

DEMOD OUT

Recovered (demodulated) audio output (MONITOR or DUPLEX mode).

MOD OUT

Composite output of internally generated modulation signals.

EXT MOD IN

External modulation input connector. Requires a fixed input level of $1V_{pk}$ for accurate level displays.

MIC

Connector for external accessory microphone.

2-2.4.2 Side Panel Connectors

VGA Port (15 pin)

Provides connection to external VGA format color monitor.

RS-232 PORT (25 pin)

Provides input/output for printer or control interface.

2-2.4.3 Back Panel Connectors

10 MHZ STD

BNC connector provides input/output for 10 MHz reference frequency. Input impedance is 50 ohms. Input level requirement is 70 mV to 1 Vrms. Output level is approximately 250 uVrms.

AC POWER Connector

Primary AC power input port.

DC POWER Connector

Primary DC power input port.

2-3 BOTTOM CONTROLS

Internal/External Oscillator Micro-Switch

Used to switch between input and output configurations for the rear panel 10 MHz reference oscillator BNC connector.

CAUTION

The analyzer will not function properly if this switch is set to external without a 10 MHz reference signal applied to the rear 10 MHz reference BNC connector.

Internal Reference Oscillator Adjustment Access

Provides convenient external access to recalibrate reference oscillator frequency setting.

CAUTION

Use a reliable and accurate frequency standard when making this adjustment.

115/230 VAC Selector Switch

Used to switch the unit's internal power supply for either 115V or 230V operation.

Section 3

OPERATING INSTRUCTIONS

3-1 GENERAL

R2600 Series Communications System Analyzers are designed specifically for the service and monitoring of radio communications equipment. This product represents a breakthrough in simplicity of operation. In place of numerous meters, keys and controls, the analyzer employs an LCD display which simultaneously presents control and data displays. A simplified front panel, utilizing soft keys, cursor movement keys, a numeric key pad, an analog tuning control and other dedicated function keys all combine to make the unit extremely easy to learn and very efficient to use.

Primary operating modes of the unit are MONITOR, GENERATE, DUPLEX and SWEEP GENERATOR. They are accessed through the RF Control display area at the upper right of the screen (figure 3-1). Within these modes of operation, various measurement functions may be selected in order to measure and diagnose many types of radio equipment under test.

RF data display, voltmeters, distortion meter, SINAD meter, frequency counter and modulation decoder functions are available through the Meter display area at the upper left of the screen.

Spectrum analyzer, oscilloscope and bar graph displays are available through the Display area at the lower left of the screen.

Control of the internal modulation synthesizer and level selection for externally applied modulation are provided through the Audio area at the lower right of the screen.

Further explanation of the function of each of these screen areas can be accessed through use of the HELP key to the lower right of the screen.

3-2 BASIC OPERATION

Control of the unit and selection of data to be displayed are done through the use of three main windows which simultaneously appear on this screen.

These three main windows, or cursor zones, are accessed simply through a cluster of three CURSOR ZONE keys at the top center of the unit. The location where the cursor rests within each zone is known as a cursor field. To control the unit and enter data, all operator inputs are made at highlighted cursor field locations (brighter-face type).

For further simplicity, softkeys, with customized on-screen labels interact with the screen to provide a unique menu of entry options for each cursor field. This greatly reduces the number of keys and having to search through unrelated controls to find the one that's needed.

3-2.1 Remote Operation

All R2600 Series Communications System Analyzers are equipped with a standard RS-232 interface. Optionally, the R2600 is equipped with an IEEE 488 interface. Either of these interfaces may be used to remotely control the analyzer using a set of commands, queries, and responses that are defined in the General Dynamics R2600 Series Communications System Analyzer Programming Reference Manual (68-80309E55).

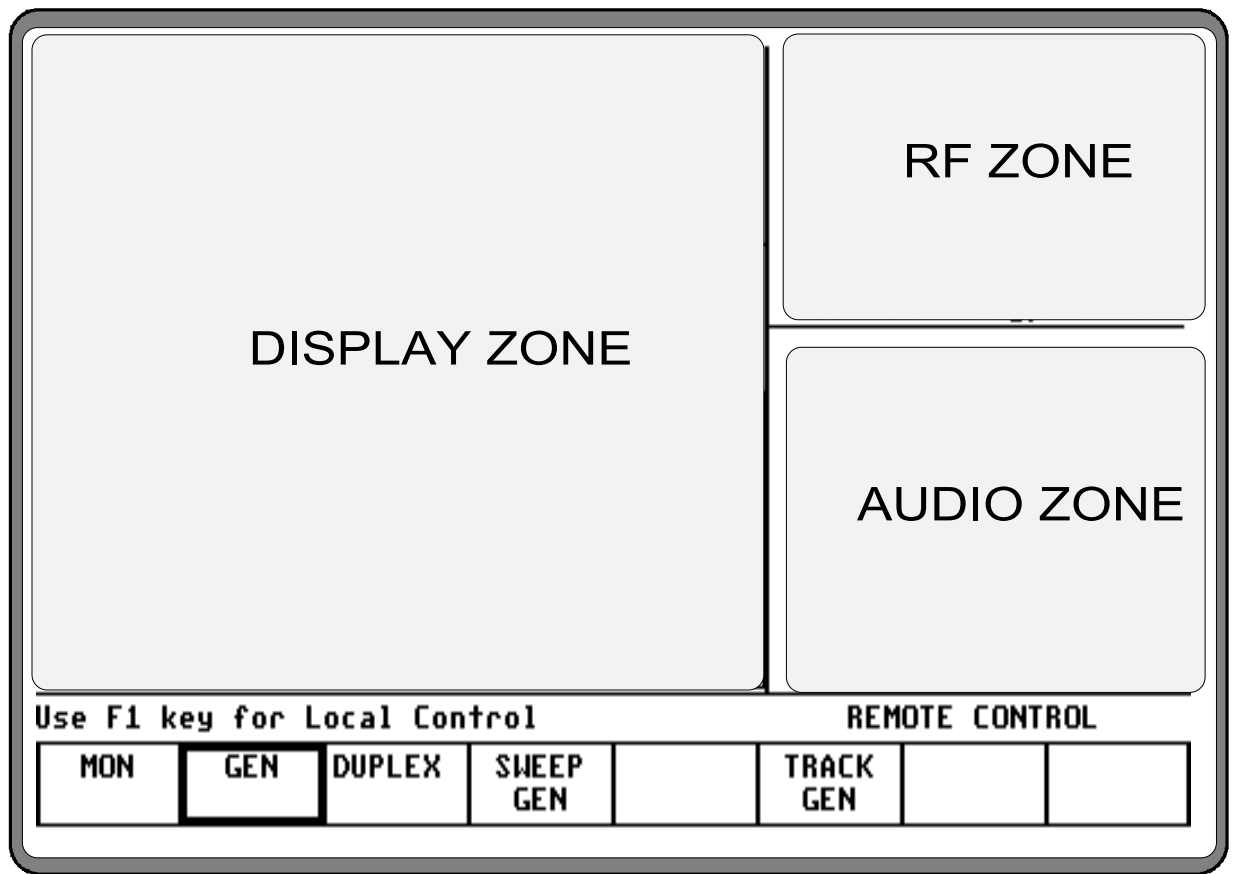


Figure 3-1. Screen Zone Arrangement

To control the cursor location and input information by:

- Use the CURSOR ZONE keys to move the cursor among the three zones.
- Use the CURSOR POSITION keys to move the cursor from field to field within a zone.
- Once at the desired field, use either the TUNING knob or the numeric keys to enter numeric information. Use the soft keys for other menu selections.

3-2.2 Expanded Display

Some fields have the ability to expand their contents and overwrite other display areas. These consist of the following:

- Spectrum analyzer, scope waveforms, bargraph displays
- Decode tables
- Encode tables
- Dedicated keys

3-2.2.1 Spectrum Analyzer, Scope Waveforms or Bargraph Display

By pressing the expand softkey within these displays, the entire screen (with the exception of the message line and softkey area) is overwritten and replaced by an enlarged version of the display section to enable a more detailed analysis of displayed data. A return softkey causes the screen to be restored to its original size.

3-2.2.2 Display Tables

Decode Tables are selected from the "Meter:" field. Selection of General Sequence, 5/6 Tone, or Select V decode modes causes the system to overwrite the meter and display zones with the display tables.

NOTE

To escape from a decode display table, return the cursor to the "Meter:" field and make an alternate selection.

Encode Tables are selected from the "Audio Mod Sum:/Mod Sum:" field. Selection of General Sequence or A/B Sequence encode modes and pressing the display table softkey causes the system to overwrite the meter and display zones with the display tables. Use the return softkey to exit to previous screen.

3-2.2.3 Dedicated Keys

Refer to the Other Functions portion of this manual (paragraph 3-8) for an explanation of expanded screens in the HELP, MEM, SPF, and CAL modes.

3-3 HELP

The analyzer provides on-screen operating instructions via the dedicated HELP key. Help screens are organized such that each display area has an associated help screen pertaining to that area of the screen. System help (figure 3-2) is available via a softkey within each help screen. Use the return softkey to return to the function in progress.

System Help

1. Operation of this unit is done primarily through the use of softkeys located immediately below the display screen. These keys along with the CURSOR POSITION keys located to the right of the screen provide for the entry of test requirements and the selection of data to be displayed.
2. Each highlighted cursor location has its own unique menu of selections displayed in boxes immediately above the softkeys. Simply push the key below the box to make the selection.
3. Three main windows or cursor zones are used for RF and Audio control on the right and data display on the left. The CURSOR ZONE keys provide for easy movement between these zones. Once in the zone of interest the cursor can be moved between the highlighted entry location by using the five CURSOR POSITION keys.

Page 1 of 3

Use F1 key for Local Control
REMOTE CONTROL

first page	prev page	next page				return	
---------------	--------------	--------------	--	--	--	--------	--

Figure 3-2. System Help

3-4 WARNINGS

The system provides warnings for the following operating conditions, which are considered detrimental to the proper functioning of the analyzer:

- RF Overload
(Input level to monitor too great for accurate measurement)
- Recalibrate
(Indicates that the unit's internal temperature has changed more than 10° C from where it was last self-calibrated. This may affect the accuracy of the generator output level, monitor input level below +20 dBm, and modulation level. Refer to paragraph 3-8.3 for further information.)
- RF Overtemperature
(Excessive power to RF load)
- Optional Battery Pack Voltage Low

If any of these conditions exist:

- A warning will be displayed on the warning line of the LCD for RF overload, recalibrate, and low battery voltage.
- A continuous audible warning tone along with an overwrite of the screen with a warning message will be presented for RF overtemperature (figure 3-3). This condition may occur when the intermittent power rating of the 125 watt internal load is exceeded. Both the display and the warning tone remain on and all operator input is ignored until the condition is corrected. The Analyzer then resumes normal operation.

CAUTION

Remove RF power immediately to correct the RF overtemperature condition. Otherwise damage to the unit may occur.

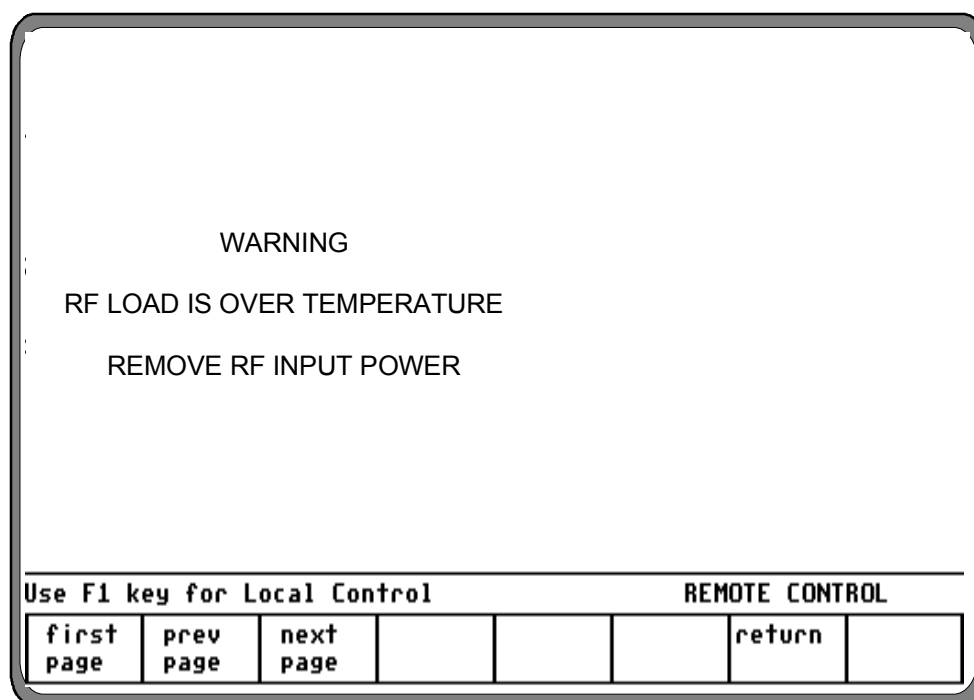


Figure 3-3. RF Overtemperature Warning Message

3-5 PRIMARY OPERATING MODES

Select the operating mode by placing the cursor in the "RF Control:" field in the RF zone. Use the desired softkey to make selection. Primary operating modes are:

- MONITOR
- GENERATE
- DUPLEX
- SWEEP GENERATE

3-5.1 MONITOR Mode

The Monitor mode (figure 3-4) provides the analyzer's test receiver function which is used in the testing of radio transmitters. It is capable of monitoring RF input through its antenna or a direct connection to the transmitter to accurately determine the frequency, power level, and modulation characteristics. It monitors signals from 400 kHz to 999.9999 MHz. Center frequency is set in 100 Hz increments.

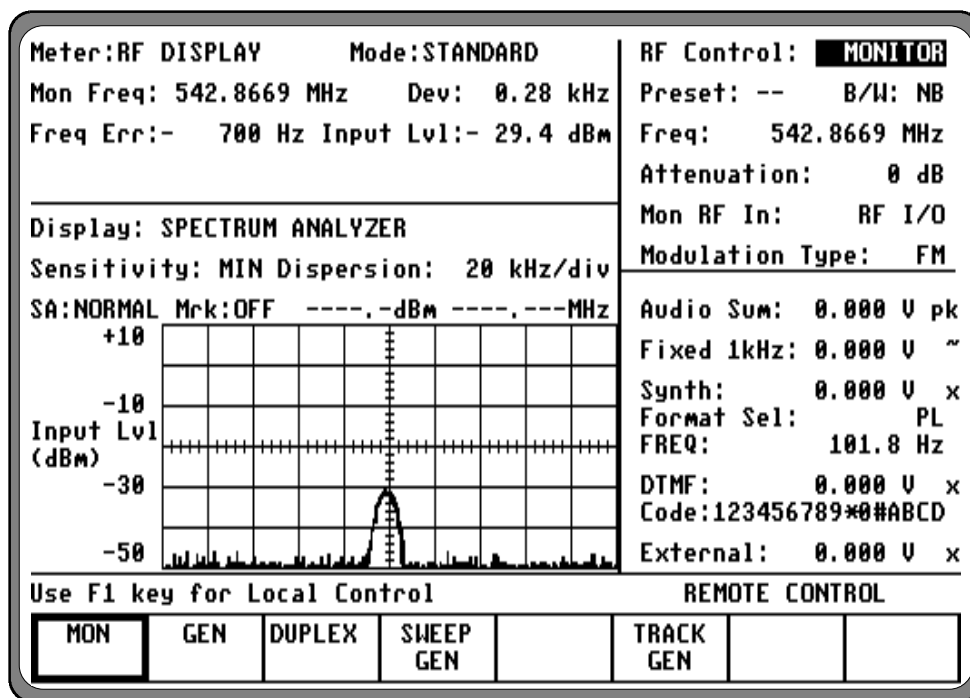


Figure 3-4. Monitor Mode

Specific controls which further configure the MONITOR mode are located within the RF zone when MONITOR is first selected. The specific entry fields are as follows.

Preset

The preset entry field provides a convenient way to enter a bandwidth, frequency, modulation type, and code synthesizer format for the unit by recalling preset data from non-volatile memory. If a preset is not to be used, enter the desired information at each of the fields.

NOTE

If a preset had been selected and changes are made to any of the preset values, the "Preset:" field will have dashes through it, indicating the preset is no longer selected.

B/W

Selects either wide or narrow IF bandwidth of the unit via softkey selection.

Freq

Enter the desired monitor frequency using keypad or tuning knob.

Attenuation

Selects the amount of attenuation at the RF input to the monitor receiver using softkeys. Selectable input attenuation is useful in adjusting displays for a wide range of input levels, as well as for use in high RF field environments where intermodulation may cause desensitization of the receiver.

Mon RF In

Selects the RF input port via softkeys. The RF I/O port contains an RF load and should be used for direct connection to the radio under test. The ANT port accesses the unit's sensitive receiver and should be used with an antenna for

"off-the-air" reception. Selection of the ANT port is indicated by a red LED adjacent to the ANT connector.

CAUTION

Do not apply input power to the ANT input port. In the event RF power is inadvertently applied, the port is protected by an in-line RF fuse. This fuse may be accessed by unscrewing the front of the BNC connector out of the front panel. Refer to paragraph 2-2.4.1 for additional detail.

Modulation Type

Selects the type of modulation via softkeys. AM and FM are standard selections. Phase modulation (option) is selected by pressing the softkey labeled PM, and provides the capability to generate and monitor PM signals.

3-5.1.1 Phase Modulation

Phase Modulation provides the capability to generate and monitor PM signals. This is an additional softkey selection in the RF Control zone for the modulation type (figure 3-5).

In Generate mode, narrow-band operation provides user control of the audio signal deviation from 0.50 to 2.00 radians in 0.01 radian steps. In wideband operation, the audio signal deviation ranges from 2.0 to 10.0 radians in 0.1 radian steps. Tones generated from the Audio zone are limited in frequency from 300 Hz to 3000 Hz for phase modulation

NOTE

Phase Modulation is a hardware option that is installed at the factory. To determine if Phase Modulation is available in the Analyzer, examine the Standard Options display screen (accessed via SPF/Version

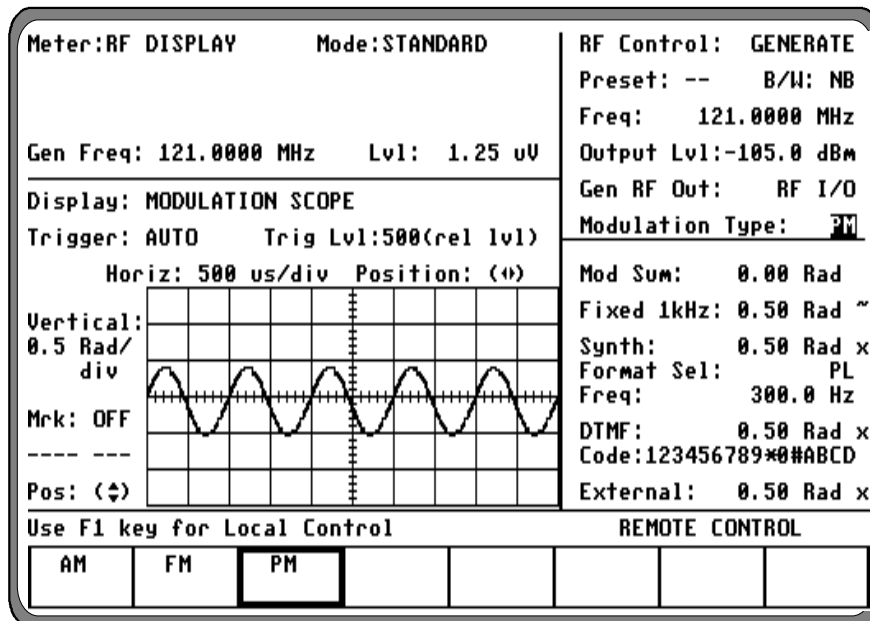


Figure 3-5. Phase Modulation

3-5.2 GENERATE Mode

The GENERATE mode (figure 3-6) configures the Analyzer to generate an RF signal at a controllable output level to provide for a wide range of receiver testing. Multiple internal and external modulation

signals can be simultaneously impressed on the carrier frequency to generate composite signals for servicing. Signals from 400 kHz to 999.9999 MHz may be generated. Center frequency is set in 100 Hz increments.

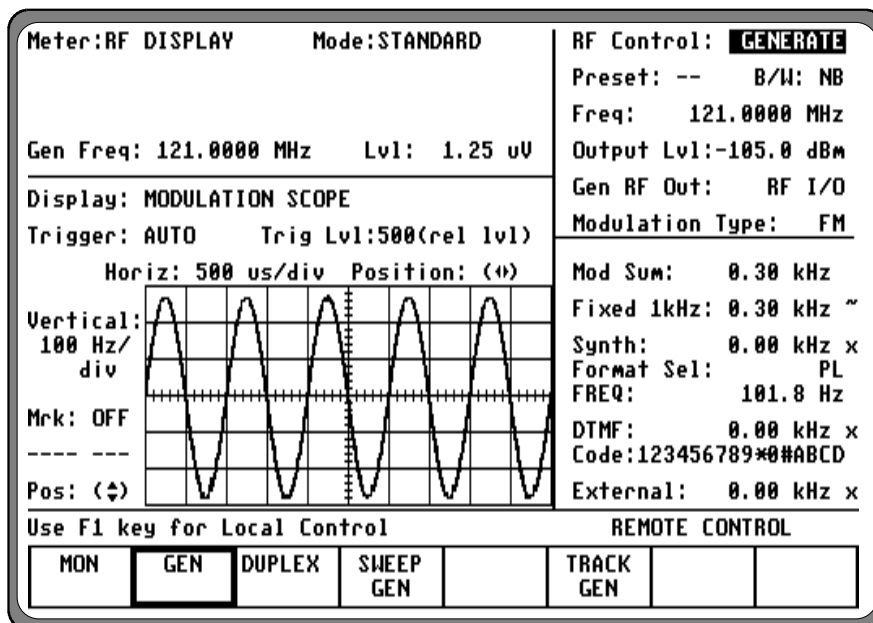


Figure 3-6. Generate Mode

Specific controls which further configure the GENERATE mode are located within the RF Control zone when GENERATE is first selected.

The specific entry fields are as follows:

Preset

The preset function is the same as in the MONITOR mode.

B/W

Selects either wide or narrow bandwidth of the unit via softkey selection.

Freq

Enter the desired generate RF frequency using keypad or tuning knob.

Output Lvl

Selects generator output level in 0.1 dBm steps over the range of -130 dBm to 0 dBm. An alternate display of generate level in microvolts is available in the "Meter:" area of the display zone. Output level is available in two ranges depending upon which output port is selected:

- The range of -80 dBm to 0 dBm is available when the high level GEN output port is selected.
- The range of -130 dBm to -50 dBm is available when the RF I/O output port is selected.

NOTE

If AM modulation is selected, the maximum output at the GEN port is reduced to -6 dBm; the maximum output at the RF I/O port is reduced to -56 dBm.

Gen RF Out

Selects the RF output port via softkeys. The RF I/O port is recommended for most applications where GEN and MON ports are combined for a single connection to the radio under test. The GEN port is recommended where higher levels are needed. Selection of the GEN port is indicated by a red LED adjacent to the GEN OUT connector.

CAUTION

Do not apply input power to the GEN output port. In the event RF power is inadvertently applied, the port is protected by an in-line RF fuse. This fuse may be accessed by unscrewing the front of the BNC connector out of the front panel.

Modulation Type

Selects the type of modulation via softkeys.

3-5.3 DUPLEX Mode

The DUPLEX Mode (figure 3-7) provides a simultaneous RF generator output that is offset in frequency from the monitor center frequency and fully adjustable in output level.

This capability provides for servicing full duplex radio equipment as well as repeaters and radios operating with offset transmit and receive frequencies.

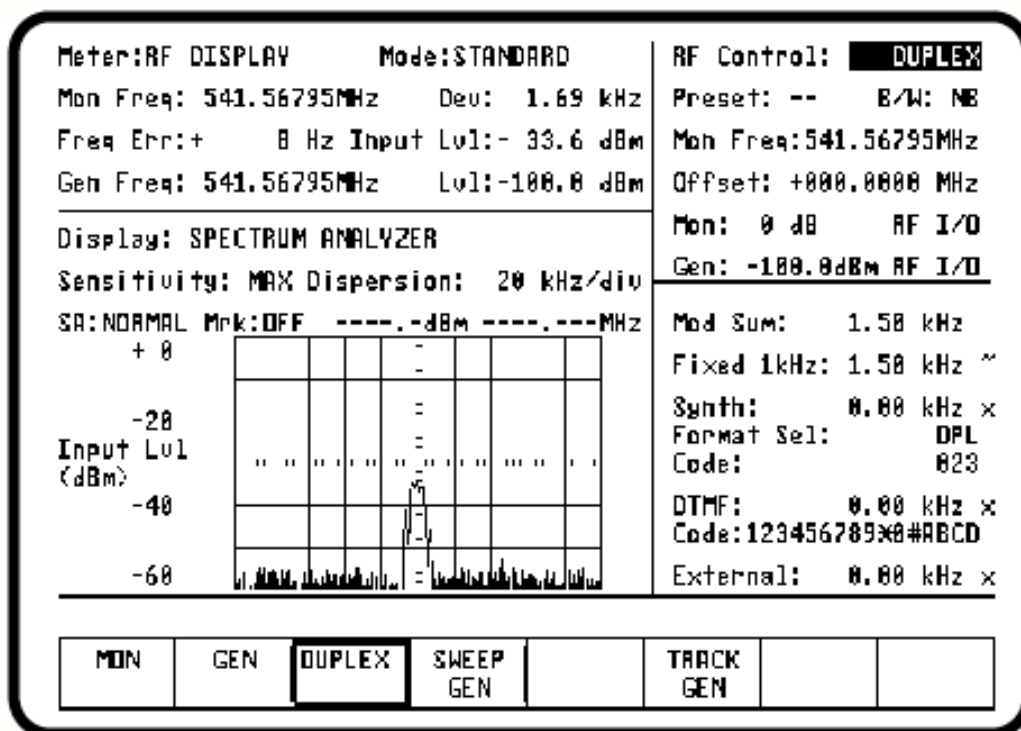


Figure 3-7. Duplex Mode

Specific controls which further configure the DUPLEX mode are located within the RF Control zone when DUPLEX is first selected.

The specific entry fields are as follows:

Preset

The preset function is the same as in the MONITOR mode.

B/W

Selects either wide or narrow bandwidth of the unit via softkey selection.

Mon Freq

Enter the desired monitor frequency using keypad or tuning knob

Wide Offset

Enter the generator frequency offset relative to the monitor frequency entered. Offset frequencies of -999.99975 to +999.99975 MHz are allowed, but the final generate frequency will be constrained to 000.40000 MHz through 999.99995 MHz. The offset frequency is set in 2.5 kHz steps.

Mon

This field actually contains two separate fields, one for monitor input attenuation and one for monitor port selection. Refer to the MONITOR description for further details.

Gen

This field actually contains two separate fields, one for generate output level and one for generate output port selection. Refer to the GENERATE description for further details.

NOTE

Only FM modulation is provided for the duplex generator. Either FM or AM demodulation may be selected. Selection must be done in MONITOR Mode within the RF control zone. The RF I/O port combines monitor and generate signals for the duplex function. However, either the ANT or GEN ports may be independently selected.

3-5.4 SWEEP GENERATE Mode

The SWEEP GENERATE Mode (figure 3-8) provides a sweep generator function with variable level, rate, and bandwidth. A sweep generator is invaluable when measuring and troubleshooting many types of RF filters and frequency variable networks such as IF filters, RF preselectors, duplexers and cavity resonators.

To sweep test connect the GEN output port to the input of the network under test.

To facilitate display of swept responses of networks under test, the units built-in scope

display can be accessed by selecting SWEEP GENERATE within the "Display:" field. A suitable RF detector probe should be used to connect from the output of the circuit under test to the VERT/SINAD/DIST input port (refer to ordering instructions provided in the front portion of this manual for recommended accessory RF detectors). The scope's horizontal sweep tracks the sweep of the RF Generator, thus allowing a frequency domain analysis of filterfilters, RF front ends, duplexers, etc.

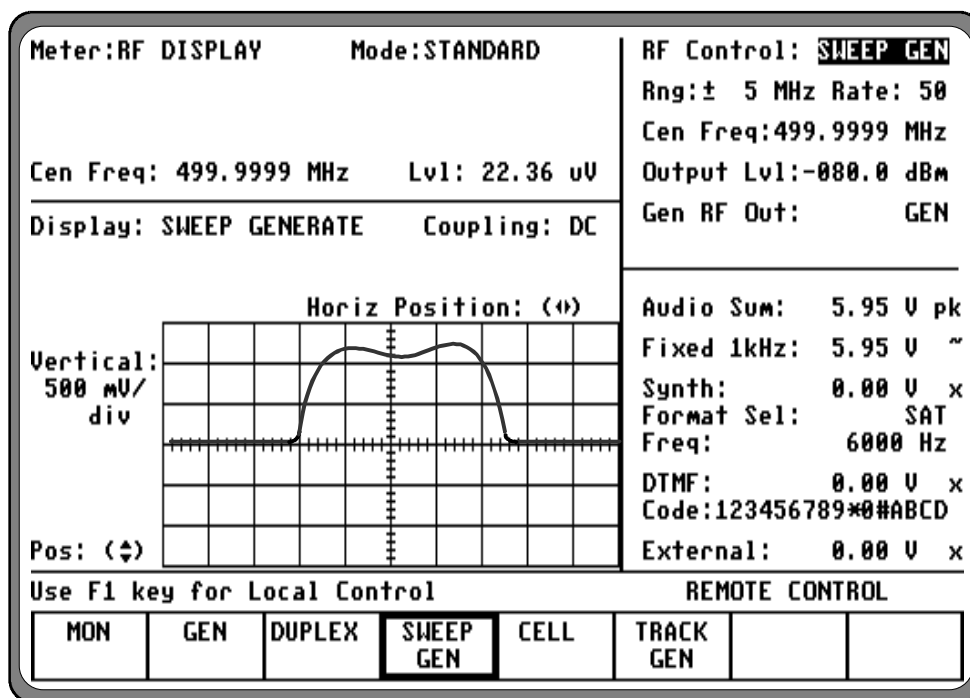


Figure 3-8. Sweep Generator Mode

Specific controls which further configure the SWEEP GENERATE mode are located within the RF Control zone when SWEEP GENERATE is first selected. The specific entry fields are as follows:

Rng

Selects the RF frequency range over which the generator will sweep. Specific ranges are selectable via softkeys.

Rate

Selects the sweep rate for the generator and corresponding scope display. Sweep rate is selectable using softkeys.

Cen Freq

Refer to the GENERATE mode, "Freq:" field.

Output Lvl

Refer to the GENERATE mode.

Gen RF Out

Refer to the GENERATE Mode.

3-5.5 TRACKING GENERATOR Mode (if equipped)

The TRACK GENERATOR mode (figure 3-9) sets up the units signal generator in a sweeping mode for use with the optional Tracking Generator display. This provides a valuable capability for measuring and servicing a wide variety of RF filtering and combining networks.

To operate the Tracking Generator simply select TRACK GEN via softkey in the "RF Control:" field in the RF Control zone. Connect the GEN OUT port to the input of the network under test.

Connect the output of the network under test to the ANT port. Be sure to activate the ANT port

thru the "Mon:" field in the RF Control zone. If input attenuation is needed as part of the measurement procedure, 20 or 40 dB attenuation may similarly be selected thru the "Mon:" field in the RF Control zone.

The Tracker display is selected through softkeys at the "Display:" field of the DISP zone at the left center of the screen. The display is a 10 dB/div scale. By adjusting the generator level and selecting 20 or 40 dB of input attenuation, the usable measurement range is approximately 100 dB at frequencies below 500 MHz and 80 dB above 500 MHz.

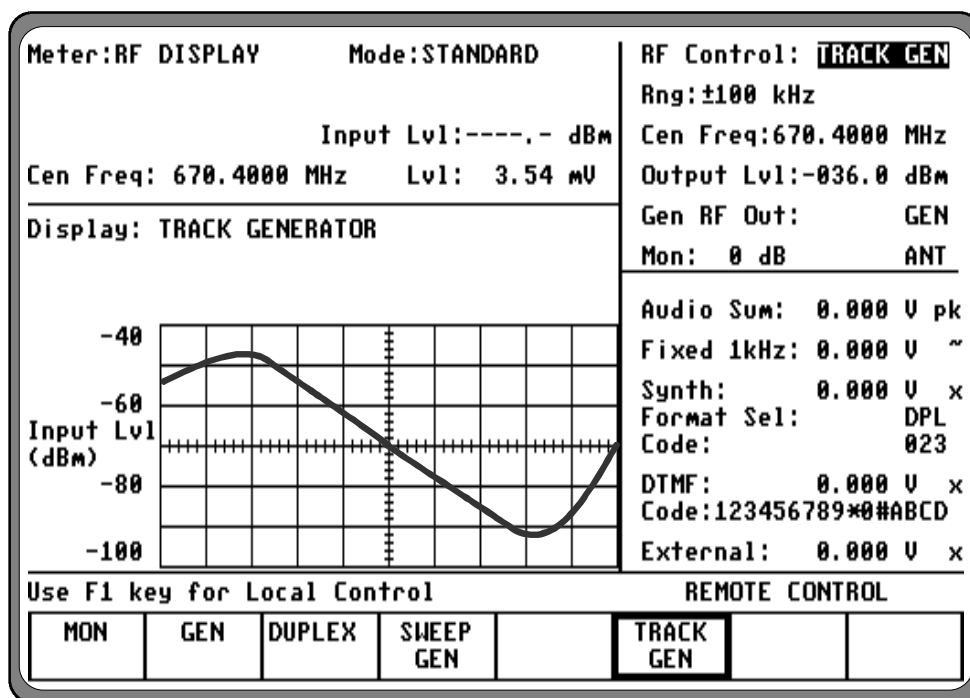


Figure 3-9. Tracking Generator Mode

All adjustments of center frequency, frequency range and generator level are made thru the RF zone at the upper right of the screen. The TUNING control is especially useful in tuning center frequency and generator level. These may all be adjusted as follows, thru softkeys or numeric entry, for the desired display, depending on the type of network being tested.

Rng

Selects the RF frequency range over which the generator will sweep. These are expressed in \pm full screen deflection ranges that are selectable via softkeys. The sweep rate of the tracking generator is fixed at approximately 50 ms/sweep.

Cen Freq

Selects the center frequency of the Tracking Generator display. Refer to the GENERATE mode for more detail on frequency entry.

Output Lvl

Refer to GENERATE mode.

Gen RF Out

Refer to GENERATE mode.

3-6 AUDIO/MODULATION SYNTHESIZER

The Audio zone located at the lower right of the screen is used to control the multi-purpose audio synthesizer section of the unit. Signals generated by the audio synthesizer are coupled internally to the generator modulation input as well as to the MOD OUT front panel connector.

In the GENERATE and DUPLEX modes, levels entered in the Audio zone are shown as modulation (either deviation or % AM). The composite sum of modulation, only for those modulation sources enabled, is displayed at the top of the zone at the "Mod Sum:" location.

In the MONITOR and SWEEP GENERATE modes, levels entered in the Audio zone are shown as peak voltage values. The composite sum of the voltage value (only for those modulation sources enabled) is displayed at the top of the zone at the "Audio Sum:" location.

Each of the following modulation signals has a cursor field for entering its desired level. Use the keypad or TUNING knob to enter the desired level.

An additional cursor field, adjacent to each level entry, is used to enable or switch each selection on and off using softkeys. This field is located at the extreme right side of the zone. There are three possible conditions for this softkey selection.

- CONT activates continuous ON condition, or continuous cycling if a sequence has been selected. A ~ symbol is indicated at the extreme right, adjacent to the level to indicate continuous ON.
- OFF switches off the modulation source. Off is indicated by an "X" at the extreme right, adjacent to the level.
- BURST provides a single timed sequence of modulation only for DTMF, TONE A, TONE B,

5/6 TONE, A/B SEQUENCE, GENERAL SEQUENCE, and TONE REMOTE. A single burst sequence is shown by the "*" symbol.

For DPL, select the START DISC TN (*) softkey to produce a continuous disconnect tone. (Select CONT then "*" softkeys to simulate a complete DPL transmission with disconnect tone.)

The composite sum at the top of the zone will not indicate the burst condition. To set the composite level to include bursts of signaling, temporarily select CONT for those modulation sources which will be "burst" enabled.

3-6.1 Fixed 1 kHz

The analyzer has a fixed 1 kHz modulation source, which can be selected independently from the other audio synthesizers. Level control and on-off selection previously described.

3-6.2 Synth

Level control and on-off selection are selectable via softkey selection. The synthesizer function encodes a broad selection of signaling formats, which are softkey selected through the "Format Sel:" field adjacent to "Syth:" level field. Use of the more softkey accesses three different menu levels for the following signaling formats.

PL

This softkey selects Motorola Private-Line tone coded squelch signaling. This selection produces two additional fields on the line below the "Format Sel:" field (figure 3-10). The first allows for softkey selection of either frequency or code entry. The second is the value corresponding to the frequency or code. Valid PL codes are found in Appendix B. All frequency entries are accepted, but only valid codes can be entered.

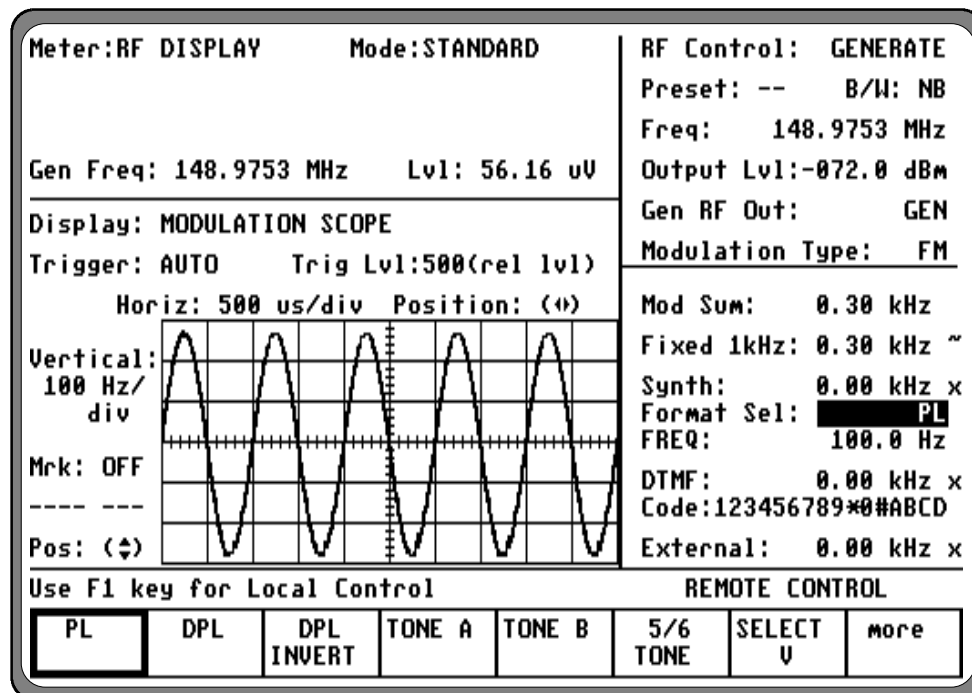


Figure 3-10. PL Format Selection

DPL/DPL Invert

This softkey selects standard or inverted Motorola Digital Private-Line coded squelch. A single cursor field is located below the "Format Sel:" field for entry of code. Only valid DPL codes should be entered per Appendix B.

Tone A/Tone B

This softkey selects either of two continuous audio tones. Tone frequencies may be entered either from the "Freq:" field or from the A/B Sequence tables.

5/6 Tone

This softkey selects 5/6 tone sequences for high-capacity tone paging systems. Only code entry is required in the "Code:" field.

Select V

This softkey selects a number of international formats for five-tone sequential signaling. This selection produces two additional fields on the "Code:" line below the "Format Sel:" field. The first allows a choice of format, selectable by softkeys. The second selects the numeric code entered by keypad or softkeys.

A/B SEQ

Selects the two-tone sequential paging format, with a choice of four timing sequences selectable through the "Sequence:" field on the line below. An expanded display table can be selected from softkeys to allow entry of A and B frequencies, select a sequence number, and view the tone and delay timing for each sequence. Sequences 1 and 2 are fixed timing for standard "tone" and "tone/voice" pagers, while sequences 3 and 4 may be customized through numeric entries by the user.

General SEQ

Selects a free-form 20-tone sequence encoding which has full flexibility to enter unique frequency and time duration for each of the 20 tone slots. The single field below the "Format Sel:" field is used to enter the frequency code sequence. An expandable display table is selectable by softkey to allow entry of frequency and time duration data (figure 3-11). Frequencies and durations are tabulated corresponding to a given "code number" (i.e. 1], 2], 3], etc.).

Frequency and times are each selected independently. This is done through entry of independent "Code Sequence:" and "Dur Sequence:" (for example, Code 1] may be selected along with Dur 8] for the first tone slot in the sequence).

Tone Remote

Selects the specialized tone sequence used in control of tone remote equipment. The frequencies used are the same as those for the A/B sequence with timing predetermined per Motorola Tone Remote specifications. Changes to the A and B frequencies can be made from the A/B Sequence table or directly from the Tone A and Tone B "Freq:" fields.

Meter: RF DISPLAY		Mode: STANDARD		RF Control: GENERATE	
Gen Freq: 148.9753 MHz		Lvl: 56.16 uV		Preset: -- B/W: NB	
Display: MODULATION SCOPE		Trigger: AUTO		Trig Lvl: 500 (rel lvl)	
Horiz: 500 us/div		Position: (←)		Mod Sum: 0.30 kHz	
Vertical: 100 Hz/div		Mrk: OFF		Fixed 1kHz: 0.30 kHz ~	
Pos: (↕)				Synth: 0.00 kHz x	
				Format Sel: GEN L SEQ	
				0123456789ABCDEFGHIJ	
				DTMF: 0.00 kHz x	
				Code: 123456789*0#ABCD	
				External: 0.00 kHz x	
Use F1 key for Local Control				REMOTE CONTROL	
A/B SEQ	GENERAL SEQ				display table

Synthesizer Encode Format Sel GEN SEQ					
Code Sequence: 123456789ABCDEFGHIJ (Same code as in Audio Control)					
Dur Sequence: 0123456789ABCDEFGHIJ (Changeable only in Display Table)					
	Freq (Hz)	Dur (sec)		Freq (Hz)	Dur (sec)
0J	19000.0	1.000	AJ	09000.0	0.090
1J	18000.0	0.900	BJ	08000.0	0.080
2J	17000.0	0.800	CJ	07000.0	0.070
3J	16000.0	0.700	DJ	06000.0	0.060
4J	15000.0	0.600	EJ	05000.0	0.050
5J	14000.0	0.500	FJ	04000.0	0.040
6J	13000.0	0.400	GJ	03000.0	0.030
7J	12000.0	0.300	HJ	02000.0	0.020
8J	11000.0	0.200	IJ	01000.0	0.010
9J	10000.0	0.100	JJ	00000.0	0.000
Use F1 key for Local Control			REMOTE CONTROL		
A	B	C	D	E	clear to end
					return
					more

Figure 3-11. General Sequence Mode Select

3-6.3 DTMF

Provides a means for encoding DTMF (Dual-Tone Multi-Frequency) signaling for testing telephone interface systems. Enter level as previously described and enter "Code:" in the field immediately below the "DTMF:" field.

3-6.4 External

Used to set the level and enable externally applied signals from both the MIC and the EXT MOD IN front panel connectors.

NOTE

In the case of external signals applied to the EXT MOD connector, the accuracy of this level displayed is dependent on applying a fixed signal level of 1 Vpk (2 Vpkpk) to the EXT MOD IN connector.

3-7 METER AND DISPLAY

The display of metered data is presented both digitally and graphically within the Display zone in the left portion of the screen (figure 3-12). This zone is divided into two separate display areas: Meter area and Display area.

3-7.1 Meter

Select a measurement display from the following, using softkeys from the "Meter:" cursor field.

3-7.1.1 RF Display

This area displays the RF test data for the radio under test, subject to the mode selected (MONITOR, GENERATE, DUPLEX, TRACK GENERATE, or SWEEP GENERATE).

When the GENERATE mode is selected, the RF Display area shows generator center frequency as well as generate level per the RF Control zone entry. A single cursor field at this location allows selection by softkey of either millivolts/microvolts (mV/uV), dBu, or dBm units of display.

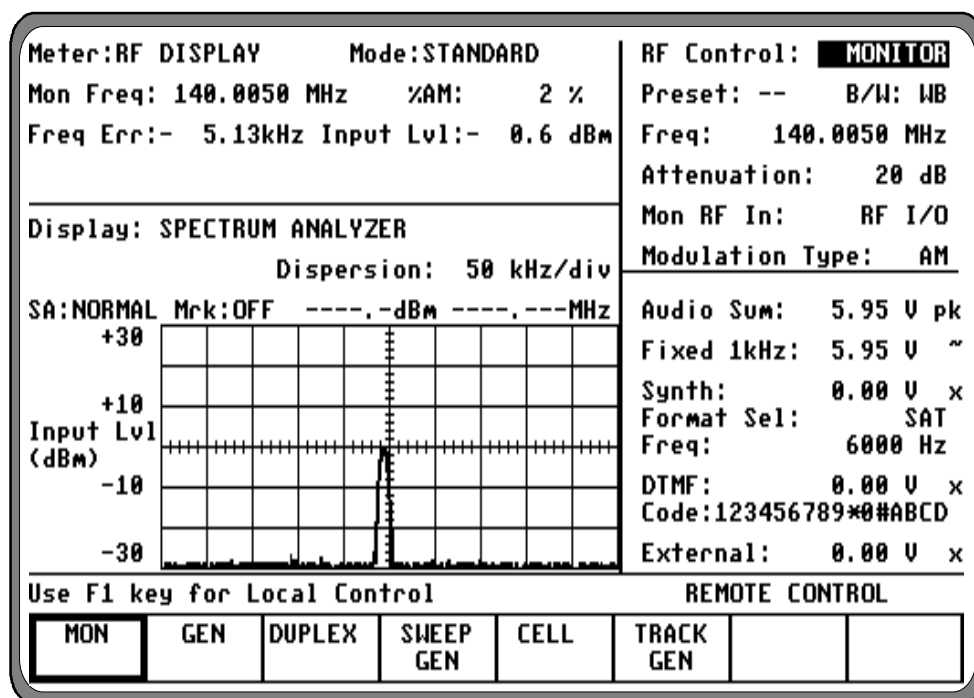


Figure 3-12. RF Display Zone

When DUPLEX mode is selected, the RF Display area reflects a combination of the monitor and generator data, as previously described.

When SWEEP GENERATE mode is selected, the RF Display area reflects the same data as in GENERATE mode. Refer to the previous discussion.

In the MONITOR Mode, the following data is displayed in the RF Display area.

Mon Freq

Center frequency of the radio under test as entered in the RF Control zone.

Freq Err

This area displays the plus or minus frequency offset (error) of the received carrier relative to the center frequency entered above. If the receive phase modulation option is installed and selected in the RF Control zone, this location will display in radians.

Dev/%AM

Indicates the modulation level of the received carrier, dependent upon the modulation type selected in the RF Control zone. If the receive phase modulation option is installed and selected in the RF Control zone, this location will display in radians.

Input Lvl

Displays the signal level received at the selected front panel connector. This area displays transmitter power for high levels of input as well as lower levels of field strength.

Data is displayed only for "on channel" carrier frequencies. A single cursor field at this location allows selection by softkey of either microvolts/watt or dBm units of display.

3-7.1.2 RF Scan

The "Meter:" RF SCAN display (figure 3-13) provides an alternate form of monitor frequency display from the main RF display.

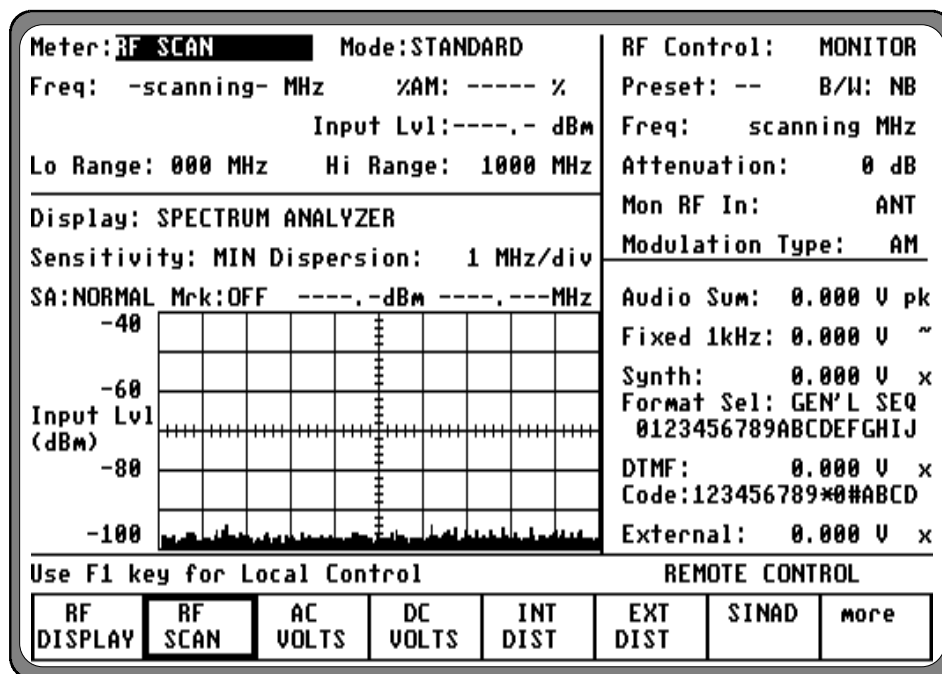


Figure 3-13. RF Control Zone; Scan Mode

It provides an RF frequency counter function where the monitor scans over a selected frequency range and locks on to the carrier that is applied to its input. The direct frequency is then displayed, eliminating the need to first enter the carrier frequency and read its error. The acquired signal is measured to a frequency resolution of 1 Hz.

The RF signal input, either from the ANT or from the RF I/O port, may be displayed. The analyzer scans a specified frequency range to automatically acquire and tune to an input signal from 20 MHz to 999.9999 MHz.

Tuning typically occurs within 5 seconds. For faster acquisition, limit the scan range to 100 MHz increments. This is done by setting the High and Low range limits to narrow the scan range. Move the cursor to the desired Hi or Lo range field in the Meter portion of the screen. Select the range desired either by using the numeric keypad or the optical TUNING knob.

NOTE

The range of values for the low range setting is from 0 to 9 (x 100 MHz). The range of values for the high range setting can be from 0 to 10 (x 100 MHz), with the 10 implying maximum frequency range, or 999.9999 MHz.

Minimum input signal level for automatic frequency acquisition is -30 dBm at the antenna port and +20 dBm at the transceiver port. When the input signal is removed, the scanning operation will resume.

When scanning, the "Freq:" field within the RF Control zone indicates **scanning**. When a carrier is acquired, this changes to **metering**. The actual measured frequency is displayed in the Meter zone along with modulation and level data as described above for RF Display.

3-7.1.3 AC/DC Voltmeter

The analyzer provides a general purpose AC/DC digital voltmeter (figure 3-14). The voltmeter input is the same front panel BNC port that also serves as the input for the SINAD/DIST meter, the VERT oscilloscope input, and the frequency COUNTER IN.

Move the cursor to the "Range:" field. Select either auto-ranging or a specific voltage range (AUTO, 1V, 10V, or 100V DC) by pressing the applicable softkey. Maximum AC range is 70 VAC. If the optional battery pack is installed, an additional selection is available to read the battery voltage.

CAUTION

The maximum analyzer input voltage is 42.4 volts peak AC or 60 volts DC.

The data portion of this screen will show a horizontally oriented bar graph for an analog indication along with a digital readout of the measured voltage (up to 4 digits resolution).

In the AC mode, the measured input is also displayed in dBm, referenced to 1mW into 600 ohms.

NOTE

*Optional "C" message or CCITT filters, along with a 600 ohm load, are available for selection at the ACVM, SINAD, and Distortion meter inputs. If your unit is equipped with one of these, they are selectable through the Special Function screen (refer to section 3-8.5). If one of these is selected an appropriate message will appear on the message line just above the softkey labels. **CAUTION: Selection of either filters or load can affect readings within these meter functions.***

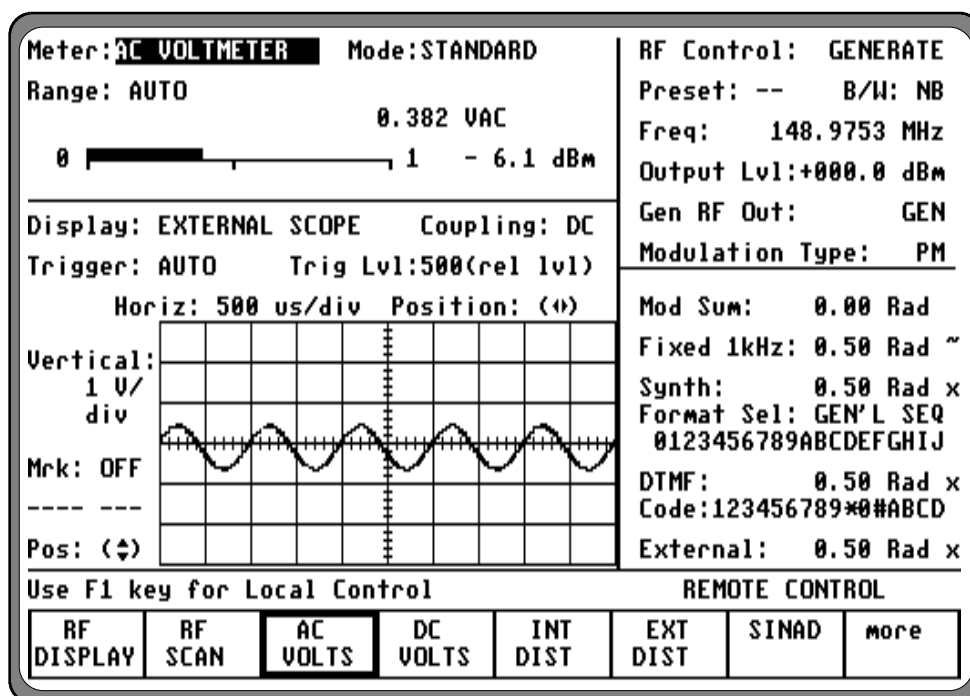
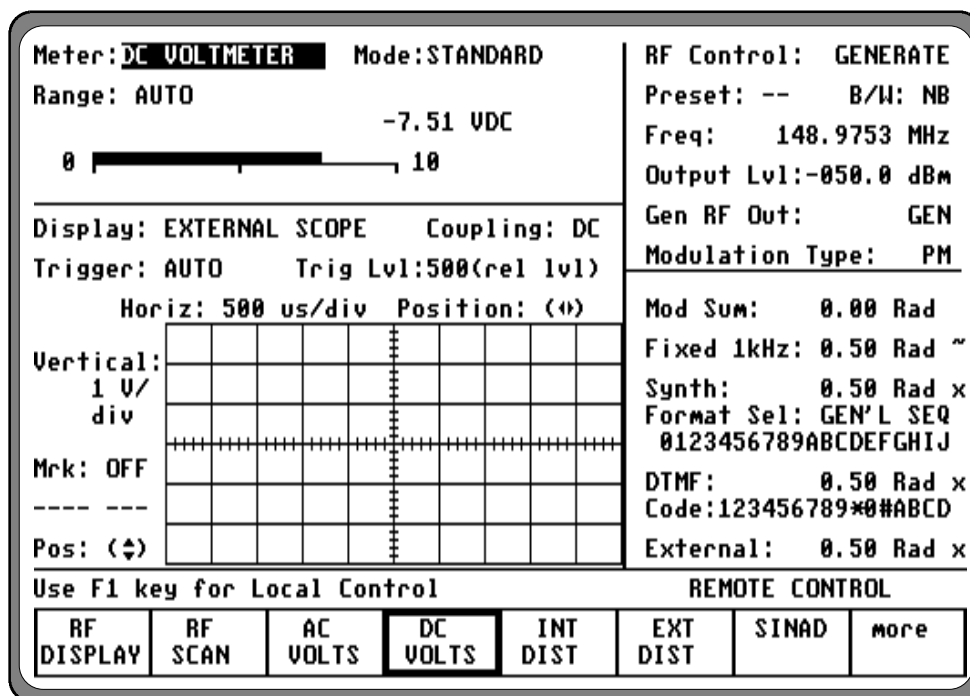


Figure 3-14. Digital Voltmeter Screens

3-7.1.4 INT DIST/EXT DIST Meter

The internal and external distortion meter are selectable via softkeys located within the "Meter:" field in the Display zone. Display consists of a digital readout and bar graph. Distortion is used to measure the audio quality of the transmitter and receiver modulation. The distortion meter is selectable via softkey between internal (coupled from the monitor demodulated signal) and external (through the DIST input on the front panel).

The distortion meter operates only at the fixed frequency of 1 kHz.

3-7.1.5 SINAD Meter

The SINAD meter is selected within the "Meter:" field in the Display zone. Display consists of a digital readout and bar graph. SINAD is used in making receiver sensitivity measurements per EIA specifications using a fixed 1 kHz modulation frequency.

Internal coupling for SINAD is not provided; input is always via the external BNC port on the front panel.

NOTE

*Optional "C" message or CCITT filters, along with a 600 ohm load, are available for selection at the ACVM, SINAD, and Distortion meter inputs. If your unit is equipped with one of these, they are selectable thru the Special Function screen (refer to section 3-8.5). If one of these is selected an appropriate message will appear on the message line just above the softkey labels. **CAUTION:** Selection of either filters or load can affect readings within these meter functions.*

3-7.1.6 Counter and Decoding Functions

The following are all accessed via softkey through the "Meter:" field within the Display zone. Their inputs are all normally internally coupled to the monitor demodulated signal for

either direct or "off-the-air" testing. If use of these functions is needed for an externally applied signal, the Special Functions screen, under SYSTEM FUNCTIONS, provides a means of switching the input of the Counter/decoder from Internal to External.

These screens contain a "Sensitivity:" field where MIN or MAX may be selected via softkey. This provides a means to desensitize the counter/decoder circuits, if needed to properly measure very high level signals. Under normal operation, this field should be set to MAX.

Cursor fields are provided to access the units low-pass and high-pass baseband filter sections. Filters may be used to remove unwanted voice modulation, etc. which may interfere with decoding the PL signals. Baseband filters apply only to internal coupling.

CAUTION

Entries into the high and low pass areas of this screen write information into the Special Functions screen and memory. To avoid problems with other modulation measurements, make sure settings are set to original values before leaving these screen areas.

The display exhibits a digital frequency and equivalent PL code if applicable. Refer to Appendix B for valid codes.

PL/PER Counter

This softkey provides a convenient means of measuring the frequency of Motorola Private-Line (PL) or any other low frequency audio tones with 3 digit resolution. Period measurement makes it possible to measure low frequencies down to high resolution without the need for the long gate times associated with frequency counting.

CAUTION

Do not input frequencies above 400 kHz to the period counter. Slow down of system operations will result.

DPL Decode

This softkey provides decoding for valid Motorola Digital Private-Line (DPL) codes. Refer to Appendix B for applicable codes. Selection of high and low pass filters may be made from this screen as previously described.

DTMF Decode

This softkey provides a means of decoding DTMF (Dual Tone Multi Freq) signaling for testing telephone interfaced systems. A "reset" softkey clears the display.

FREQ CNTR

This softkey provides a general purpose frequency counter (figure 3-15) for Audio and IF frequency measurements up to 500 kHz. For RF frequency measurements, use the MON function.

The "Resolution:" field provides selection of auto ranging or selectable gate times which provides up to 0.1 Hz resolution (0.1 Hz resolution requires 20 sec gate time). The symbol to the right of the display is an indication of when gating occurs.

NOTE

Selection of any of the General Sequence, 5/6 or Select V decoding functions produces an overwrite display table. To exit this display an alternate selection must be made from the "Meter:" field of the Display zone.

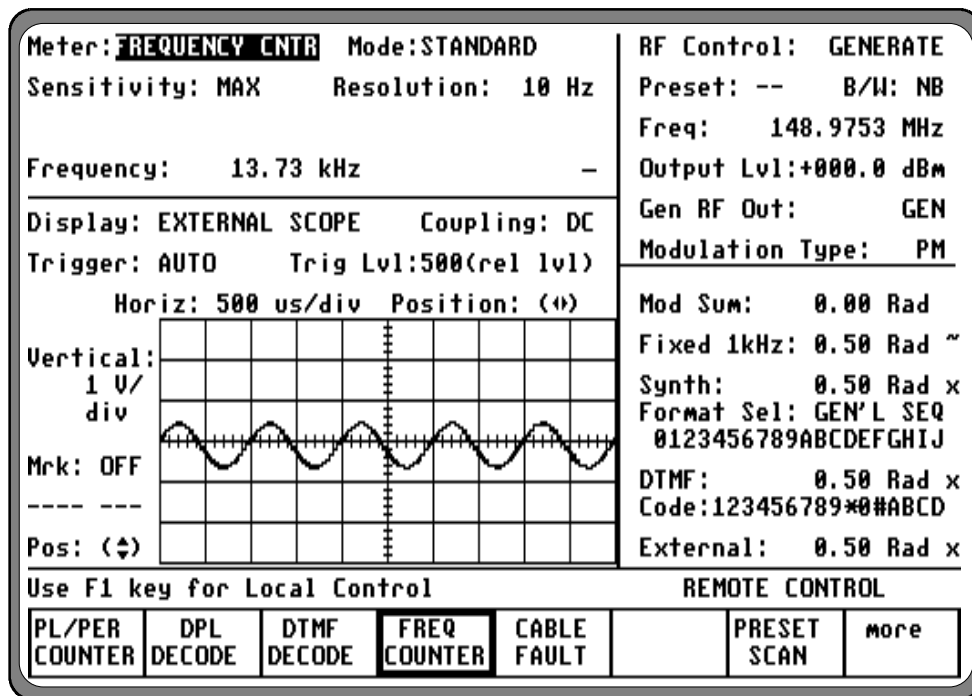


Figure 3-15. Frequency Counter

3-7.1.7 CABLE FAULT (if equipped)

This feature provides the capability to test 50 ohm RF cables for damage or mis-terminations through a simple connection to the input of the cable. It employs the analyzer's Sweep Generator capability to sweep the cable under test and observe any standing wave pattern caused by mis-termination. Analysis of this standing wave pattern on the scope display and the marking of two adjacent nulls in this pattern allows the analyzer to compute the distance to a fault or mis-termination. The cable fault feature is accessed by softkey from the "Meter:" field

location in the Display zone as shown in figure 3-16. This automatically selects the appropriate displays in the RF Control and Display zone. The main operation of this feature is controlled thru the "Meter:" field, but the "Rng:", "Output Lvl:" and "Vertical:" fields from the other zones must be adjusted for a proper sized screen display depending on the test frequency and type of fault under test. When these have been adjusted, the test is run from the "Cen Freq:" field in the "Meter:" zone. Refer to section 4-3 in the applications section for a more detailed description of running the test.

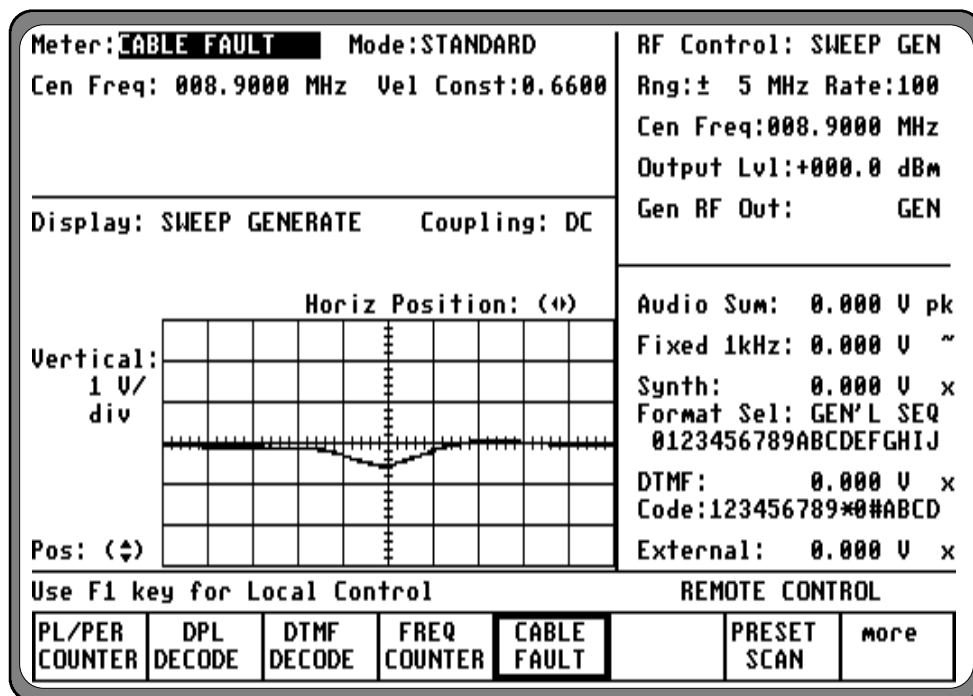


Figure 3-16. Cable Fault Screen

3-7.1.8 GENERAL SEQ DECODE

This softkey provides a free-form decoding function for individual frequency and time duration of tone sequences up to 20 tones. Selection of this mode overwrites the entire display section of the screen and provides a detailed display of data. Start and stop softkeys are used to control the decoding function.

5/6 Decode

This softkey provides a decoding function for 5/6 tone high capacity tone paging systems. Selection of this mode overwrites the entire display section of the screen and provides a detailed display of data. Start and stop softkeys are used to control the decoding function.

SEL V Decode

This softkey provides a decoding function for a number of standard international Select V sequential tone signalling formats. Selection of this mode overwrites the entire display section of the screen and provides a detailed display of data. A "Sequence Select:" field is provided within formats (ZVEI, ZVEI MOD, ZVEI FRENCH, CCIR STD, CCIR 70ms, EEA) which are selected by softkey. Start and stop softkeys are used to control the decoding function.

Handshake

Handshake testing is also provided through an additional start HANDSHK softkey. This links the SELECT V encode sequence selected in the Audio zone to the decode screen. Pressing the start HANDSHK key will send a SELECT V tone burst from the decode screen which will then decode the resulting response from the radio.

3-7.1.9 Preset Scan (if equipped)

The analyzer provides a preset scan function in which the preset monitor frequencies stored in the RF memory are continually scanned. The analyzer scans through the preset frequencies, stopping and dwelling on a channel whenever the receiver squelch is broken. When the receiver becomes squelched again, scanning resumes. All 30 preset monitor frequencies, or a subset consisting of a continuous block of frequencies, can be scanned. When no signals are detected, the analyzer scans through all 30 preset frequencies in less than 1/2 second. If the number of frequencies is reduced, the scanning process is faster. RF signals to be scanned can be input from either the ANT or RF I/O ports.

To activate the Preset Scan function, press the **PRESET SCAN** softkey (figure 3-17). This key not only begins the preset scanning but also serves as a "continue key" to temporarily skip past a channel with heavy radio traffic. When the analyzer is locked on a preset frequency and you wish to continue scanning, although the signal is preset, press the **PRESET SCAN** softkey again. This continues the scanning with the next preset frequency in the memory table. Pressing the **PRESET SCAN** softkey only skips over the frequency once; if radio traffic is still present on that frequency the next time that it is scanned, the analyzer will stop and dwell once again.

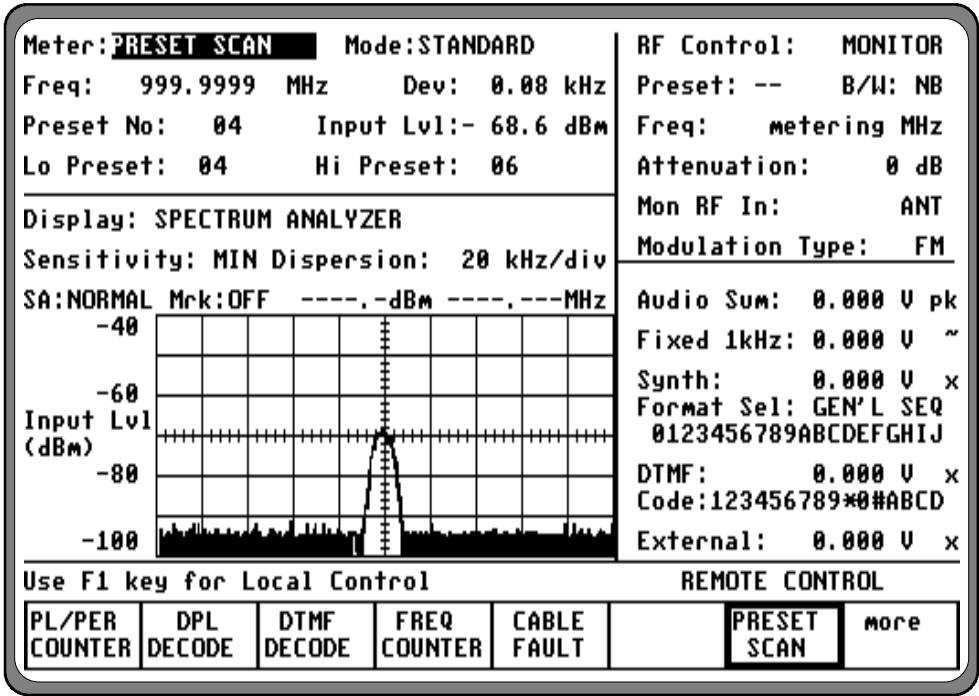


Figure 3-17. Preset Scan

The number of preset frequencies to be scanned can be limited by using the Low Preset and High Preset fields in the meter zone. Entries in these fields will cause the analyzer to only scan from the low preset number to the high preset number. By carefully arranging the preset frequencies in

the RF memory into related groups, you can make maximum use of the Low Preset and High Preset scan limiters. For example, a particularly busy preset frequency which is causing the analyzer to stop scanning and dwell for long periods of time can be removed from the scan list

by moving it within the RF memory table to a location just above or below the preset numbers being scanned.

It is recommended that frequencies in the RF memory table be grouped according to their modulation type and bandwidth because these parameters must be manually changed in the analyzer's RF Control zone. If an AM frequency (e.g. aircraft band) is intermixed with FM frequencies (e.g. public service band) in the scan list and the analyzer is set to FM mode, radio traffic on the AM frequency will cause the scanner to lock, but the received audio will be unintelligible and the modulation measurement meaningless.

Because breaking the receiver squelch causes the analyzer to stop scanning, it is important to properly adjust the squelch control. If the squelch is adjusted too loosely (counterclockwise rotation of the squelch knob), it is possible that desired signals will not be strong enough to break the squelch and the analyzer will not stop and dwell on the channel. To adjust the squelch control for proper scanning operation, turn the squelch control fully counterclockwise and activate the Preset Scan mode. The analyzer will not scan because it will lock on the first frequency due to the squelch being open. Now slowly rotate the squelch control clockwise, just until the squelch light goes out, the noise in the speaker stops and the unit begins to scan. If an actual signal is received while the squelch is being adjusted, wait until it ends before resuming the adjustment. For maximum sensitivity, the squelch level should be adjusted as loose as possible (counterclockwise) without being broken by receiver noise.

To halt the scanning operation at any time, press the **RF DISPLAY** softkey. This stops the scanning process and leaves the analyzer locked onto the last scanned frequency prior to the key press.

NOTE

When the unit is in the Preset Scan mode, the response time to key presses will be somewhat slower than normal. For best results, it is recommended that you do not leave Preset Scan active when it is not being used.

3-7.2 Display

Any of the following graphic data displays can be selected for simultaneous display along with the previously discussed meter displays. Select using softkeys from the "Display:" field in the Display zone.

3-7.2.1 Spectrum Analyzer

The Spectrum Analyzer (figure 3-18) is active in the MONITOR or DUPLEX modes. Move the cursor to the "Display:" field within the Display zone.

Select SPECTRUM ANALYZER by pressing the softkey. The input frequency spectrum is displayed in a frequency-versus-amplitude (dBm) graph. Either the ANT or RF I/O port may be selected for input from the "RF Control:" zone. The amount of input attenuation may also be selected within the zone to vary the sensitivity of the Spectrum Analyzer.

If a larger display area is desired, press the expand softkey. (A return softkey is available in the expanded mode allowing return to the normal display).

NOTE

If SPECTRUM ANALYZER is selected while "RF Control:" is in the GENERATE mode, the spectrum analyzer will be disabled and the background will show the message Spectrum Analyzer Disabled in Generate Mode. If SPECTRUM ANALYZER is selected while RF CONTROL is in the SCAN mode, the spectrum analyzer will be disabled and the background will show the message scanning.

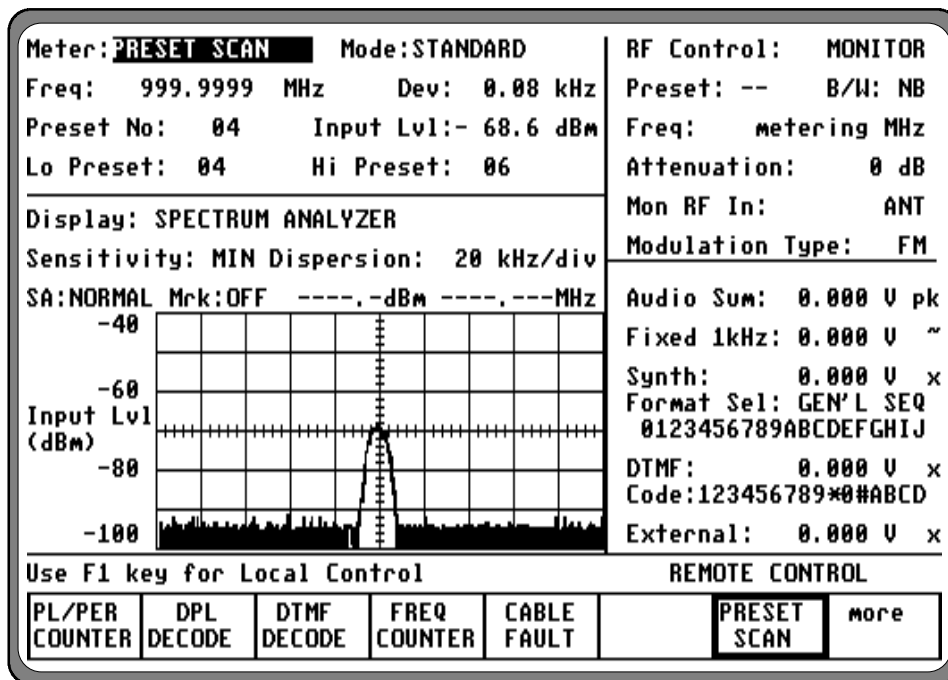


Figure 3-18. Spectrum Analyzer

Sensitivity

The SA "Sensitivity: MIN/MAX" field shifts the baseline reference of the display by 10 db. This is valid only for 0 db input attenuation. Changing the input attenuation or changing from ANT to RF I/O port in the RF Control zone will change the vertical scale of the Spectrum Analyzer display. Calibration is maintained between the display and the signal level present at the input port so there is no need to compensate for added attenuation.

Dispersion

Select the band width (20 kHz, 50 kHz, 100 kHz, 200 kHz, 500 kHz, 1 MHz, 2 MHz [optional], 5 MHz [optional], or 10 MHz [optional] per division) by first moving the cursor to the dispersion field, then pressing the desired softkey. When operating in the optional wider dispersion settings, it is normal for the response time of the analyzer to slow down somewhat. Center frequency is entered from the RF Control zone and may be conveniently varied with the TUNING knob.

NOTE

When operating in dispersions greater than 1 MHz/div, the normal monitor metering functions including "see and hear" audio monitoring are disabled.

Storage (if equipped)

Optional Storage modes (FREEZE, MAX HOLD, and PEAK HOLD) are selected by moving the cursor to the "SA:" field, then pressing the desired softkey.

Freeze -

Pressing this softkey provides immediate storage of a spectrum display. This allows capture of intermittent transmissions etc. for more detailed analysis. To return to normal "real time" analysis, simply press the NORMAL softkey.

Max Hold -

This softkey provides a cumulative storage of peak levels displayed over time. The time duration is indefinite subject to reset by pressing the NORMAL softkey.

The Max-Hold display can be frozen by switching to the Freeze mode. To re-start the max-hold operation, re-select the Max-Hold mode. In any case, this causes the Max-Hold feature to re-initialize and begin collecting input samples.

Peak Hold -

This key provides a cumulative storage capability similar to MAX HOLD. It differs in that in addition to peak responses, the lower portions of the display are also shown to permit observation of "real time" activity.

Average Mode -

Operation in the Average mode continuously averages the previous 100 spectrum analyzer measurements and displays the averaged value. After averaging has been selected, the number of frames used in the averaging calculation will be displayed in the "Cnt:" field.

Markers (if equipped)

Select marker operation by moving the cursor to the "Mrk:" field, then pressing the desired softkey (OFF, DELTA, or ABS). Selection of DELTA (Δ) provides two markers on the SA screen (refer to figure 7-19). These permit relative measurement, between selected points on the display, of both level and frequency. The

dotted marker line represents one that is movable using the Tuning Knob. Set this marker to a point of interest on the display and then press the "toggle marker" softkey to make the other marker movable for similar positioning with the Tuning Knob. Digital displays adjacent to "Mrkr:"

continuously show the relative level and frequency difference between the two points selected. Selection of ABS (absolute) mode provides one marker set using the TUNING knob. Absolute frequency and power level of the marker location is displayed.

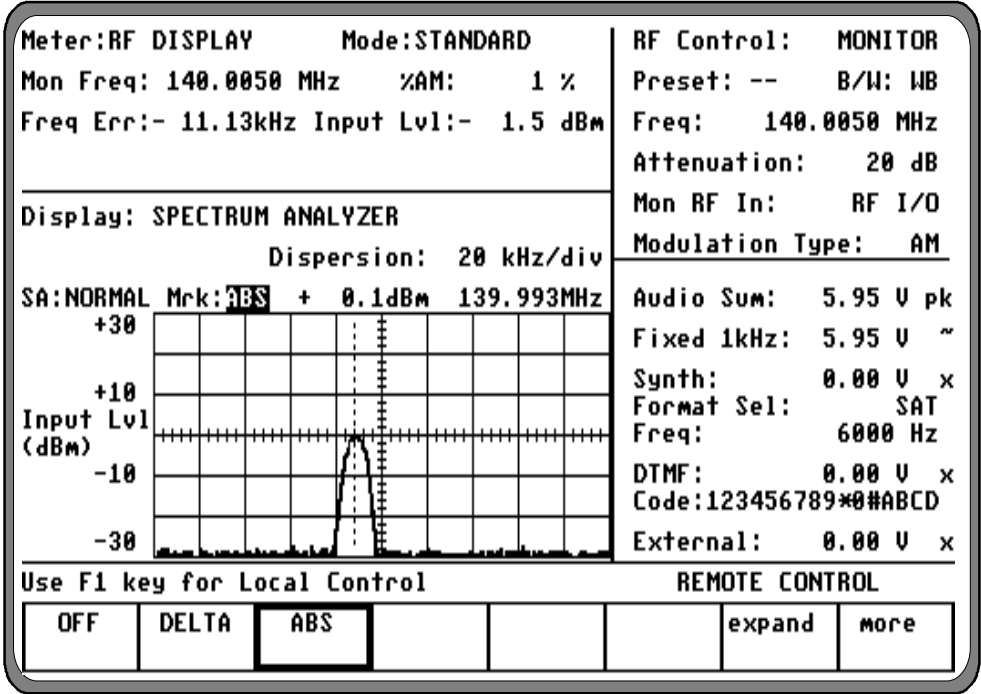


Figure 3-19. Spectrum Analyzer Markers (Option)

In conjunction with the markers are a set of softkey controls that allow the dashed marker to be moved depending upon the information displayed on the graph. These controls are available for both the DELTAT and ABS marker selections by pressing the more softkey.

The spectrum analyzer mode and marker functions are available in the expanded display graph. The provided functions are identical to those found in the normal size display. Normal to expanded screen selections may require readjustment of the markers positions.

left peak

Finds the next highest peak to the left of the current position of the dashed marker.

max peak

Find the maximum peak on the graph.

right peak

Find the next highest peak to the right of the current position of the dashed marker.

next peak

Find the next highest peak to the left or right of the current position of the dashed marker.

center freq

Move to the center frequency of the spectrum analyzer. This is equivalent to centering the dashed marker on the monitor frequency.

3-7.2.2 Modulation Scope

The Modulation Scope (figure 3-20) displays the internal modulation waveforms. It automatically switches between generator or monitor modulation depending on which mode is selected.

In DUPLEX mode, select either generate or monitor modulation displays by first moving the cursor to the "Select:" field within the Display area, then pressing the desired softkey.

The Display area of the screen will indicate MODULATION SCOPE with the input signal displayed in a time-versus-frequency graph.

NOTE

Because the analyzer has a fully digital oscilloscope (storage scope), it inherently has some characteristics which are different from the "real-time" analog scopes familiar to most users. For best overall results, it is recommended that the trigger level be set to 500 and the triggering be set to AUTO.

To change triggering, horizontal position, horizontal range, vertical position, or vertical range, use the cursor control keys to highlight the appropriate cursor fields as follows:

Trigger

Press the AUTO, NORMAL, or SINGLE SWEEP softkey to select the type of triggering desired. The trigger level synchronizes the horizontal time base to the vertical input signal.

In AUTO mode, the scope will trigger continuously. In this mode, the analyzer will always re-sweep the display even if there is no signal present. The rate will be about 1 per second with no signal present and about 10 per second with signal present.

In NORMAL mode, the scope will trigger when the vertical signal exceeds the trigger level set. In NORMAL mode the analyzer will re-sweep at a rate of 10 per second, with the last screen display remaining after removal of the signal.

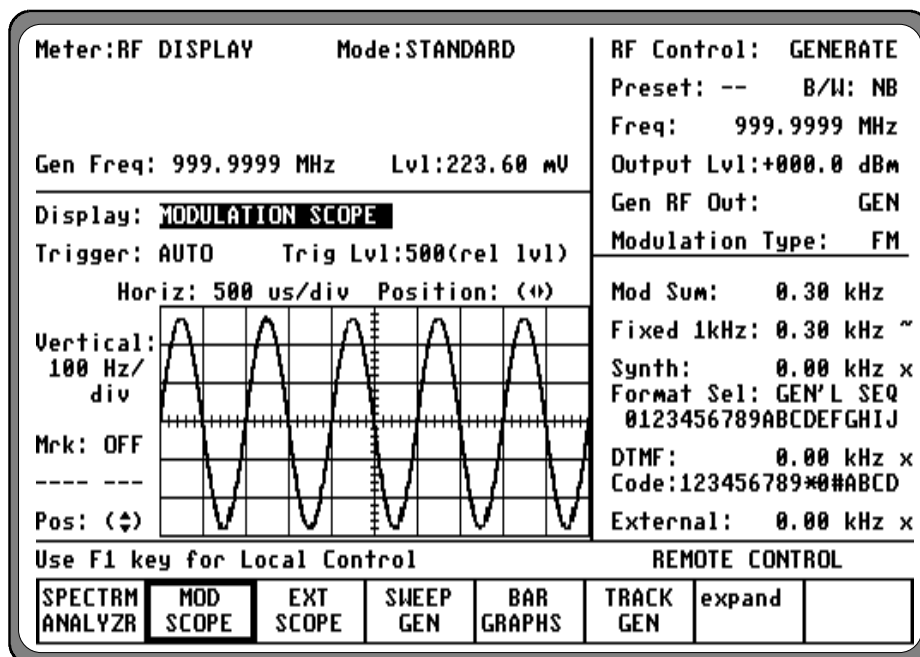


Figure 3-20. Modulation Scope

In SINGLE SWEEP mode, the scope will trigger one time for each softkey press, subject to the trigger level setting (triggering always occurs on the rising portion of the applied waveform). Messages on the line just above the softkeys indicate the status of the single sweep. The single sweep is useful in measuring one-time events, such as a tone burst at the beginning of a transmission. Such bursts may be followed by other modulation which would over-write the screen if measured in the NORMAL trigger mode.

Level

Adjust the TUNING knob to select the desired trigger level. The trigger level is a relative level setting between the values of 0 and 999 (full scale) where 0 is the most negative and 999 is the most positive voltage.

NOTE

To achieve the fastest update rate of the display a trigger level setting of 500 is recommended for most applications.

Horiz

Press the desired softkey to select the Horizontal Sweep rate (20 us to 1 sec/div). Since all ranges cannot be shown on one screen, press the **more** softkey for additional selections.

NOTE

If horizontal sweep rates of greater than 10 msec/div are selected, the update rate will slow down. A good overall setting for most applications is 200 usec per division.

Horizontal Position

Adjust the horizontal position through the (◀▶) cursor field either by using the desired softkey (MOVE LEFT, MOVE RIGHT) or by using the rotary TUNING knob.

Vertical Sensitivity

Press the desired softkey to select the Vertical Sensitivity (AM: 1%, to 50% per division, FM:

100 Hz to 50 kHz per division, dependent on bandwidth selected). When all ranges cannot be shown on one screen, press the more softkey for additional selections.

NOTE

The vertical scales and softkeys for FM deviation will change automatically between wide-band and narrowband.

Vertical Position

Adjust the vertical position through the (⬆⬇⬆) cursor field either by using the desired softkey (MOVE UP, MOVE DOWN) or by using the rotary TUNING knob.

Press the expand softkey from any field in the scope display window to enlarge the display for more detailed analysis. Use the return softkey to get back to the normal size display.

NOTE

Scale and positioning adjustments are not possible for stored waveforms that are displayed through the use of single sweep or triggering on single non-periodic signals.

Marker (if equipped)

Select marker operation by moving the cursor to the "Mrk:" field, then pressing the desired softkey (ΔV , ΔT , or $1/\Delta T$). Selection provides two markers on the Modulation Scope screen (refer to figure 3-21). Function of the "toggle marker" softkey and Tuning Knob for positioning of markers is similar to that described in section 3-7.2.1.

ΔV -

This softkey selection provides markers that are horizontally located to permit relative readings along the scope vertical axis. The display adjacent to the "Mrk:" field shows the relative vertical deflection between the two marker positions.

ΔT -

This key selection provides markers that are horizontally located to permit relative readings along the scope vertical axis. The display adjacent to the "Mrk:" field shows the relative horizontal deflection between the two marker positions in units of time.

$1/\Delta T$ -

This softkey selection provides markers that are also vertically located to permit relative readings along the scope horizontal axis. This selection however inverts the time reading to display the relative difference in terms of frequency.

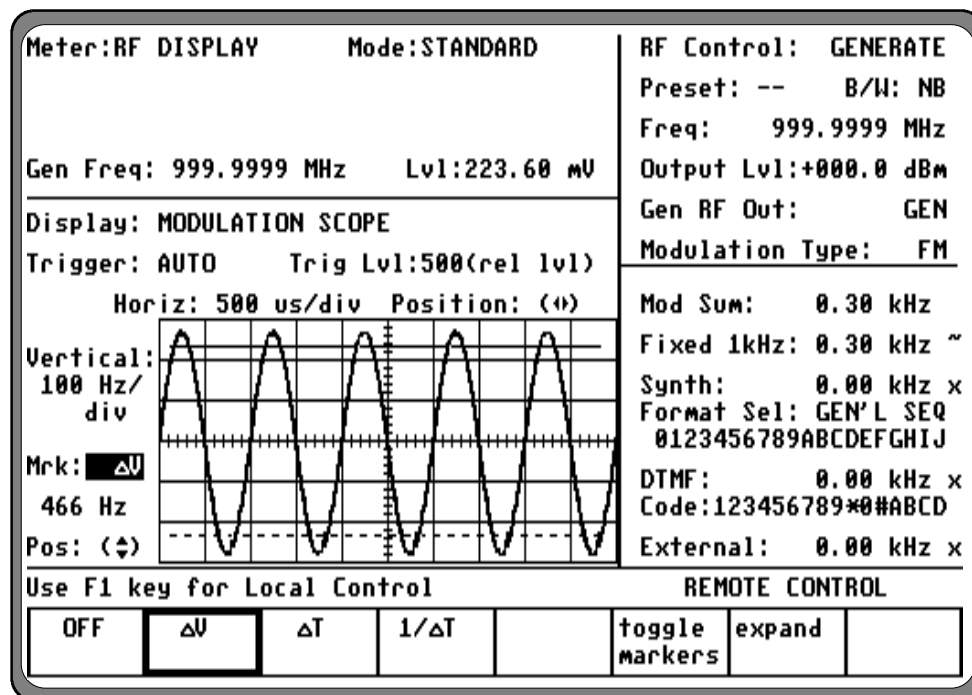


Figure 3-21. Modulation Scope Markers (Option)

3-7.2.3 EXT'L SCOPE

The analyzer provides a general purpose oscilloscope with calibrated vertical input sensitivities and automatic or triggered horizontal sweep rates. Use the scope to analyze waveforms, detect asymmetric modulation or audio distortion, trace signals, and troubleshoot.

The vertical (VERT) input is the same BNC port that also serves as the input for DVM, SINAD/DIST meter, and COUNTER IN.

The EXT'L SCOPE mode has an additional cursor field to select "Coupling:" AC or DC via softkey selection. Operation of triggering, ranges, trace positioning and optional markers are the same as described in MODULATION SCOPE above. Vertical ranges will always display in voltage per division in the EXT'L SCOPE mode.

3-7.2.4 SWEEP GENERATE

This display provides a graphic display in conjunction with the SWEEP GENERATE mode of the unit which is selected in the RF Control zone or selection of the optional cable fault test feature.

Refer to Sweep Generator description under Primary Operating Modes (paragraph 3-5.4).

To change coupling from AC to DC, or vary horizontal position, vertical position, or vertical sensitivity, move the cursor to highlight that selection. Use the softkeys or TUNING knob, as applicable to each selection.

3-7.2.5 Bar Graphs

The bar graphs (figure 3-22) provide a graphical display of the RF Display data from the Meter area of the screen.

Press the expand softkey to expand the bar graphs to the full display area of the LCD (figure 3-22). If the modulation type is FM, the BAR GRAPHS mode has an additional cursor field to select "Dev Avg:" PEAK AVERG, RMS AVERG or NORM via softkey selection. The setting activates either the Peak averaging or RMS meter or normal peak detection on the deviation measurements. The PEAK AVERG computes a numerical average of peak detection measurements, the RMS AVERG uses a RMS meter to compute the deviation, the NORM use a instantaneous peak detection measurement. Note the "Dev Avg:" cursor is not available in modulation types, AM or PM.

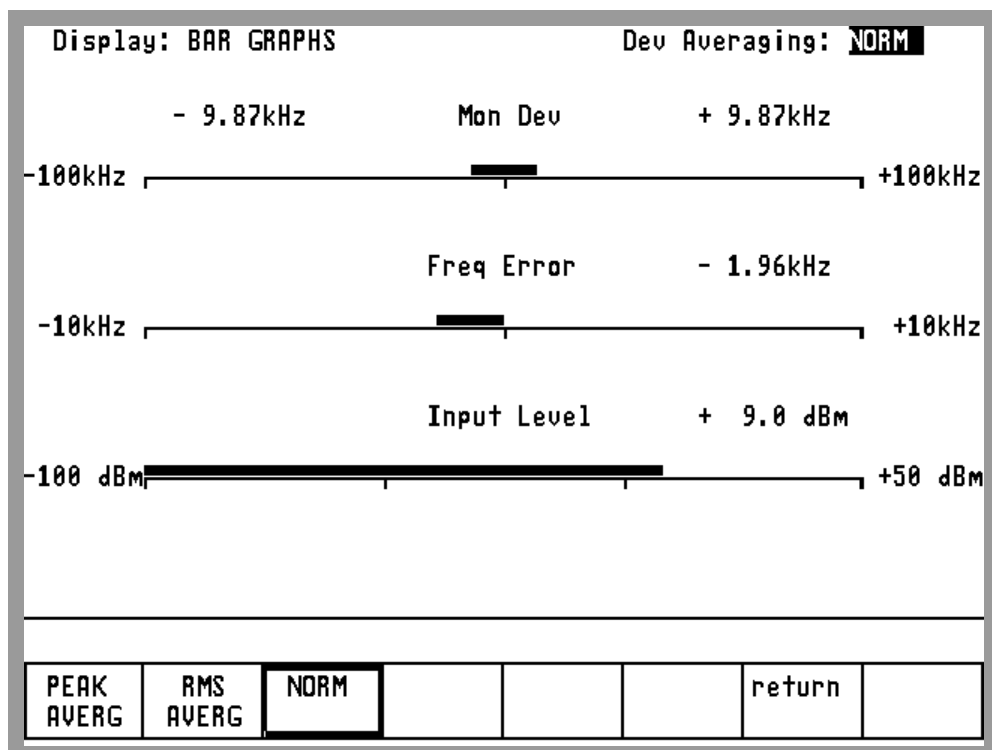
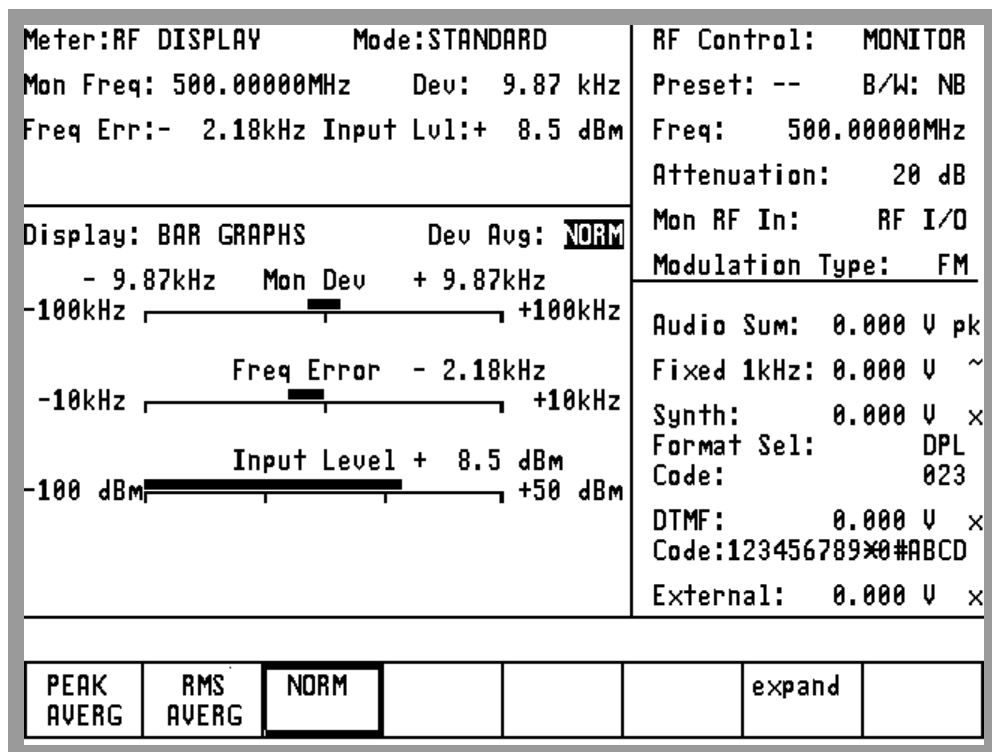


Figure 3-22. Bar Graphs

NOTE

The Freq. Error bar graph is not available if RF SCAN, PL/PER COUNTER, DPL DECODE or FREQ COUNTER are selected in the "Meter:" field area. Selection of the expand key restores the Freq. Error Bar Graph under the above condition.

3-7.2.6 Tracking Generator (if equipped)

This display must work in conjunction with the TRACK GENERATE mode which is selected thru the "RF Control:" field of the RF zone. Refer to section 3-5.5 for a full description of Tracking Generator operation.

3-8 OTHER FUNCTIONS

3-8.1 Audio Monitor

The Analyzer has a speaker for the purpose of audibly monitoring the recovered baseband signal in the MONITOR and DUPLEX modes and the modulating signal in the GENERATE mode. Switching between the two is automatic.

Using the VOLUME control, the input signal to the speaker is adjustable to a maximum level of 0.5 watts rms.

The speaker is also used for audible warnings, such as RF overtemperature.

3-8.2 Calibration

Calibration of the Analyzer is performed by the following steps.

1. Press the CAL key to instruct the processor to perform a self-calibration on the system. The CAL function provides a self calibration of the unit's RF generator output level, the monitor input level and the modulation level. All other parameters are not subject to this self-calibration.

This assures the unit's specification accuracy under conditions of ambient temperature extremes and aging. Re-calibration is recommended at weekly intervals or when the re-calibrate warning appears on the screen.

CAUTION

Before starting self-calibration be sure that the 50 ohm load, attached by chain to the front panel, is connected to the GEN OUT port. This provides the termination which is essential to proper calibration. Also ensure all connections to the RF I/O and ANT connectors are removed.

2. Press the START softkey to begin the calibration. While the calibration is active, the message **calibrating** appears.
3. When the calibration has been performed, the message **complete** appears. Press the return softkey or a cursor control key to return to the previous screen.

3-8.3 Print Function

Press the PRT key to send the data contents of the displayed screen to a compatible RS-232 serial format printer or to a compressed graphics file stored on a PC. ASCII character (faster printing), EPSON/IBM printer graphics, or compressed graphics print can be selected.

If ASCII is selected (refer to Special Functions Menu to select REMOTE SETUP and Display Table), all ASCII characters currently on the display are stored in a buffer and serially output to an RS-232 printer. Selection of IBM/EPSON results in a graphic printout of the screen (requires a graphic printer and takes longer to print). If GRAPHIC DUMP is selected, a compressed file of the screen can be generated. This print mode is used with a special print application executing on a PC. Once the compressed file is captured by PC, the file can be printed using the PC's printer resources.

NOTE

Subsequent presses of the PRT key before printing is complete will overwrite the printer buffer.

If using the LX-810S/220 (220 volt operation) serial/parallel printer with the Analyzer, refer to paragraph 4-5 for a special application note.

3-8.4 Special Functions Menu

The Special Function mode (figure 3-23) accessed by pressing the SPF key, provides control over various system conditions as follows:

Version

Accesses a display table which provides the internal software version and checksum for the system and any options present.

Remote Setup

Accesses a display table which allows configuration of the RS-232 and printer interface.

System Functions

Accesses softkeys to select the following:

NVM Clear

This softkey erases the entire RF Preset memory area and front panel CAL memory. The Analyzer must be recalibrated after this key has been pressed.

NVM Reset

This softkey provides a less extensive system reset than NVM Clear. CAL and preset memory are not erased.

Save State

Sets the current condition and settings of the unit as the power up state.

SPECIAL FUNCTIONS MENU							
VERSION							
REMOTE SETUP							
SYSTEM FUNCTIONS							
ENABLE Generate Mode Speaker							
DISABLE SINAD Audio							
ENABLE Auto Switch to MON if >0.1W							
INTERNAL INPUT Decoding							
Display Timeout Interval: 030 min							
Deviation Level Alarm: 00.0 kHz							
High Pass: 5 Hz							
Low Pass: 20 kHz							
20kHz for Wide Band							
3kHz for Narrow Band							
600 Ohm Metering: 1 MEGOHM Filter: NONE							
			reset SPFs		display table	return	

Figure 3-23. Special Functions Menu

NOTE

When any of the following special functions are selected, the normal operating screens will flash a warning SPF Enabled at the lower right of the screen. This serves as a reminder since special functions inadvertently left enabled can adversely effect normal operation of the unit.

SPF Reset

This softkey appears throughout the Special Function screen as a convenience in resetting of all special functions from System Functions through Low Pass Filter to the factory standard state. This will switch all decoding to internal and provide the widest filter bandwidth.

Enable/Disable Generate Mode Speaker

Provides the means to disable the internal speaker during generate mode.

Enable/Disable Sinad Audio

Permits the routing of the signal at the VERT/SINAD connector to the speaker while in sinad metering and generate mode. Note that if both Sinad Audio and Generate Mode Speaker Audio are enabled, the summed audio is routed to the speaker.

Enable/Disable Auto Switch to MON if >0.1 W

Allows the unit to automatically switch to the MONITOR mode when power levels greater than 0.1 watt are applied to the RF IN/OUT front panel connector.

Internal/External Input Decoding

Switches the decoder function between the internal monitor demodulated signal and the signal at the VERT/SINAD front panel connector.

Display Timeout Interval

Permits the entry of the timeout interval to blank the screen after a period of no inputs (key or tuning knob) from the operator.

Deviation Level Alarm

Allows entry of the deviation level for the audible deviation limit alarm in MONITOR mode.

High Pass

Provides softkey selection of monitor baseband high pass filter frequency.

Low Pass

Provides softkey selection of monitor baseband low pass filter frequency.

600 Ohm Metering(Optional)

Allows the user to select input impedance (1 megohm or 600 ohm) of the ACVM, SINAD, and Distortion functions.

CAUTION

When the 600 ohm load is selected, the maximum allowable input to these metering functions is reduced to approximately 25 VAC maximum due to power dissipation limits. Overload protection is provided by means of a reset circuit that monitors input level and switches the 600 ohm load when the maximum input level is exceeded. If this occurs, simply remove the overload and activate the OVERLOAD RESET softkey located at the "600 ohm metering:" field of the Special Function Screen.

Filter (if equipped)

Allows the user to enable/disable internal C-MSG or CCITT filters.

3-8.4.1 Special Function Selection

To select a special function follow the following procedure.

1. Press the SPF key to display the special functions menu on the display.
2. Move the cursor to highlight the field of the function desired. Applicable softkeys
3. Use the softkeys to make selections. Levels may be set using the TUNING knob or keypad.
4. Press the return key to return to the previous screen.

3-8.5 Memory Screens

The Memory screens provide for viewing and entry of preset data into non-volatile memory. The actual selection of a preset number for operation of the system can only be done from the RF Control zone.

Pressing the MEM key accesses the top-level memory display (figure 3-24) which shows the 30 presets (00-29) and the monitor frequency associated with each. A second level screen provides an expanded detail of the settings stored within each preset.

To change the preset memory information, perform the following steps:

1. Press the MEM key to access the special Memory screen.
2. Move the cursor to the desired preset number. When the cursor is over the preset number, press the view preset softkey to display all of the preset's parameters. When a preset has been expanded, the operator may change:
 - The preset number being viewed
 - Monitor frequency
 - Generate frequency
 - Modulation type

- Bandwidth
 - Duplex offset frequency
 - Audio synthesizer format with applicable frequency, code or sequence
 - DTMF code
3. To clear a particular memory field (except the monitor frequency) press the 'don't care' softkey. The value associated with that cursor location become a "-", and will not affect the current setting when that preset is selected from the RF Control zone.
 4. All entries made to the expanded preset table are automatically entered into non-volatile memory. The save to preset soft key provides an added convenience allowing all of the applicable settings entered into the RF Control and Audio Control zones to be copied into the preset number selected. This will erase and overwrite all previously entered settings within that preset.
 5. Press the 'return' key to return to the previous screen.

MEMORY		Current Preset --	
	Mon Freq (MHz)		Mon Freq (MHz)
001	475.0000	151	999.9999
011	162.0009	161	999.9999
021	080.5000	171	999.9999
031	999.9999	181	999.9999
041	999.9999	191	999.9999
051	999.9999	201	999.9999
061	999.9999	211	999.9999
071	999.9999	221	999.9999
081	999.9999	231	999.9999
091	999.9999	241	999.9999
101	999.9999	251	999.9999
111	999.9999	261	999.9999
121	999.9999	271	999.9999
131	999.9999	281	999.9999
141	999.9999	291	999.9999

Use F1 key for Local Control					REMOTE CONTROL		
save to preset#	recall preset#				view preset	return	

MEMORY		Current Preset	
Preset: 02			
Monitor Frequency:	080.5000 MHz		
Modulation Type:	FM		
Generate Frequency:	999.9999 MHz		
Modulation Type:	FM		
Bandwidth:	NARROW		
Duplex Offset:	+00.000 MHz		
Synth Format Sel:	PL		
FREQ:	100.0 Hz		
DTMF Code:	-----		

Use F1 key for Local Control					REMOTE CONTROL		
save to preset#						return	

Figure 3-24. Memory Screens

3-8.6 Test Setups (if equipped)

Test Setups provide the capability to save the entire state of the analyzer in a preset. Fifteen additional presets numbered 30 through 44 are available for this purpose. When delivered from the factory, the analyzer is configured with default information in the Test Setups:

NOTE

Test setups are installed at either the factory or in the field using the Field Installation Software. To determine if test setups are available, examine the Standard Options display screen (refer to Special Function Selection paragraph 3-8.5)

TEST SETUP	LABEL	DESCRIPTION
30	Tx Test	"RF Control:" is set to MONITOR and "Display:" is set to SPECTRUM ANALYZER; other parameters are factory default.
31	Rx Test	"RF Control:" is set to GENERATE and "Meter:" is set to SINAD. "Fixed 1kHz:" is switched on with a 3.00 kHz deviation; other parameters are factory default.
32	Dpx Test	"RF Control:" is set to DUPLEX; other parameters are factory default.
33-44	Factory Default	All configuration parameters (except those saved in the standard presets) are set to the factory preset value, which is equivalent to the power-on state of the analyzer from the factory.

NOTE

The default Test Setup values are provided as a convenience and may be overridden at any time.

Each Test Setup also saves the cursor location for later recall. For example, if the analyzer is placed in the generate mode with the cursor on the tens digit of the Output Level and this Test Setup is saved, later recall of this preset will place the cursor back on the tens digit of the Output Level.

The Test Setups work in conjunction with the standard presets (labeled 00 through 29). Each standard preset stores the following information in the non-volatile memory:

- Monitor Frequency
- Monitor Modulation Type
- Generate Frequency

- Generate Modulation Type
- Bandwidth
- Duplex Offset
- Synthesizer Format Selection
- DTMF Code

The Test Setups store all other configuration information in non-volatile memory. This allows a Test Setup to be used for a set of frequencies and audio signals as defined in the separate standard presets.

Full Test Setups are accessed from either the preset cursor location or the MEMORY screen (figure 3-25). To create a test setup, modify the configuration of the analyzer to the test setup to be saved. Press the MEM hardkey to access the MEMORY screen and then move the cursor to one of the 15 Test Setup locations. Use the Save To Preset# softkey to save the analyzer configuration into the Test Setup.

A Test Setup can be recalled from the MEMORY screen using the Recall Preset# softkey or from the preset cursor location in the RF Control Zone.

describe that Test Setup. Characters not on the front panel keypad can be entered using the rotary knob.

Each Test Setup has a 15 character label in which alpha-numeric information can be entered to

MEMORY		Current Preset --			
<u>Mon Freq (MHz)</u>		<u>Mon Freq (MHz)</u>		<u>Test Setup</u>	
001	999.9999	151	999.9999	301	Tx Test
011	999.9999	161	999.9999	311	Rx Test
021	999.9999	171	999.9999	321	Dpx Test
031	999.9999	181	999.9999	331	Factory Default
041	999.9999	191	999.9999	341	Factory Default
051	999.9999	201	999.9999	351	Factory Default
061	999.9999	211	999.9999	361	Factory Default
071	999.9999	221	999.9999	371	Factory Default
081	999.9999	231	999.9999	381	Factory Default
091	999.9999	241	999.9999	391	Factory Default
101	999.9999	251	999.9999	401	Factory Default
111	999.9999	261	999.9999	411	Factory Default
121	999.9999	271	999.9999	421	Factory Default
131	999.9999	281	999.9999	431	Factory Default
141	999.9999	291	999.9999	441	Factory Default
Use F1 key for Local Control				REMOTE CONTROL	
save to preset#	recall preset#			view preset	return

Figure 3-25. Memory Screen with Full Test Setups Option

Section 4

APPLICATIONS

4-1 BASIC FM TRANSMITTER TESTING

This section of the manual contains information on typical test setups to perform some of the more common radio tests using R2600 Series Communications System Analyzers.

General Dynamics takes no responsibility for application accuracy, applicability, or safety. Always refer to your own transceiver's service manual for recommended test methods and specifications

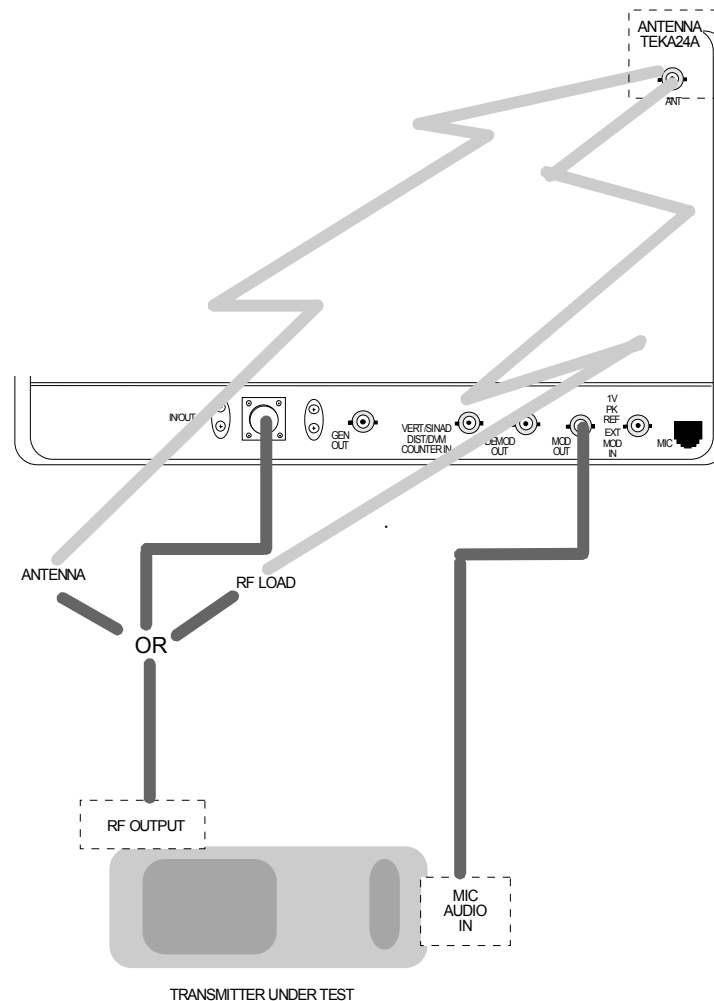


Figure 4-1. Basic FM Transmitter Testing Setup

4-1.1 Basic FM Transmitter Testing Setup

Refer to figure 4-1. Connect the analyzer's RF I/O port to the RF output of the transmitter under test. Connect the analyzer's MOD OUT jack to the mic audio input of the transmitter under test.


CAUTION

For transmit power output measurements, connect the transmitter under test only to the analyzer's RF I/O port. Do not connect it to the ANT port. The ANT port is used with an antenna for "off-air-" reception.


*The built-in RF load dissipates up to 50 W for three minutes and up to 125 W for one minute. If a high-power transmitter is keyed into the analyzer for a time long enough to threaten overheating the power measuring circuitry, the system's audible alarm sounds and the display changes to the **RF LOAD OVERTEMPERATURE** warning, signaling the operator to unkey (refer to paragraph 3-4).*

4-1.2 Transmit Power, Frequency, and Frequency Deviation Measurements

1. With the cursor located within the RF Control zone (refer to paragraph 3-2), press the **MON** softkey to place the analyzer into its Monitor mode of operation.

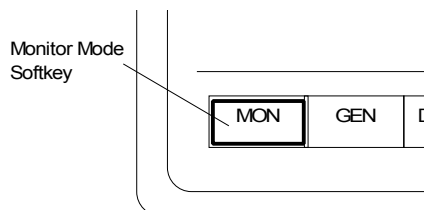


2. Within the RF Control zone, set as follows:

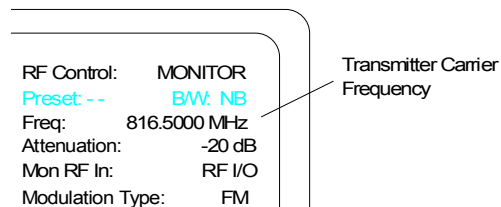


3. Set the SQUELCH control to threshold. For low-power transmitters, may be necessary to use a lower attenuation value in order to unsquelch the monitor (refer to paragraph 3-5.1). Too high of an attenuation setting or too tight a squelch setting inhibits the frequency error reading (refer to paragraph 3-7.1.1). Accurate measurements require sufficient signal level from the radio to fully quiet the analyzer's receiver. Use good quality cable of minimum length to prevent cable-loss which can be a significant factor in RF power measurements, especially at UHF and above.

- With the cursor located within the Display zone "Meter:" location, press the **RF DISPLAY** softkey:

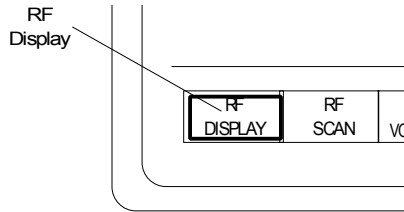

- Key the transmitter and read the power (Input Level) and frequency error (Freq Err). Refer to your radio's service manual to determine if power and frequency are within specified limits and determine if any adjustments are required.

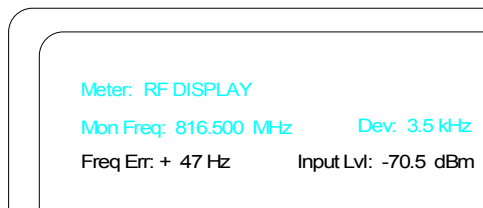


4-1.3 Modulation Measurements

- Key up the transmitter with appropriate PL (or DPL) enabled.

NOTE

If mic pickup results in deviation errors, install the internal 300 Hz lowpass filter as detailed in paragraph 3-8.5 before making the following measurements and verifications.

- When monitoring the PL (or DPL) deviation as follows, refer to your radio's service manual to determine if any adjustments are required.

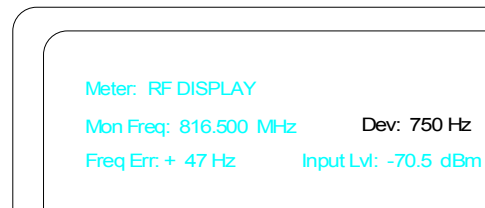

- Remove the internal 300 Hz lowpass filter if installed.

Introduce a 1 kHz audio modulating signal from the MOD OUT connector located on the front panel of the analyzer to your radio. Check your radio's service manual to determine the minimum audio signal level required for proper MIC sensitivity as well as the maximum level required to ensure proper IDC (Instantaneous Deviation Control) function.

NOTE

The voltage levels displayed in the Audio Control zone are peak open circuit voltages. Source impedance of the MOD OUT port is 100 ohms.


- Turn the 1kHz signal on, and set for minimum level as determined in step 3.

Audio Sum:	0.00 V pk
Fixed 1kHz:	0.40 V ~
Synth:	0.00 V x
Format Sel:	PL
FREQ:	131.8 Hz
DTMF:	0.00 V x
Code:	1234567890#ABCD
External:	0.00 V x

- Verify proper MIC sensitivity by reading the deviation. Refer to your radio's service manual to determine maximum rated system deviation to determine if any adjustments are required.

Meter: RF DISPLAY
Mon Freq: 816.500 MHz Dev: 3.5 kHz
Freq Err: + 47 Hz Input Lvl: -70.5 dBm

- Set the 1 kHz audio modulating signal for maximum level as determined in step 3. Repeat steps 4 and 5.
- To measure the percentage of distortion, locate the cursor within the Display Control zone, at the "meter:" field. Press the **INT DIST** softkey to measure percentage of distortion.

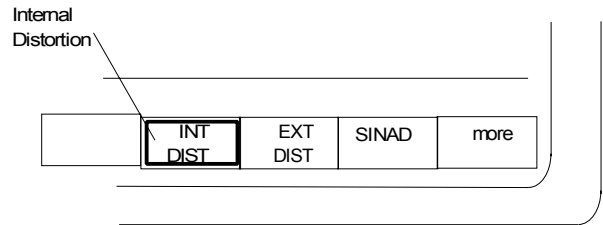


- Refer to the displayed digital readout and bar graph. Refer to your radio's service manual to determine if any adjustments are required.




4-1.4 Off-The-Air Measurements

1. Connect the supplied antenna to the analyzer's ANT port. Operate the transmitter under test either into its own antenna or into a dummy RF load.
2. With the cursor located within the RF Control zone, press the **MON** softkey to place the analyzer into its Monitor mode of operation.

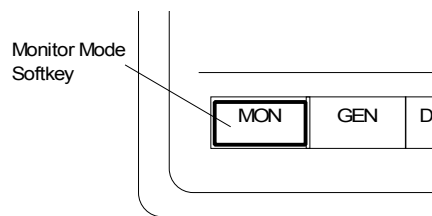

3. Set the SQUELCH control to threshold. Within the RF Control zone, set as follows:

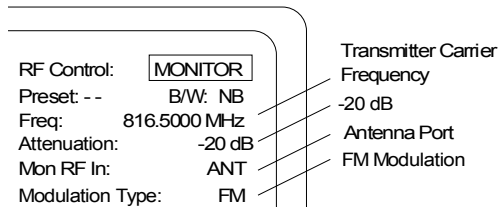

4. Check transmitter frequency and modulation as detailed in paragraphs 4-1.2 and 4-1.3.

NOTE

This method may be used to verify frequency and modulation of a remotely located transmitter by reducing the attenuation setting to fully realize the sensitivity of the analyzer "Off-The-Air" monitor function.

4-2 BASIC FM RECEIVER TESTING

This section of the manual contains information on typical test setups to perform some of the more common radio tests using the analyzer.

The analyzer's DVM input is unbalanced (ground referenced). Use an appropriate interface to measure balanced circuits, such as certain receiver audio outputs or telephone lines.

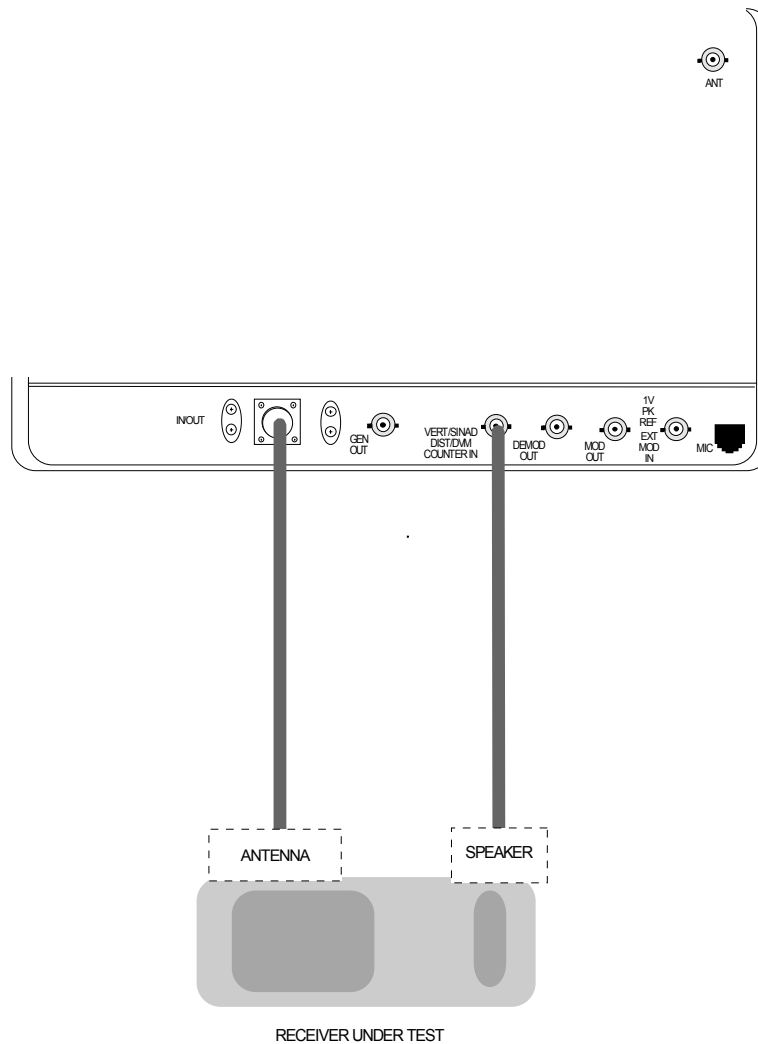


Figure 4-2. Basic FM Receiver Testing Setup


4-2.1 Basic FM Receiver Testing Setup

Refer to figure 4-2. Connect the analyzer's RF I/O port to the radio antenna connector. Connect the radio audio output to VERT/SINAD port of the analyzer.


CAUTION

With some radios, grounding the speaker leads will damage the audio circuitry. Use isolation techniques on these radios.

1. With the cursor located within the RF Control zone (refer to paragraph 3-2), press the **GEN** softkey to place the analyzer into its Generator mode of operation.

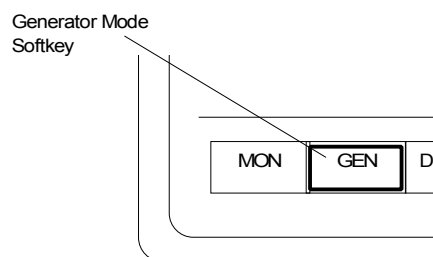


2. Within the RF Control zone, set as follows:

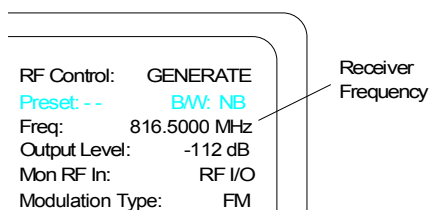


NOTE

For setup and distortion measurements, set output level to at least 30 dB above sensitivity threshold (-80 dBm recommended).


3. Within the Audio Control zone, set as follows:

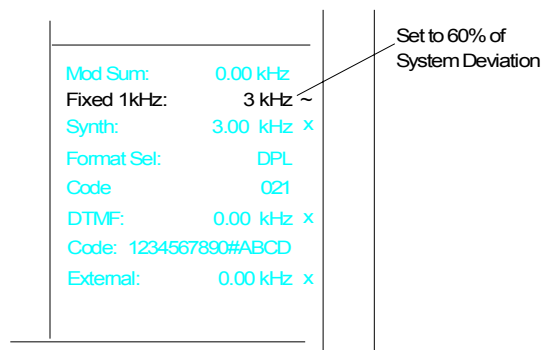


4. With the cursor located within the Display Control zone, press the **AC VOLTS** softkey to display the ac voltmeter:

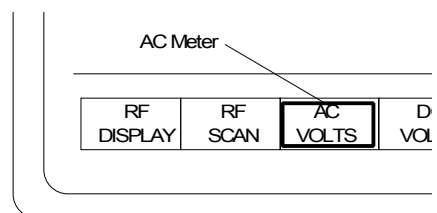


5. Adjust the radio for rated power output by computing voltage needed for rated power with load resistor/speaker in use, and setting the radio volume to produce required voltage.

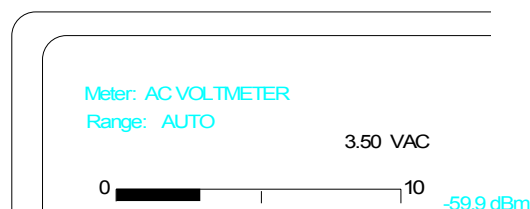


- With the cursor located within the Display Control zone (at Display:), press the **EXT SCOPE** softkey.

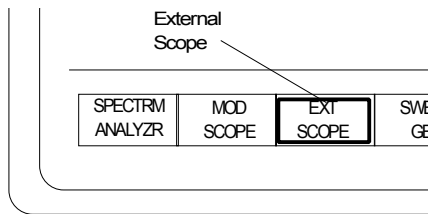

- Refer to the displayed digital readout and bar graph. Refer to your radio's service manual to determine if any adjustments are required.

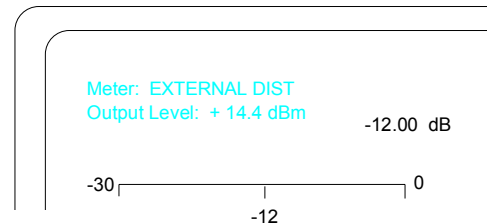


- Set scope vertical and horizontal deflection to observe sine wave from receiver audio.

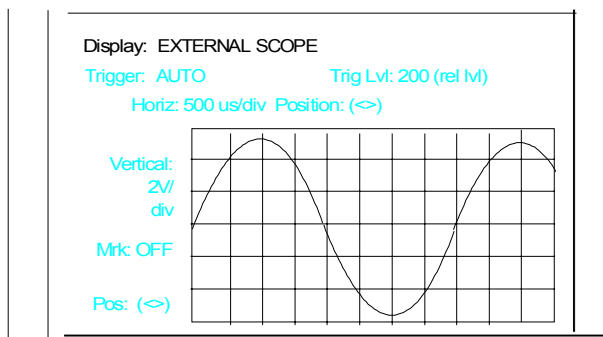


4-2.3 SINAD Measurement

- With the cursor located within the Display Control zone, press the **SINAD** softkey.

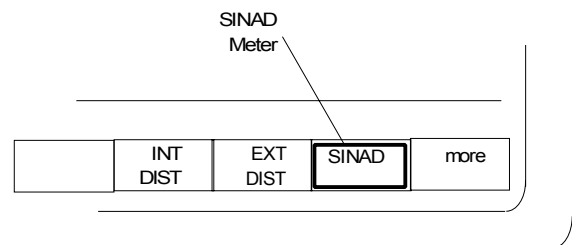


- Refer to the displayed digital readout and bar graph.

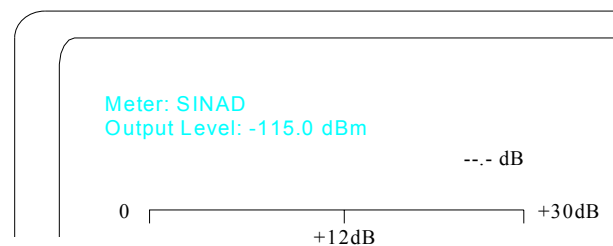


4-2.2 Receiver Distortion Measurement


- With the cursor located within the Display Control zone, press the **EXT DIST** softkey to measure percentage of distortion.

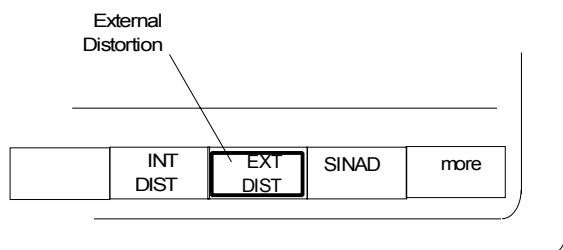

3. Within the RF Control zone, adjust the selected RF level until the SINAD reading on the SINAD meter averages 12 dB (instantaneous reading will vary several dB).

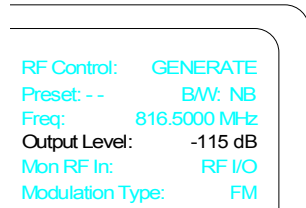

3. Increase the deviation level until the SINAD meter display returns to 12 dB.

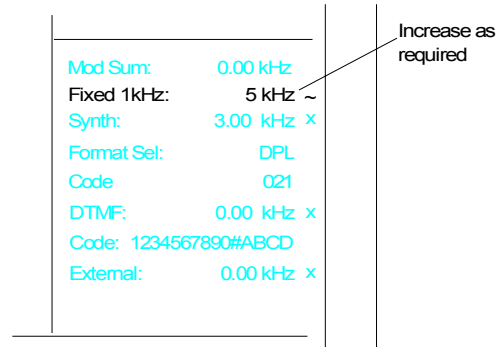



4. Note RF output level required for SINAD reading of 12 dB (-115 dBm typical dependent on manufacturers specifications).

NOTE


RF output level can be referenced to mV, uV, dBu, or dBm. Selection of units is available within the Display Control zone (Output Level:).

4-2.4 Modulation Acceptance Bandwidth

1. Set the volume control of the radio to 10% of its rated audio output level.
2. Set the RF output level 6 dB (doubles the voltage, i.e. 0.35 uV increased 6dB = 0.7 uV) above the RF output level required in paragraph 4-2.4 to achieve the SINAD reading of 12 dB.

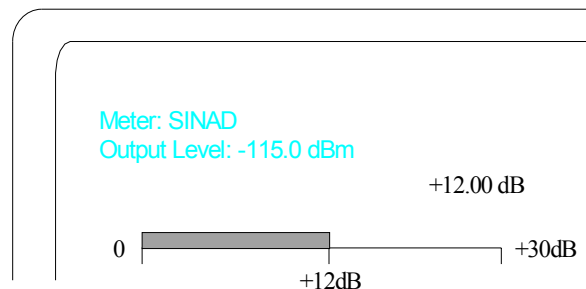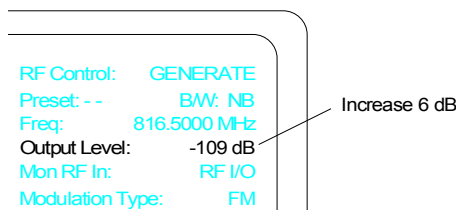


4. Read the deviation level required in step 3. A typical modulation acceptance bandwidth of a 5 kHz receiver is 7 to 8 kHz. Refer to your radio's service manual to determine if any adjustments are required.

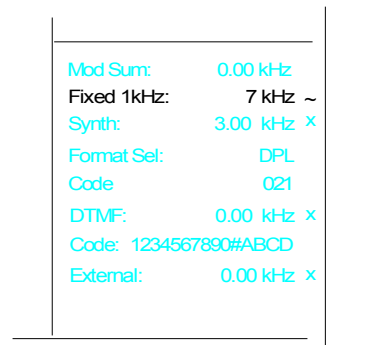


4-2.5 Receiver Sensitivity Testing (20 dB Quieting)


1. With the cursor located within the RF Control zone, press the **MON** softkey to remove input signal from the radio.

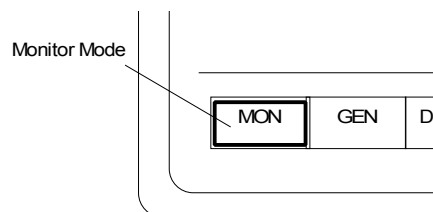


2. With the cursor located within the Display Control zone, press the **AC VOLTS** softkey to display the ac voltmeter:

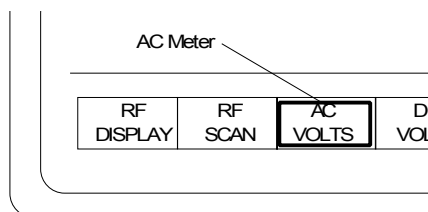


3. Turn on the receiver (unsquelled). Increase the receiver volume control to feed audio noise to the analyzer (at least 1/4 the rated audio power). Record the noise reading in dBm.

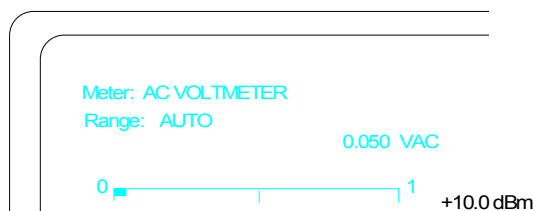


4. With the cursor within the RF Control zone, press the **GEN** softkey.

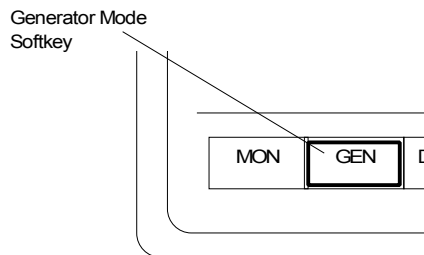

5. Within the Audio Control zone, set the modulation off.

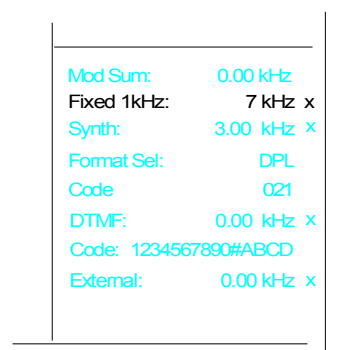

6. Within the RF Control zone, adjust the RF output level until the noise reading is less than 20 dB from the value recorded in step 3. Refer to your radio's service manual to determine if any adjustments are required.

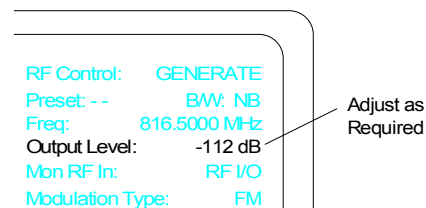


NOTE


To convert the RF output level to μV or dBV , locate the cursor within the Display Control zone and press the **RF DISPLAY** softkey. Locate the cursor to units used for Lvl: and select the required unit using the softkeys.

4-2.6 Squelch Sensitivity Test


1. With the cursor located within the RF Control zone, press the **MON** softkey.

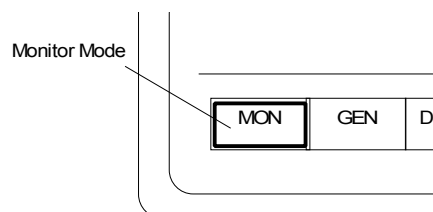


2. Disable the PL/DPL squelch if so equipped. Set the radio's squelch control to the point where the receiver barely quiets.
3. With the cursor located within the RF Control zone, press the **GEN** softkey.

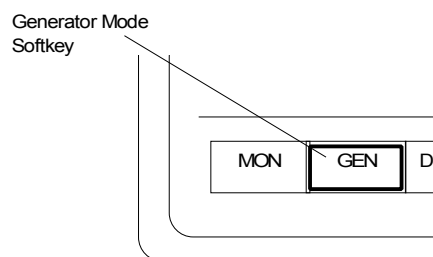

4. Within the Audio Control zone, set the modulation off.

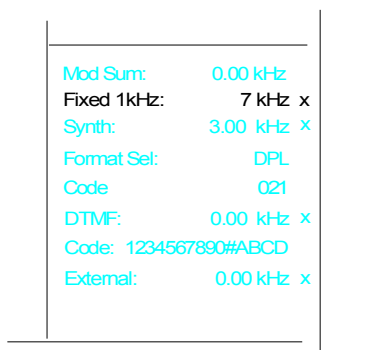

5. Within the RF Control zone, increase the RF output level until the receiver just unsquelches. This is the threshold squelch sensitivity of the radio.

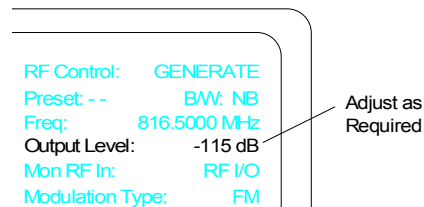

NOTE

*To convert the RF output level to μV or dBV , locate the cursor within the Display Control zone and press the **RF DISPLAY** softkey.*

6. Repeat step 5 with the radio's squelch level set to maximum tightness to determine the tight squelch sensitivity of the radio.

7. To check PL/DPL squelch sensitivity, locate the cursor within the Audio Control zone and enter the proper PL frequency or DPL code per Appendix B.

Audio Sum:	0.00 V pk
Fixed 1kHz:	0.00 V x
Synth:	0.00 V x
Format Sel:	PL
FREQ:	131.8 Hz
DTMF:	0.00 V x
Code:	1234567890#ABCD
External:	0.00 V x

or

Audio Sum:	0.00 V pk
Fixed 1kHz:	0.00 V x
Synth:	0.00 V x
Format Sel:	DPL
Code:	23
DTMF:	0.00 V x
Code:	1234567890#ABCD
External:	0.00 V x

8. With the cursor located within the Audio Control zone, turn on the modulation and set the analyzer synthesizer to provide a nominal 750 Hz (500 - 1 kHz) deviation or to the radio's manufacturer's specifications.

Mod Sum:	0.00 kHz
Fixed 1kHz:	5 kHz ~
Synth:	0.75 kHz ~
Format Sel:	DPL
Code:	021
DTMF:	0.00 kHz x
Code:	1234567890#ABCD
External:	0.00 kHz x

9. Enable the radio's PL/DPL squelch circuit. Fully open the carrier squelch control.
10. Within the RF Control zone, increase the RF output level until the receiver just unsquelches. This is the coded squelch sensitivity.

RF Control:	GENERATE
Preset: --	BW: NB
Freq:	816.5000 MHz
Output Level:	-115 dB
Mon RF In:	RF I/O
Modulation Type:	FM

Adjust as
Required

4-3 CABLE TESTING (if equipped)

4-3.1 Overview

The analyzer cable fault test system can be used to find the distance to a fault in a cable

under test such as an open or shorted connector, a damaged (pinched) area of the cable, etc.

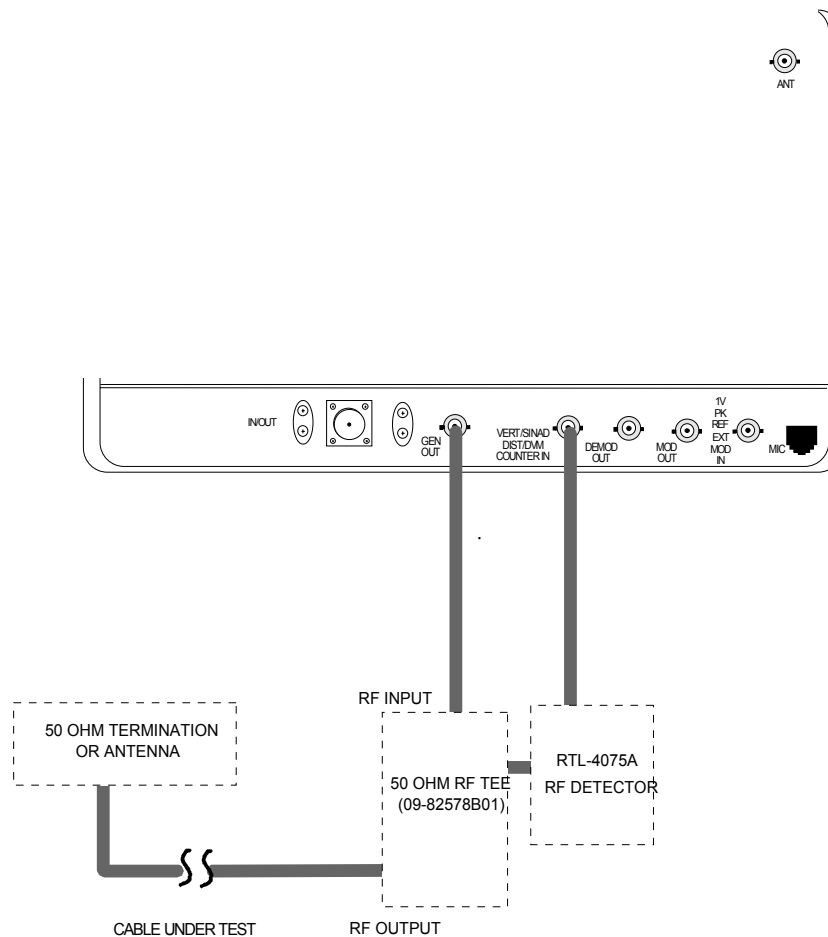



Figure 4-3. Basic Cable Testing Setup

4-3.2 Measuring Fault Distance


- To measure fault distance, terminate the free end of the cable with a 50 ohm load or the antenna
- To measure cable length, leave the free end of the cable open

Refer to figure 4-3. Connect the output of the RF Detector Probe (RTL-4075A) to the VERT/SINAD connection of the R2600 Analyzer. Attach a 50 ohm Tee (09-82578B01) to the GEN OUT/IN connection of the analyzer, and connect the RF input of the detector probe to the RF Tee. Connect the cable under test to the RF Tee.


1. With the cursor located within the Display Control zone, press the **more** softkey, then press the **CABLE FAULT** softkey.

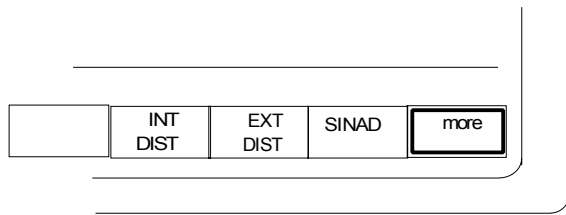


then

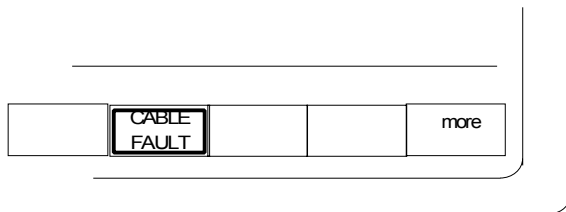

2. The sweep generator scope displays the standing wave pattern of the cable.

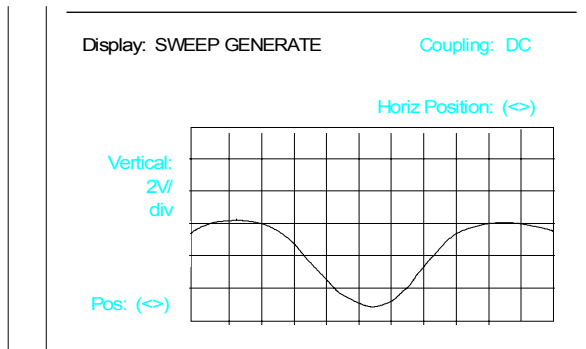

3. With the cursor located within the RF Control zone, set the range, output level and center frequency for the best display of the standing wave pattern.

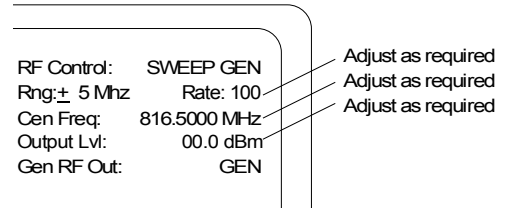

NOTE



This measurement generally works best with the range set between 10 and 100 MHz. When measuring fault distance, with an antenna attached to the cable, the first and second nul frequencies should be within the operating frequency range of the antenna.

4. Within the Display zone, enter the velocity constant of the cable as required in the "Vel Const: " field.



Polyethylene	0.66
Cellular Polyethylene	0.78
Semi-Solid Polyethylene	0.84

Meter: CABLE FAULT
Cen Freq: 816.5000 MHz Vel Const: 0.6600

- With the cursor located within the Display Control zone (Cen Freq:), use the tuning knob to center any null on the sweep generator scope.

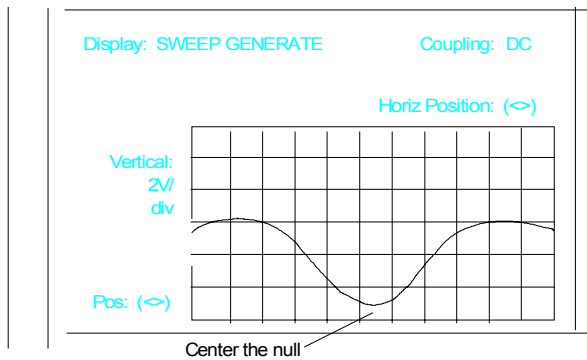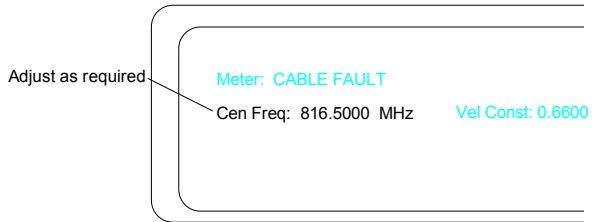



- With the cursor located within the Display Control zone (Cen Freq:), press the **FIRST NULL** softkey to display the frequency of the first null.

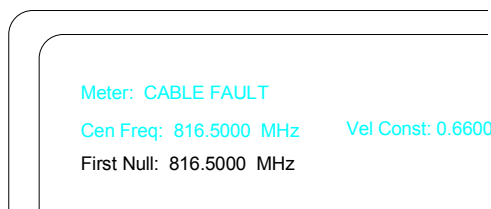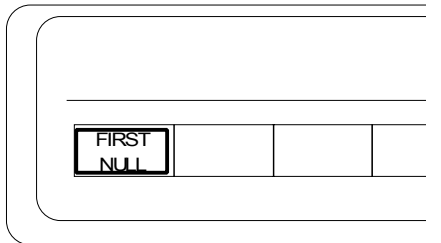

- With the cursor still located within the Display Control zone (Cen Freq:), use the

tuning knob to center an adjacent null to the same location on the sweep generator scope.

- Press the **SECOND NULL** softkey. The cable fault distance (or cable length) will be displayed.

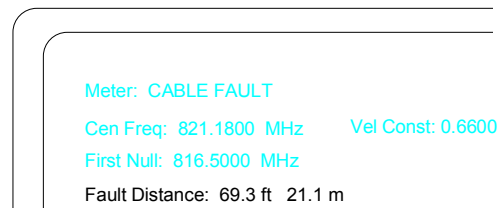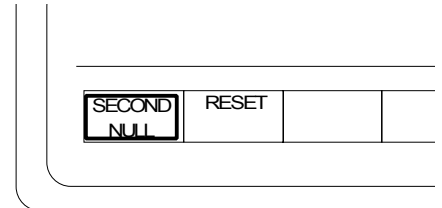

4-4 TONE REMOTE TESTING

The tone remote function allows the analyzer to generate the required function tones and timing for tone controlled equipment. Specific tones are sent to remote equipment via phone lines that are connected to remotes or control consoles. Base stations and repeaters are examples of equipment using tone control commands. For example, tone commands can command transmitters and receivers to change frequencies or disable PL. The analyzer can simulate the tones and appear to

the base station or repeater as a console or desk remote.

The most common use for the tone remote feature is commanding tone remote bases in order to measure all the main transmitter parameters. The main parameters would be power, frequency and system deviation. Without this capability, a technician must rely on personnel at the remote console or carry a tone remote to the base site. This can be impractical and time consuming.

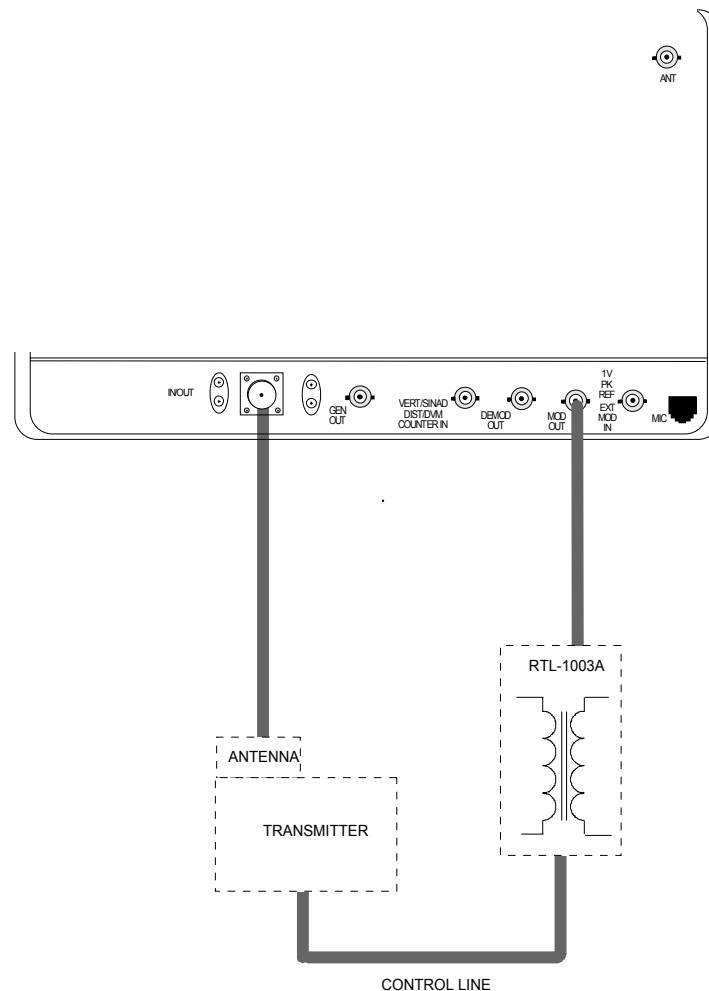



Figure 4-4. Tone Remote Testing Setup

4-4.1 Tone Remote Testing Setup

Refer to figure 4-4. Connect the analyzer RF I/O port to the radio antenna connector. Connect the phone lines, using a RTL-1003A matching transformer, to the analyzer's MOD OUT connector.

4-4.2 Checking for Proper Tone Remote Operation

- 1. With the cursor located within the RF Control zone, press the **MON** softkey to place the analyzer into its Monitor mode of operation.

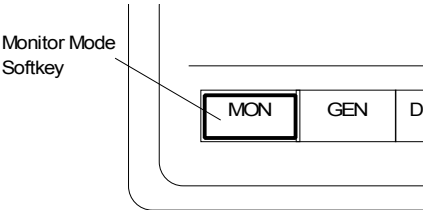

- 2. Tone Remote frequencies are programmed via the Tone A and Tone B memory. Set up the Audio Control zone, as follows:


Mod Sum:	78.0 kHz
Fixed 1kHz:	0.500 V ~
Synth:	0.500 V ~
Format Sel:	TONE A
Code	021
Freq:	02175.0 Hz
DTMF:	30.0 KHz x
Code:	-----
External:	0.000 V x

OR


Audio Sum:	0.--- V pk
Fixed 1kHz:	0.500 V ~
Synth:	0.500 V ~
Format Sel:	TONE B
Code	021
Freq:	01950.0 Hz
DTMF:	0.000 V x
Code:	-----
External:	0.000 V x

- Set the "Format Sel:" to **TONE RMT**. The base transmitter is activated when the SYNTH is turned on by pressing the **BURST** key. The level of the fixed 1 kHz tone and "Synth:" field will vary depending on the base specifications.

Audio Sum:	0.500 V pk
Fixed 1kHz:	0.500 V ~
Synth:	0.500 V ✱
Format Sel:	TONE RMT
DTMF:	0.000 V x
Code:	-----
External:	0.000 V x

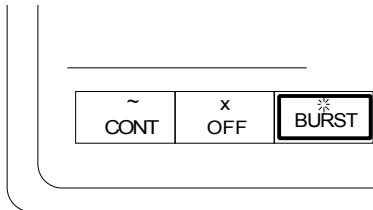

- With the cursor located within the Display zone ("Meter:" field), press the RF DISPLAY softkey. Monitor the base frequency, power and deviation.

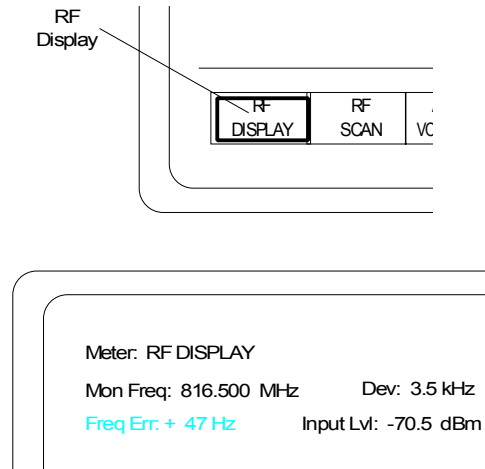

4-5 Analyzer Setup for Printing

The analyzer must use null modem cable to properly print with any serial printer. **Do not use a standard serial cable; it will not work!**

This is due to the fact that the RS-232 port also is used as a control port to remotely operate the analyzer in computer controlled applications. Different cables are required to activate each function.

To set up the port for printer operation press the **SPF** key. When in this screen, move the highlighted cursor to **RS232 SETUP** and press the softkey labeled **display table**. This table gives you the ability to configure the RS-232 output from the analyzer. Move the cursor to each field and choose the appropriate softkey entry to match the printer setup.

This Page Intentionally Left Blank

Appendix A

LIST OF ABBREVIATIONS

A	Ampere	EEA	Electronic Engineering Association
AC	Alternating Current	EIA	Electronics Industry Association
AM	Amplitude Modulation	Ext'l	External
ATTEN	Attenuation	FM	Frequency Modulation
AUTO	Automatic	FREQ	Frequency
BATT	Battery	GEN	Generate
BNC	Coaxial RF Connector	GHz	Gigahertz
BW	Bandwidth	Horiz	Horizontal
C	Celsius	HPF	High Pass Filter
CAL	Calibrate	Hz	Hertz
CCIR	International Radio Consultative Committee	IC	Integrated Circuit
Cm	Centimeters	IDC	Instantaneous Deviation Control
CMOS	Complementary Metal Oxide Semiconductor	IEEE	Institute of Electrical and Electronics Engineers
Cntr	Counter	IF	Intermediate Frequency
CRLF	Carriage-return-line feed	IMTS	Improved Mobile Telephone System
CW	Continuous Wave	I/O	Input/Output
dB	Decibel	Kohm	Kiloohm
dBc	Decibel (referred to carrier)	kHz	Kilohertz
dBm	Decibel (referred to 1mW into 50 ohms)	LCD	Liquid Crystal Display
DC	Direct Current	LED	Light-Emitting Diode
Demod	Demodulation	LPF	Low Pass Filter
DEV	Deviation	Lvl	Level
Disp	Dispersion	MHz	Megahertz
DIST	Distortion	MIC	Microphone
Div	Division	MIN	Minimum
DPL	Digital Private Line, a Motorola registered trademark	MOD	Modulation
DTMF	Dual-tone multi-frequency	MON	Monitor
Dur	Duration	us	Microsecond
DVM	Digital Voltmeter	ms	Millisecond

LIST OF ABBREVIATIONS-CONTINUED

MSEC	Millisecond	SSB	Single Sideband
Mtr	Metering	STD	Standard
MTS	Mobile Telephone System	SW	Switch
MV	Millivolts	SWP	Sweep
uV	Microvolts	Synth	Synthesizer
mW	Milliwatt	TN	Tone
n	Number	Trig	Trigger
N/A	Not Applicable	TX	Transmitter
NB	Narrow Bandwidth	UHF	Ultra High Frequency
NVM	Non-volatile memory	V	Volts
ORIG	Originated	VAC	Volts Alternating Current
PCT	Percent	VDC	Volts Direct Current
PL	Private Line, a Motorola registered trademark	Vert	Vertical
+/-	Plus or minus	VRMS	Volts (root-mean-square)
PRT	Print	W	Watts
RF	Radio Frequency	WB	Wide Bandwidth
RMS	Root-Mean-Square	XCVR	Transceiver
Rng	Range	XX	(Select Any Valid Number)
RS	Receiver Specification	ZVEI	Zentral-Verband der Elektro-Industrie (a German Electronics Industry Association)
SEC	Second		
SEQ	Sequence		
SINAD	Ratio of (Signal + Noise + Distortion)/(Noise + Distortion)		
SPF	Special Function		

Appendix B

TONE AND CODE SPECIFICATIONS

Table B-1. Standard DTMF Tones

Tone Group	Standard Dtmf (Hz)
LOW	697
LOW	770
LOW	852
LOW	941
HIGH	1209
HIGH	1336
HIGH	1477
HIGH	1633

Table B-2. DTMF Frequency Coding*

Key	Low Group Tone (Hz)				High Group Tone (Hz)			
	697	770	852	941	1209	1336	1447	1633
1	•				•			
2	•					•		
3	•						•	
A	•							•
4		•			•			
5		•				•		
6		•					•	
B		•						•
7			•		•			
8			•			•		
9			•				•	
C			•					•
*				•	•			
O				•		•		
#				•			•	
D				•				•

*The analyzer has provisions for encoding and decoding 16 different keys. Each key is assigned two frequencies: one from a low-tone group and one from a high-tone group. Four tones are available from each group, with 16 different combinations of low and high group tones. This table shows the tone assignments of each key.

Table B-3. Private-Line (PL) Codes

Code	Frequency (Hz)
XZ	67.0
WZ	69.3
XA	71.9
WA	74.4
XB	77.0
WB	79.7
YZ	82.5
YA	85.4
YB	88.5
ZZ	91.5
ZA	94.8
ZB	97.0
1Z	100.0
1A	103.5
1B	107.2
2Z	110.9
2A	114.8
2B	118.8
3Z	123.0
3A	127.3
3B	131.8
4Z	136.5
4A	141.3
4B	146.2
5Z	151.4
5A	156.7
5B	162.2
6Z	167.9
6A	173.8
6B	179.9
7Z	186.2
7A	192.8
M1	203.5

Table B-3. Private-Line (PL) Codes (cont)

Code	Frequency (Hz)
8Z	206.5
M2	210.7
M3	218.1
M4	225.7
9Z	229.1
M5	233.6
M6	241.8
M7	250.3

Table B-4. 5/6 Tone Paging Tones

Digit	Frequency
0	600
1	741
2	882
3	1023
4	1164
5	1305
6	1446
7	1587
8	1728
9	1869
R	459
X	2010

Table B-5. DPL Standard Codes

023	174	445
025	205	464
026	223	465
031	226	466
032	243	503
043	244	506
047	245	516
051	251	532
054	261	546
065	263	565
071	265	606
072	271	612
073	306	624
114	311	627
115	315	631
116	331	632
125	343	654
131	351	662
132	364	664
134	365	703
143	371	712
152	411	723
155	412	731
156	413	732
162	423	734
165	431	743
172	432	

Table B-6. Select V Frequencies

Character	ZVEI Std (Hz)	ZVEI Mod (Hz)	ZVEI French (Hz)	CCIR Std (Hz)	CCIR 70ms (Hz)	EEAA (Hz)
0	2400	2200	2400	1981	1981	1981
1	1060	970	1060	1124	1124	1124
2	1160	1060	1160	1197	1197	1197
3	1270	1160	1270	1275	1275	1275
4	1400	1270	1400	1358	1358	1358
5	1530	1400	1530	1446	1446	1446
6	1670	1530	1670	1540	1540	1540
7	1830	1670	1830	1640	1640	1640
8	2000	1830	2000	1747	1747	1747
9	2200	2000	2200	1860	1860	1860
G	2800	885	885	2400	2400	1055
B	810	810	810	930	930	930
C	970	2600	2600	2247	2247	2247
D	885	2800	2800	991	991	991
F	930	930	930	873	873	873
R	2600	2400	970	2110	2110	2110
N _T Tone	0	0	0	0	0	0
Length (msec)	70	70	70	100	70	40

This Page Intentionally Left Blank

Appendix C

SAFE HANDLING OF CMOS INTEGRATED CIRCUIT DEVICES

Many of the integrated circuit devices used in communications equipment are of the CMOS (Complementary Metal Oxide Semiconductor) type. Because of their high open circuit impedance, CMOS ICs are vulnerable to damage from static charges. Care must be taken in handling, shipping, and servicing them and the assemblies in which they are used.

Even though protection devices are provided in CMOS IC inputs, the protection is effective only against overvoltage in the hundreds of volts range such as are encountered in an operating system. In a system, circuit elements distribute static charges and load the CMOS circuits, decreasing the chance of damage. However, CMOS circuits can be damaged by improper handling of the modules even in a system.

To avoid damage to circuits, observe the following handling, shipping, and servicing precautions.

1. Prior to and while servicing a circuit module, particularly after moving within the service area, momentarily touch both hands to a bare metal earth grounded surface. This will discharge any static charge which may have accumulated on the person doing the servicing.

NOTE

Wearing Conductive Wrist Strap will minimize static buildup during servicing.

WARNING

When wearing Conductive Wrist Strap, be careful near sources of high voltage. The good ground provided by the wrist strap will also increase the danger of lethal shock from accidentally touching high voltage sources.

2. Whenever possible, avoid touching any electrically conductive parts of the circuit module with your hands.
3. Normally, circuit modules can be inserted or removed with power applied to the unit. However, check the INSTALLATION and MAINTENANCE sections of the manual as well as the module schematic diagram to insure there are no objections to this practice.
4. When servicing a circuit module, avoid carpeted areas, dry environments, and certain types of clothing (silk, nylon, etc.) because they contribute to static buildup.
5. All electrically powered test equipment should be grounded. Apply the ground lead from the test equipment to the circuit module before connecting the test probe. Similarly, disconnect the test probe prior to removing the ground lead.
6. If a circuit module is removed from the system, it is desirable to lay it on a conductive surface (such as a sheet of aluminum foil) which is connected to ground through 100k of resistance.

WARNING

If the aluminum foil is connected directly to ground, be cautious of possible electrical shock from contacting the foil at the same time as other electrical circuits.

7. When soldering, be sure the soldering iron is grounded.
1. Prior to connecting jumpers, replacing circuit components, or touching CMOS

pins (if this becomes necessary in the replacement of an integrated circuit device), be sure to discharge any static buildup as described in procedure 1. Since voltage differences can exist across the human body, it is recommended that only one hand be used if it is necessary to touch pins on the CMOS device and associated board wiring.

Appendix D


EXTERNAL PORT PIN ASSIGNMENTS

RS-232 PORT

This is a full bidirectional RS-232 port with the capability to respond to a serial input. The port serves a dual purpose in that if an RS-232 is not desired, the port can be used as a printer output. Software determines if the port functions as an RS-232 bidirectional port or as an output-only printer port. 25 pin female "D" connector on Processor Module for RS-232 interface at the side panel. Drawing shows pins as seen from a side view of the Analyzer.

PIN

1	GND
2	TXD (transmit data)
3	RXD (receive data)
4	RTS (request to send)
5	CTS (clear to send)
6	DSR (data set ready)
7	SIG GND (signal ground)
8	DCD* (data carrier detect)
9-19	not used
20	DTR* (data terminal ready)
21	not used
22	RI (Ring Indicator)
23-25	not used

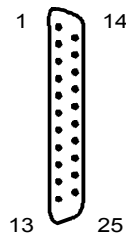

DCD* (Data Carrier Detect) input is not used in this application.

DSR* (Data Set Ready) is a general purpose input that is used for modem control. This line is not used when a printer is connected.

DTR* (Data Terminal Ready) is a general purpose output to indicate the Analyzer is ready to receive more data on the RXD line.

RTS* and CTS* (Request-To-Send, Clear-To-Send) are handshaking signals used in RS232 communications.

RXD (Receive Data) input signal is the data received. If this connector is used as a printer output, the RXD pin is not used.

TXD (Transmit Data) output signal is the data being transmitted.

NOTE

For printer use, pins 5 and 20 of this port should be tied together inside the cable to the printer. 30-80387B58 printer cable provides the required interface.

REAR PANEL DC INPUT PORT

Drawing shows pins as seen from a rear view of the Analyzer.

Positive DC voltage must be between +11 and +18VDC.

Either "+" pin may be used for the positive DC voltage since these two pins are tied together internally.

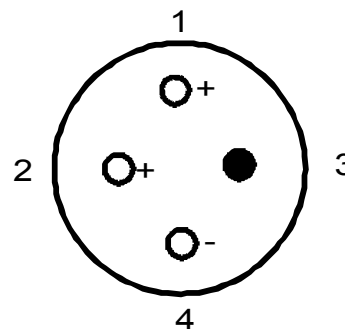


Figure D-1. Rear Panel DC Input Port
