


XTS2500 Series

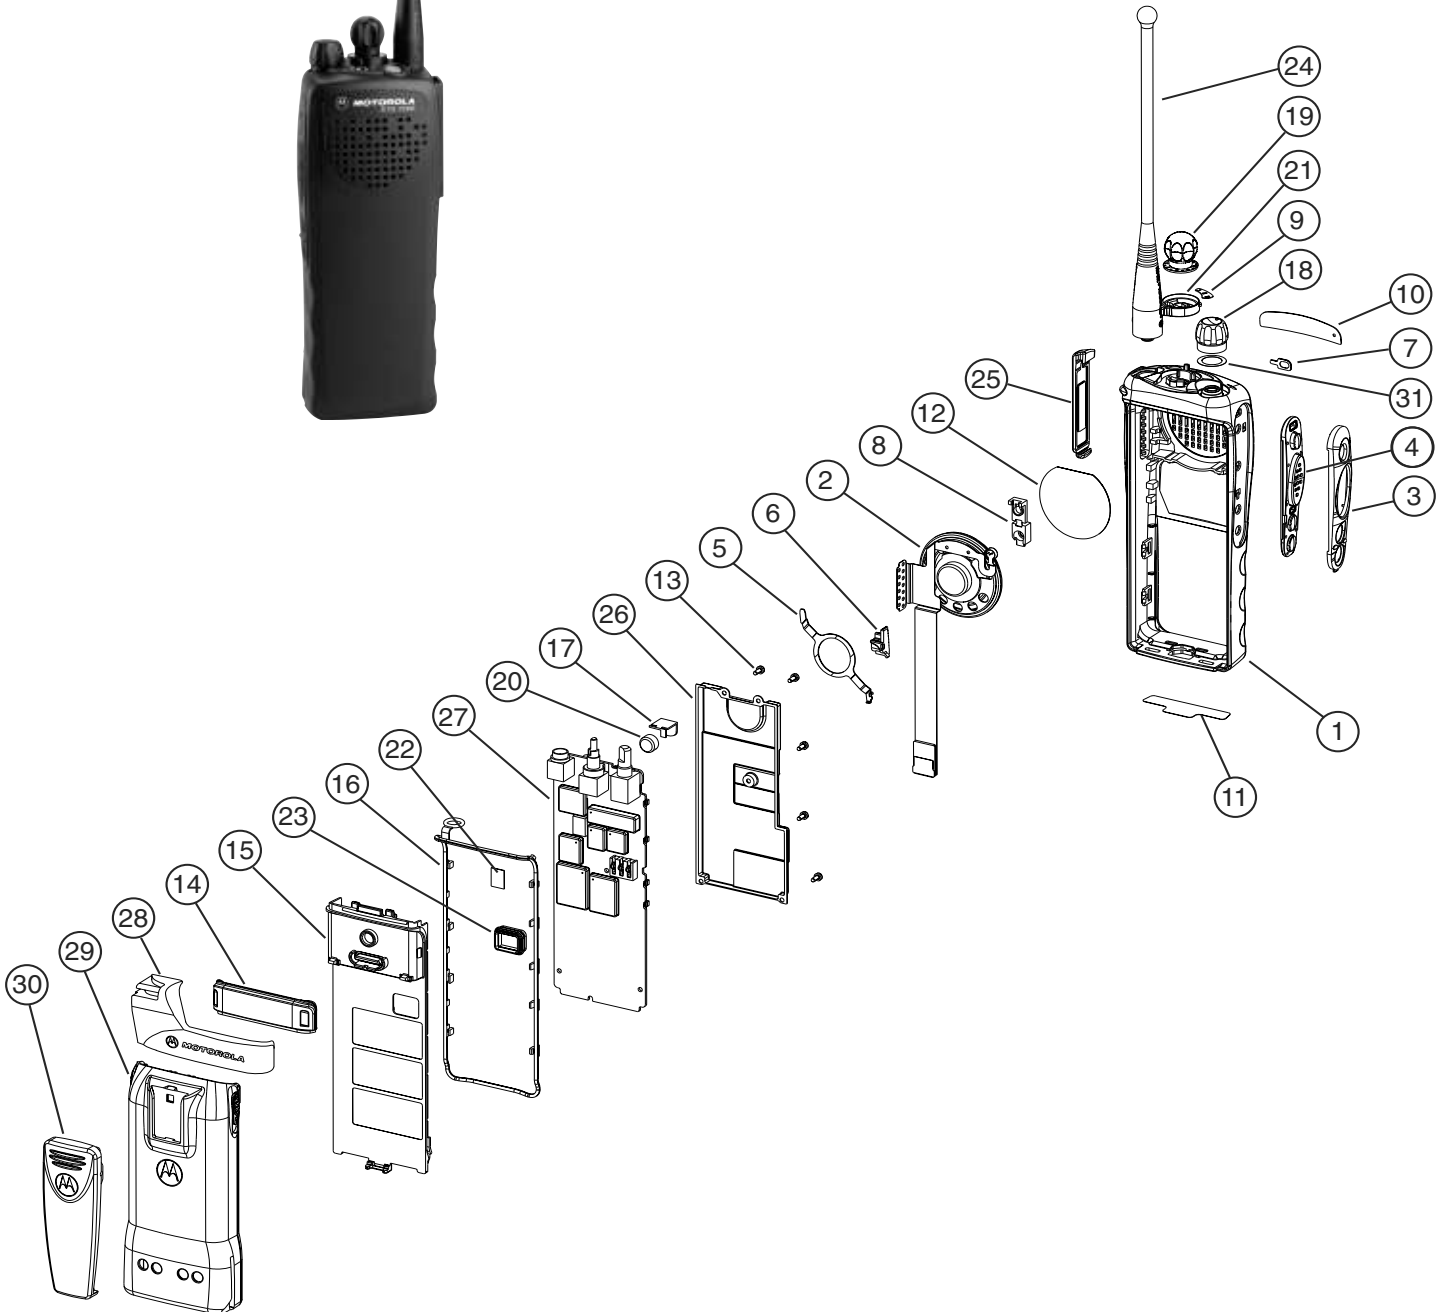

Parts List



XTS2500 Series

Parts List


Model I

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	1585746D01	Cover, Front Assembly Kit	17	4285633D01	Retaining Clip
2	8485939D01	Assembly, Speaker/Microphone/Universal Connector Flex	18	3680529Z01	Knob, Volume
3	1385149D01	Bezel, PTT	19	3685779C01	Knob, Frequency (W/ D- Clip)
4	1385149D01	Keypad, PTT/ Side Controls	20	6003710K08	Battery, Backup
5	4285446D01	Retainer, Speaker	21	4585782C01	Lever, Concentric Switch
6	4285632D01	Retainer, Microphone Boot	22	7585382D01	Pad, Thermal
7	3585469D01	Microphone Felt	23	3280534Z01	Seal, Contact
8	1485218D01	Boot, Microphone	24	---	Antenna (see antenna page)
9	1385855C01	Label, ABC	25	1505579Z01	Dust Cover, Universal Conn.
10	3385466D01	Nameplate, Front	26	2685785C01	Main Shield
11	3385511D01	Label, Bottom	27	---	RF Board
12	3585339D01	Speaker Mesh	28	4385665D01	Adaptor, Remote Speaker Mic.
13	0385563D01	Screw	29	---	Battery (see battery page)
14	1585405D01	Shroud	30	HLN6853A	Belt Clip 2-1/4"
15	2785889D01	Chassis Cover, Rear		HLN9844A	Belt Clip 2"
16	3285270D01	Seal, Main O- ring	31	0485667D01	Washer, Teflon

XTS2500 Series



Parts List

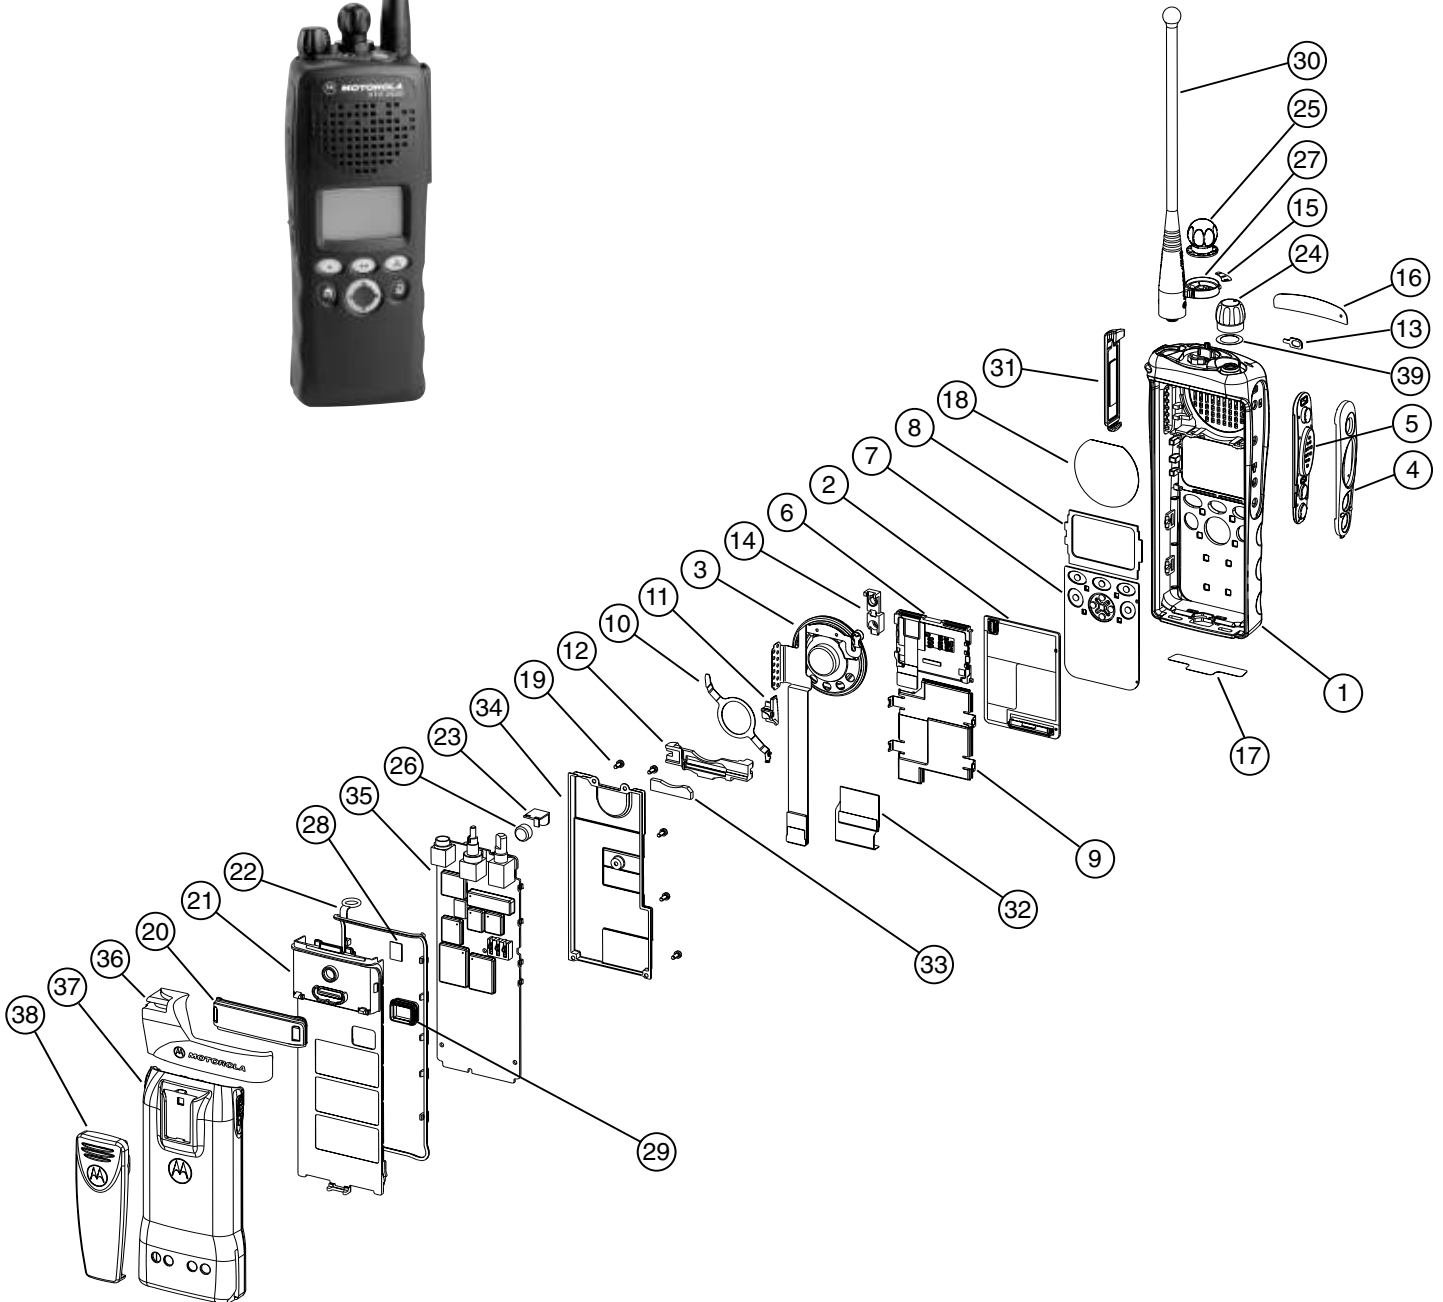

XTS2500 Series

Parts List


Model II

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	1585746D02	Cover, Front Assembly Kit	21	2785787C01	Chassis Cover, Rear
2	0185947D01	Board, Model II	22	3285270D01	Seal, Main O- ring
3	8485939D01	Assembly, Speaker/Microphone/Universal Connector Flex	23	4285633D01	Retaining Clip
4	1385149D01	Bezel, PTT	24	3680529Z01	Knob, Volume
5	7585959C01	Keypad, PTT/ Side Controls	25	3685779C01	Knob, Frequency (W/ D- Clip)
6	7285726C01	Display Module	26	6003710K08	Battery, Backup
7	7585776C02	Keypad, Limited	27	4585782C01	Lever, Concentric Switch
8	7585915C01	Pad, Shock LCD	28	7585382D01	Pad, Thermal
9	4285214D01	Retainer, Keypad	29	3280534Z01	Seal, Contact
10	4285446D01	Retainer, Speaker	30	---	Antenna (see antenna page)
11	4285632D01	Retainer, Microphone Boot	31	1505579Z01	Dust Cover, Universal Conn.
12	4385717D01	Spacer, Plastic	32	8485268D01	Board, Jumper Flex
13	3585469D01	Microphone Felt	33	7585737D01	Spacer Pad
14	1485218D01	Boot, Microphone	34	2685785C01	Main Shield
15	1385855C01	Label, ABC	35	---	RF Board
16	3385466D01	Nameplate, Front	36	4385665D01	Adaptor, Remote Speaker Mic.
17	3385511D01	Label, Bottom	37	---	Battery (see battery page)
18	3585339D01	Speaker Mesh	38	HLN6853A	Belt Clip 2-1/4"
19	0385563D01	Screw		HLN9844A	Belt Clip 2"
20	1585405D01	Shroud	39	0485667D01	Washer, Teflon

XTS2500 Series



Parts List

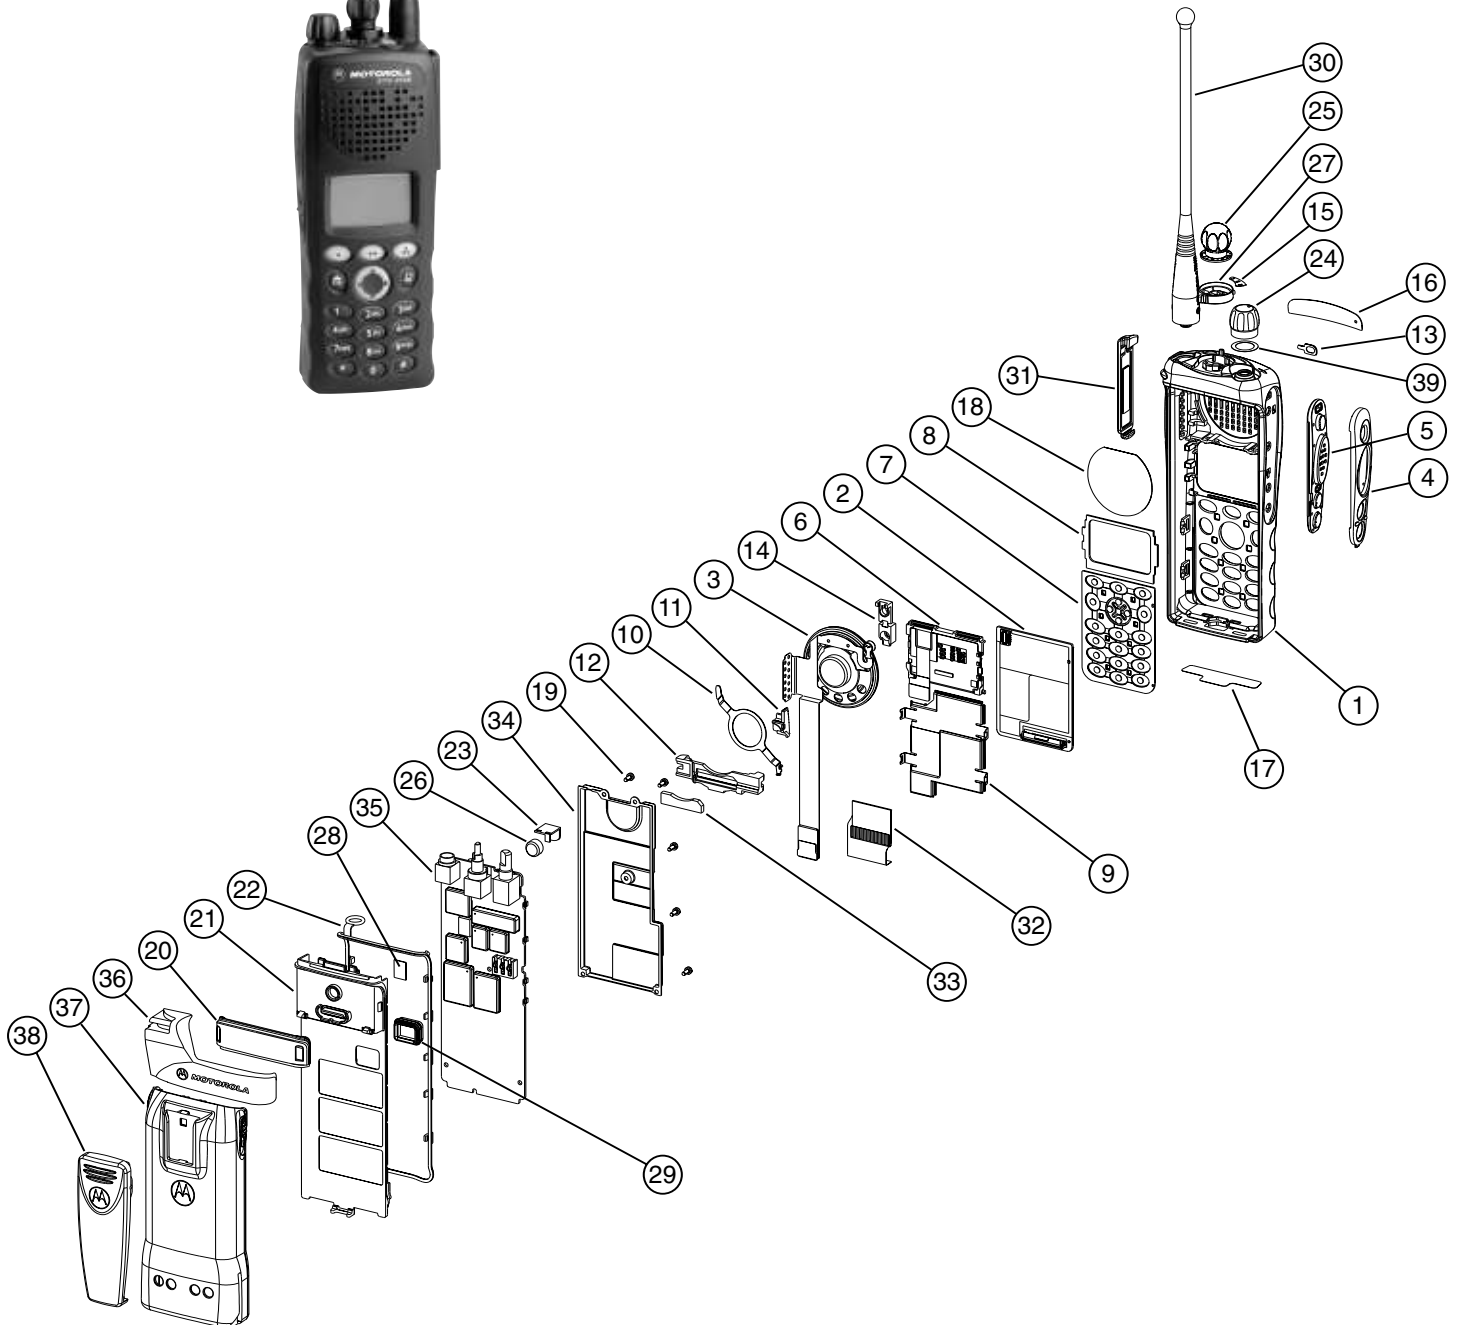

XTS2500 Series

Parts List

Model III

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	1585746D03	Cover, Front Assembly Kit	21	2785889D01	Chassis Cover, Rear
2	0185948D01	Keypad Board, Model III	22	3285270D01	Seal, Main O- ring
3	8485939D01	Assembly, Speaker/Microphone/Universal Connector Flex	23	4285633D01	Retaining Clip
4	1385149D01	Bezel, PTT	24	3680529Z01	Knob, Volume
5	7585959C01	Keypad, PTT/ Side Controls	25	3685779C01	Knob, Frequency (W/ D- Clip)
6	7285726C01	Display Module	26	6003710K08	Battery, Backup
7	7585776C01	Keypad, Full	27	4585782C01	Lever, Concentric Switch
8	7585915C01	Pad, Shock LCD	28	7585382D01	Pad, Thermal
9	4285214D01	Retainer, Keypad	29	3280534Z01	Seal, Contact
10	4285446D01	Retainer, Speaker	30	---	Antenna (see antenna page)
11	4285632D01	Retainer, Microphone Boot	31	1505579Z01	Dust Cover, Universal Conn.
12	4385717D01	Spacer, Plastic	32	8485268D01	Board, Jumper Flex
13	3585469D01	Microphone Felt	33	7585737D01	Spacer Pad
14	1485218D01	Boot, Microphone	34	2685785C01	Main Shield
15	1385855C01	Label, ABC	35	---	RF Board
16	3385466D01	Nameplate, Front	36	4385665D01	Adaptor, Remote Speaker Mic.
17	3385511D01	Label, Bottom	37	---	Battery (see battery page)
18	3585339D01	Speaker Mesh	38	HLN6853A	Belt Clip 2-1/4"
19	0385563D01	Screw		HLN9844A	Belt Clip 2"
20	1585405D01	Shroud	39	0485667D01	Washer, Teflon