## **UHF Base Station Cutting Instructions**

Pick your frequency from the bottom of chart and draw a straight line to top of chart.

Measure and cut each section L1, L2, L3 to the length in <u>millimeters</u> listed on left hand side of graph that corresponds to the intersecting line drawn from the bottom to top of chart.

## Example:

If you wanted to use the antenna at 450Mhz

Cut section L1 - 435mm.

Cut section L2 - 325mm.

Cut section L3 - 374mm.

**NOTE: Important** before cutting antenna notice order sections are listed in on **BF406 Cutting Chart.** 

L3 length is between L1 & L2