

# **PYRAMID<sup>®</sup>**

## **Gold Series**

**REGULATED DC  
POWER SUPPLY**

**MODEL: PS-46KX**

---

### **INSTRUCTION MANUAL**

---

GENERAL SPECIFICATION	.....PAGE 2.
SCHEMATIC DIAGRAM	.....PAGE 3.
OPERATION MANUAL & CAUTION	.....PAGE 4.

# GENERAL SPECIFICATIONS.

MODEL NO:PS-46KX

## ELECTRICAL:

(A-1) INPUT RATING.

INPUT VOLTAGE: 105VAC-125VAC. (115VAC NORMAL).

INPUT LINE FREQUENCY: 60 Hz.

(A-2) OUTPUT RATING.

OUTPUT VOLTAGE: 13.8VDC $\pm$ 0.3VDC

OUTPUT CURRENT 40 AMP CONSTANT /42 AMP SURGE

OUTPUT RIPPLE 150mV RMS

(A-3) REGULATION

LOAD REGULATION: 2.5% (280mV).

(NOTE: INPUT AT 115VAC AND OUTPUT AT 40 AMP).

(A-4) PROTECTION.

INPUT LINE: GLASS TUBE FUSE 8A/250VAC.

OVER-LOAD PROTECTION: +10 - 15% (AUTO RESET)

OVER-TEMPERATURE PROTECTION.

COOLING FAN BUILT-IN.

(A-5) EFFICIENCY 60% MIN. (INPUT AT 115VAC AND OUTPUT AT 13.8VDC 40AMP)

(A-6) DESIGN LINER TYPE.

(A-7) OPERATING TEMPERATURE: 0 TO +40 DEG C.

(A-8) STORAGE TEMPERATURE: -25 TO +70 DEG C.

## MECHANICAL:

(B-1) DIMENSIONS 315mmx335mmx135mm (LxWxH)

(B-2) WEIGHT 11.9KGS


(B-3) ENCLOSURE: BLACK

(B-4) INPUT POWER CABLE: SJT 6FT 16 AWG x 3CW

(B-5) OUTPUT TERMINAL BINDING POST, RED & BLK, 25AMP.

(B-6) POWER SWITCH: ILLUMINATED TYPE, 20A/125VAC.

PS-46KX BASIC CIRCUIT DIAGRAM

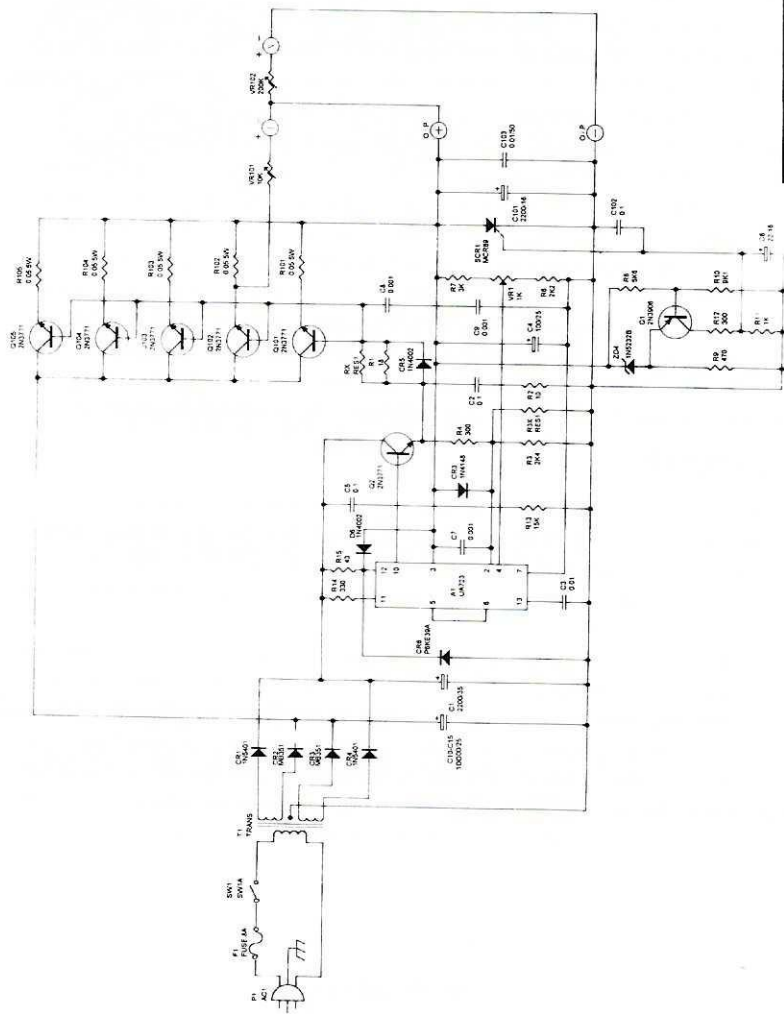

## OPERATIONS:

1. INSERT AC POWER PLUG INTO A 110V VOLT AC OUTLET.
2. CONNECT THE POWER CORD OF YOUR EQUIPMENT 13.8VDC TO THE OUTPUT BINDING POST TERMINALS ON THE FRONT OF THE UNIT. BE SURE THAT POLARITY IS CORRECT. THE RED POSITIVE(+) TERMINAL AND BLACK NEGATIVE(-) TERMINAL ARE MARKED. REVERSAL OF POLARITY MAY DAMAGE YOUR EQUIPMENT
3. TURN SWITCH TO "ON" RED LIGHT IN SWITCH WILL BE ILLUMINATED.
4. THE INPUT POWER IS PROTECTED BY THE FUSE WHICH IS LOCATED AT THE REAR OF THE UNIT AND CAN BE REPLACED BY UNSCREWING THE FUSE HOLDER IF THE FUSE IS BURNT OUT. DO NOT USE A FUSE LARGER THAN 8 AMP. USE OF HEAVIER FUSE MAY RESULT IN DAMAGING TO THIS UNIT.
5. THIS UNIT HAS ELECTRONIC OVERLOAD PROTECTION WITH INSTANT AUTOMATIC RESET FUNCTION. IF OUTPUT IS OVERLOADED. THE OUTPUT POWER WILL AUTOMATICALLY SHUT OFF. RELEASE POWER CORD OF YOUR EQUIPMENT FROM THE OUTPUT TERMINALS AND CHECK THE ACTUAL POWER RATING OF YOUR EQUIPMENT. THIS UNIT WILL AUTOMATICALLY RESET INSTANTLY.

## CAUTIONS:

1. DO NOT USE WITH EQUIPMENT REQUIRING MORE THAN RATING AMPS.
2. DO NOT USE OUT DOORS. DO NOT EXPOSE UNIT TO RAIN. MOISTURE. WATER OR ANY OTHER LIQUIDS.
3. DO NOT REMOVE COVER IN ANY CASE. RETURN TO DEALER FOR REPAIR IF DAMAGED.
4. THIS UNIT HAS A SPECIAL BUILT-IN FEATURE THAT WILL SHUT THE UNIT DOWN IF MARKED AMPERAGE IS EXCEEDED. THIS WILL AVOID BURN-OUT OF YOUR EQUIPMENT AND OF UNIT. IF UNIT DOES CONSISTENTLY SHUTDOWN. THIS MEANS YOU ARE DRAWING TOO MUCH AMPERAGE. RETURN UNIT TO PLACE OF PURCHASE AND UPGRADE TO NEXT AVAILABLE UNIT OFFERING HIGHER AMPERAGE. PLEASE DO NOT BYPASS OR ALTER THIS CIRCUIT AS IT IS THERE TO PROTECT YOU. ANY ALTERATION OR MISURE WILL VOID YOUR WARRANTY.

**"DANGER"**  
**HIGH VOLTAGE**  
REFER TO QUALIFIED TECHNICIAN FOR SERVICE.